 
 
 











MOTOMANUAL

motorola **SLVR L7**

      
 
GSM 850/900/1800/1900 MHz
USER MANUAL





WELCOME

Introducing your new motorola **SLVR L7** GSM wireless phone. Here's a quick anatomy lesson.

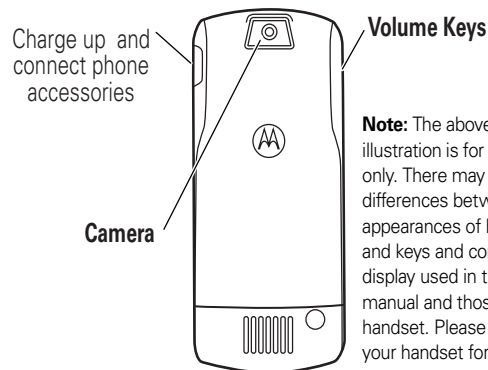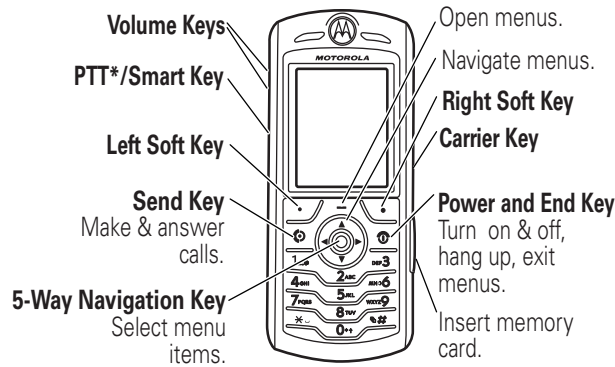

Note: The above illustration is for reference only. There may be slight differences between the appearances of handset and keys and contents of display used in this manual and those of your handset. Please refer to your handset for actuality.

* Push-to-Talk is a network or subscription- dependent feature. For more details, please refer to page 61.



Mobile Devices Business
(852)2506-3888 (Hong Kong)
www.motorola.com.hk (Hong Kong)

 
 


MOTOROLA and the Stylized M Logo are registered in the US Patent & Trademark Office. The Bluetooth trademarks are owned by their proprietor and used by Motorola, Inc. under license. Java and all other Java-based marks are trademarks or registered trademarks of Sun Microsystems, Inc. in the U.S. and other countries. All other product or service names are the property of their respective owners.



© Motorola, Inc. 2005.

Software Copyright Notice

The Motorola products described in this manual may include copyrighted Motorola and third-party software stored in semiconductor memories or other media. Laws in the United States and other countries preserve for Motorola and third-party software providers certain exclusive rights for copyrighted software, such as the exclusive rights to distribute or reproduce the copyrighted software. Accordingly, any copyrighted software contained in the Motorola products may not be modified, reverse-engineered, distributed, or reproduced in any manner to the extent allowed by law. Furthermore, the purchase of the Motorola products shall not be deemed to grant either directly or by implication, estoppel, or otherwise, any license under the copyrights, patents, or patent applications of Motorola or any third-party software provider, except for the normal, non-exclusive, royalty-free license to use that arises by operation of law in the sale of a product.





While Products specifications and features may be subject to change without notice, we are making every possible effort to ensure that user manuals are updated on a regular basis to reflect product functionality revisions. However, in the unlikely event that your manual version does not fully reflect the core functionality of your product, please let us know. You may also be able to access up-to-date versions of our manuals from our Motorola web site, at <http://www.motorola.com.hk>.

  



Certain mobile phone features are dependent on the capabilities and settings of your service provider's network. Additionally, certain features may not be activated by your service provider, and/or the provider's network settings may limit the feature's functionality. Always contact your service provider about feature availability and functionality. All features, functionality, and other product specifications, as well as the information contained in this user's guide are based upon the latest available information and are believed to be accurate at the time of printing. Motorola reserves the right to change or modify any information or specifications without notice or obligation.

  Manual Number: 6887370Z31







Contents




Feature Locator	6	Codes & Passwords	49
Safety Information	8	Lock & Unlock Phone	50
EU Conformance	15	Customize	51
Recycling Information	16	Ring Style	51
Essentials	17	Time & Date	52
About This Guide.	17	Wallpaper	52
SIM Card	17	Screen Saver.	53
Battery.	19	Display Appearance	53
Turn It On & Off.	21	Answer Options	54
Make a Call	21	Calls	55
Answer a Call	22	Turn Off a Call Alert.	55
Your Phone Number	22	Recent Calls	55
Main Attractions	23	Redial	56
Take & Send a Photo.	23	Return a Call	57
Record Video.	25	Notepad	57
Audio Player	26	Hold or Mute a Call.	57
Digital Audio Player	28	Call Waiting.	58
Cable Connections	30	Caller ID	58
Memory Card	30	Emergency Calls	58
Bluetooth® Wireless.	33	International Calls	59
Basics	38	1-Touch Dial.	59
Display.	38	Voicemail.	60
Menus.	42	Push-to-Talk (PTT)	61
Create SMS.	44	Other Features	66
Volume	48	Advanced Calling.	66
Navigation Key.	49	Phonebook	68
Hands-free Speaker.	49	Messages	72


 
 




 Personalising 75
 Call Times & Costs . . . 77
 Handsfree 78
 Data & Fax Calls 80
 Network 81
 Personal Organizer . . . 81
 Security 82
 Fun & Games 83
 MyMobileSoft.com . . . 86
SAR Data 88
Index 90



   Note: The functions available on this handset may vary in different regions and nations. Please contact your local customer service centres, agencies or retailers if you have any question about the handset functions. Motorola reserves all rights to revise and change this user's manual without obligation to notify any person of such revisions or changes.



Feature Locator

Main Menu

Phonebook

Recent Calls

- Received Calls
- Dialed Calls
- Notepad
- Call Times
- Call Cost *
- Data Times *
- Data Volumes *

Messages

- New Message
- Message Inbox
- Outbox
- Drafts
- MMS Templates
- Quick Notes
- Browser Msgs *
- Info Services *
- Voicemail *
- Email Msgs *

Tools

- SIM Applications *
- Calculator
- Datebook
- Shortcuts
- Alarm Clock
- Dialling services
 - Fixed Dial
 - Quick Dial
 - Voice Dial

Games & Apps

WebAccess

- Browser
- Web Shortcuts
- Stored Pages
- History
- Go To URL
- Browser Setup
- Web Sessions

Multimedia

- Pictures
- Sounds
- Camera
- Videos
- Video Camera

Bluetooth Link

- Hands-free
- Device history
- Setup








Settings







- (see next page)

* Indicates network or subscription-dependent features

The above gives an example of typical structure of main menu. Please refer to your handset for the actual structure. You can reorder the main menu according to your needs.

Settings Menu

-  **Personalise**
 - Home screen
 - Main Menu
 - Skin
 - Greeting
 - Wallpaper
 - Screen Saver
-  **Ring Styles**
 - Style
 - Style Detail
-  **Connectivity**
 - Bluetooth Link
 - Sync
 - USB Settings
-  **Call Divert ***
 - Voice Calls
 - Fax Calls
 - Data Calls
 - Cancel All
 - Divert Status
-  **In-Call Setup**
 - In-Call Timer
 - My Caller ID
 - Answer Options
 - Call Waiting
 - Call Cost *
-  **Initial Setup**
 - Time and Date
 - 1-Touch Dial
 - Display Timeout
 - Backlight
 - Scroll
 - Language
 - Brightness
 - DTMF
 - Master Reset
 - Master Clear
-  **Phone Status**
 - My Tel. Numbers
 - Active Line *
 - Battery Meter
 - Storage devices
 - Software Update *

-  **Headset**
 - Auto Answer
 - Voice Dial
-  **Car Settings**
 - Auto Answer
 - Auto Handsfree
 - Power-off Delay
 - Charger Time
-  **Network**
 - New Network
 - Network Setup
 - Available Networks
 - My Network List *
 - Service Tone
 - Call Drop Tone
-  **Security**
 - Phone Lock
 - Lock Keypad
 - Lock Application
 - Fixed Dial
 - Call Barring *
 - SIM PIN
 - New Passwords
 - Certificate Mgmt *
-  **PTT Settings**
 - PTT Service
-  **Java Settings**
 - Java App Loader
 - Java System
 - Delete All Apps
 - App Vibration
 - App Volume
 - App Backlight

* Indicates network or subscription-dependent feature



Safety and General Information

 


IMPORTANT INFORMATION ON SAFE AND EFFICIENT OPERATION. READ THIS INFORMATION BEFORE USING YOUR PHONE.¹


Exposure To Radio Frequency (RF) Energy

Your phone contains a transmitter and a receiver. When it is ON, it receives and transmits RF energy. When you communicate with your phone, the system handling your call controls the power level at which your phone transmits.

Your Motorola phone is designed to comply with local regulatory requirements in your country concerning exposure of human beings to RF energy.



Operational Precautions

 

To assure optimal phone performance and make sure human exposure to RF energy is within the guidelines set forth in the relevant standards, always adhere to the following instructions.

 
 
External Antenna Care

If your phone has an external antenna, use only the supplied or Motorola-approved replacement antenna. Unauthorized antennas, modifications, or attachments could damage the phone and/or may result in non-compliance with local regulatory requirements in your country.

Do NOT hold the external antenna when the phone is IN USE. Holding the external antenna affects call quality and may cause the phone to operate at a higher power level than needed.

Phone Operation

When placing or receiving a phone call, hold your phone as you would a wireline phone.





Body-Worn Operation: Voice Communication

To maintain compliance with RF energy exposure guidelines, if you wear a phone on your body when transmitting voice communications, always place the phone in a Motorola-supplied or approved clip, holder, holster, case, or body harness for this phone, if available. Use of accessories not approved by Motorola may exceed RF energy exposure guidelines.

If you do not use one of the body-worn accessories approved or supplied by Motorola, and are not using the phone held in the normal use position, ensure the phone and its antenna are at least 2.5 centimeters (1 inch) from your body when transmitting.

Data Operation

When using any data feature of the phone, with or without an accessory cable, position the phone and its antenna at least 2.5 centimeters (1 inch) from your body.

 
 
 
 
Approved Accessories

Use of accessories not approved by Motorola, including but not limited to batteries, antennas, and convertible covers, may cause your phone to exceed RF energy exposure guidelines. For a list of approved Motorola accessories, visit our website at www.motorola.com.

RF Energy Interference/Compatibility

Note: Nearly every electronic device is susceptible to RF energy interference from external sources if inadequately shielded, designed, or otherwise configured for RF energy compatibility. In some circumstances your phone may cause interference.

Note: This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.





Facilities

Turn off your phone in any facility where posted notices instruct you to do so. These facilities may include hospitals or health care facilities that may be using equipment that is sensitive to external RF energy.

Aircraft

Turn off your wireless device whenever instructed to do so by airline staff. If your device offers a flight mode or similar feature, consult airline staff about use in flight. If your device offers a feature that automatically turns on the phone, then turn off this feature before boarding an airplane or entering an area where the use of wireless devices is restricted.

 
 
Medical Devices

Pacemakers

Pacemaker manufacturers recommend that a minimum separation of 15 centimeters (6 inches) be maintained between a handheld wireless phone and a pacemaker.

Persons with pacemakers should:

- ALWAYS keep the phone more than 15 centimeters (6 inches) from your pacemaker when the phone is turned ON.
- NOT carry the phone in the breast pocket.
- Use the ear opposite the pacemaker to minimize the potential for interference.
- Turn OFF the phone immediately if you have any reason to suspect that interference is taking place.






Hearing Aids

Some digital wireless phones may interfere with some hearing aids. In the event of such interference, you may want to consult your hearing aid manufacturer to discuss alternatives.



   10 Safety Information





Other Medical Devices

 
 
If you use any other personal medical device, consult the manufacturer of your device to determine if it is adequately shielded from RF energy. Your physician may be able to assist you in obtaining this information.

Use While Driving

Check the laws and regulations on the use of phones in the area where you drive. Always obey them.

When using your phone while driving, please:

- Give full attention to driving and to the road. Using a phone may be distracting in certain circumstances. Discontinue a call if you can't concentrate on driving.
- Use handsfree operation, if available.
- Pull off the road and park before making or answering a call if driving conditions so require.



Responsible driving best practices can be found in the "Wireless Phone Safety Tips" at the end of this guide and/or at the Motorola website: www.motorola.com/callsmart.

 
 
 
Operational Warnings

For Vehicles With an Air Bag

Do not place a phone in the area over an air bag or in the air bag deployment area. Air bags inflate with great force. If a phone is placed in the air bag deployment area and the air bag inflates, the phone may be propelled with great force and cause serious injury to occupants of the vehicle.

Gas or Petrol Stations

Obey all posted signs with respect to the use of radio equipment in gas or petrol stations. Turn off your wireless device if instructed by authorized staff.





Potentially Explosive Atmospheres

Turn off your phone prior to entering any area with a potentially explosive atmosphere. Do not remove, install, or charge batteries in such areas. Sparks in a potentially explosive atmosphere can cause an explosion or fire resulting in bodily injury or even death.

Note: The areas with potentially explosive atmospheres referred to above include fueling areas such as below decks on boats, fuel or chemical transfer or storage facilities, areas where the air contains chemicals or particles, such as grain, dust, or metal powders. Areas with potentially explosive atmospheres are often but not always posted.

Blasting Caps and Areas

To avoid possible interference with blasting operations, turn OFF your phone when you are near electrical blasting caps, in a blasting area, or in areas posted "Turn off electronic devices." Obey all signs and instructions.

Damaged Products

 
 
 
If your phone or battery has been submerged in water, punctured, or subjected to a severe fall, do not use it until you take it to a Motorola Authorized Service centre to determine if it has been damaged. Do not attempt to dry it with an external heat source, such as a microwave oven.






Batteries and Chargers

Batteries can cause property damage and/or bodily injury such as burns if a conductive material such as jewelry, keys, or beaded chains touch exposed terminals. The conductive material may complete an electrical circuit (short circuit) and become hot. Take care when handling a charged battery, particularly when placing it inside a pocket, purse, or other container with metal objects. **Use only Motorola Original™ batteries and chargers.**

Caution: To avoid risk of personal injury, do not dispose of your battery in a fire.

Your battery, charger, or phone may contain symbols, defined as follows:



Symbol	Definition
	Important safety information will follow.
	Your battery or phone should not be disposed of in a fire.
	Your battery or phone may require recycling in accordance with local laws. Contact your local regulatory authorities for more information.
	Your battery or phone should not be thrown in the trash.
	Your phone contains an internal lithium ion battery.

Choking Hazards

Your phone or its accessories may include detachable parts, which may present a choking hazard to small children. Keep your phone and its accessories away from small children.

Seizures/Blackouts

Some people may be susceptible to epileptic seizures or blackouts when exposed to flashing lights, such as when watching television or playing video games. These seizures or blackouts may occur even if a person never had a previous seizure or blackout.

If you have experienced seizures or blackouts, or if you have a family history of such occurrences, please consult with your doctor before playing video games on your phone or enabling a flashing-lights feature on your phone. (The flashing-light feature is not available on all products.)

Parents should monitor their children's use of video game or other features that incorporate flashing lights on the phones. All persons should discontinue use and consult a doctor if any of the following symptoms



occur: convulsion, eye or muscle twitching, loss of awareness, involuntary movements, or disorientation.

To limit the likelihood of such symptoms, please take the following safety precautions:

 
- Do not play or use a flashing-lights feature if you are tired or need sleep.
- Take a minimum of a 15-minute break hourly.
- Play in a room in which all lights are on.
- Play at the farthest distance possible from the screen.

Repetitive Motion Injuries

When you repetitively perform actions such as pressing keys or entering finger-written characters, you may experience occasional discomfort in your hands, arms, shoulders, neck, or other parts of your body. Follow these instructions to avoid problems such as tendonitis, carpal tunnel syndrome, or other musculoskeletal disorders:

- Take a minimum 15-minute break every hour of game playing.
- If your hands, wrists, or arms become tired or sore while playing, stop and rest for several hours before playing again.
- If you continue to have sore hands, wrists, or arms during or after play, stop playing and see a doctor.

1. The information provided in this document supersedes the general safety information in user's guides published prior to January 28, 2005.








European Union Directives Conformance Statement


Hereby, Motorola declares that this product is in compliance with

  - The essential requirements and other relevant provisions of Directive 1999/5/EC
- All other relevant EU Directives

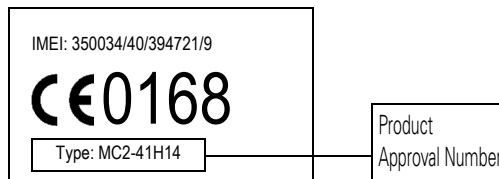

The above gives an example of a typical Product Approval Number.

 You can view your product's Declaration of Conformity (DoC) to Directive 1999/5/EC (the R&TTE Directive) at www.motorola.com/rtte - to find your DoC, enter the product Approval Number from your product's label in the "Search" bar on the Web site






Caring for the Environment by Recycling





When you see this symbol on a Motorola product, do not dispose the product with household waste.

 Recycling Mobile Phones and Accessories



Do not dispose of mobile phones or electrical accessories, such as chargers or headsets, with your household waste. In some countries or regions, collection systems are set up to handle electrical and electronic waste items. Contact your regional authorities for more details. If collection systems aren't available, return unwanted mobile phones or electrical accessories to any Motorola Approved Service Centre in your region.

  





Essentials

About This Guide

This guide shows how to locate a menu feature as follows:

Find it: Press  > **Recent Calls** > **Dialled Calls**

 This example shows that, from the home screen, you press  to open the menu, highlight and select  **Recent Calls**, then highlight and select **Dialled Calls**.

Press  to scroll to and highlight a menu feature. Press the *centre key*  to select the highlighted menu feature.

Symbols



This means a feature is network/subscription dependent and may not be available in all areas. Contact your service provider for more information.



This means a feature requires an optional accessory.

SIM Card


Your *Subscriber Identity Module* (SIM) card contains personal information like your phone number and phonebook entries.

To insert and use a memory card, see page 30.




Caution: Don't bend or scratch your SIM card. Keep it away from static electricity, water, and dirt.


1

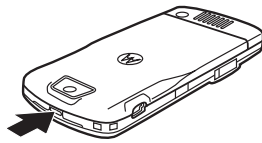


2

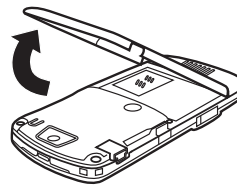






3

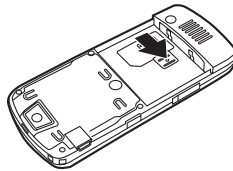

4

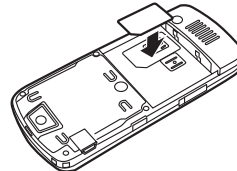

5

    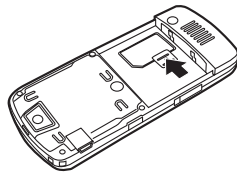





Battery

Battery Installation


1

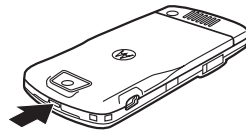




2

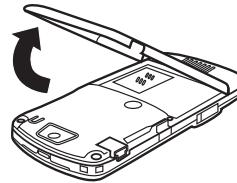

3

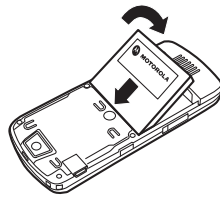

4

  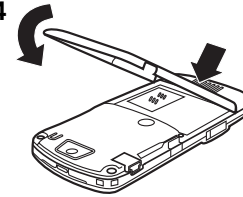


Battery Charging

New batteries are not fully charged. Plug the travel charger into your phone and an electrical outlet. Your phone display shows **Charge Complete** when finished.



 Tip: Relax, you can't overcharge your phone battery. It will perform best after you fully charge and discharge it a few times.






You can charge your phone battery by connecting a cable from your phone's mini-USB port to a USB port on a computer. Both your phone and the computer must be turned on, and your computer must have the correct software drivers installed. Cables and software drivers are available in Motorola Original data kits, sold separately.






If your phone battery is completely drained, a PC USB charger will not charge it. Use the travel charger.

Battery Tips

 Battery life depends on the network, signal strength, temperature, features, and accessories you use.



- Always use Motorola Original batteries and chargers. The warranty does not cover damage caused by non-Motorola batteries and/or chargers.
- New batteries or batteries stored for a long time may take more time to charge.
- When charging your battery, keep it near room temperature.
- When storing your battery, keep it uncharged in a cool, dark, dry place, such as a refrigerator.
- Never expose batteries to temperatures below -10°C (14°F) or above 45°C (113°F). Always take your phone with you when you leave your vehicle.
- It is normal for batteries to gradually wear down and require longer charging times. If you notice a change in

   

your battery life, it is probably time to purchase a new battery.




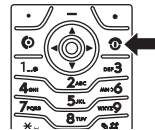
Contact your local recycling centre for proper battery disposal.

Warning: Never dispose batteries in a fire because they may explode.


Before using your phone, read the battery safety information in the "Safety and General Information" section included in this guide.

Turn It On & Off


To turn on your phone, press and hold  for a few seconds or until the display turns on. If prompted, enter your 4-digit unlock code.




Caution: If you enter an incorrect PIN code 3 times in a row, your SIM card is disabled and your display shows **SIM Blocked**. Contact your service provider.

To turn off your phone, press and hold  for 2 seconds.

Make a Call

Enter a phone number and press  to make a call.

To "hang up," press .

To maintain high audio quality during calls, please note the location of the phone's







microphone (as indicated by the arrow) and keep this area free of obstruction while in use.






Answer a Call



When your phone rings and/or vibrates, just press  to answer.

 
 
 
To “hang up,” press .

Your Phone Number

From the home screen, press   to see your number.

Tip: Want to see your phone number while you’re on a call? Press  > **My Tel. Numbers**.

You can edit the name and phone number stored on your SIM card. From the home screen, press  , select an entry, and press **View** > **Edit**. If you don’t know your phone number, contact your service provider.




Main Attractions

You can do much more with your phone than make and receive calls!

Take & Send a Photo

Press **[Menu]** > **Multimedia** > **Camera** to see the camera viewfinder:

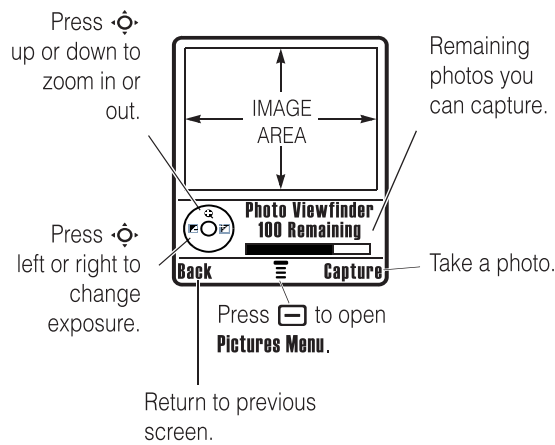


Note: The number of pictures remaining is only an estimate.


1 Point the camera lens at the photo subject.


You can press **[Menu]** to open the **Pictures Menu**. See the table after this procedure.





2 Press the centre key  or **Capture** key to take a photo.


- To delete the photo and return to the active photo viewfinder, press the **Discard** key.
- To store or send the photo, press the **Store** key.

When the viewfinder is active, press  to open the **Pictures Menu**:

Options	
Go to Pictures	See stored pictures and photos.
Phone Memory/ Memory Card	Choose to store and see pictures on your phone or memory card. 
Auto-Timed capture	Set a timer for the camera to take a photo.
Pictures Setup	Open the setup menu to adjust photo settings.
View free space	See how much memory remains.

  


24 Main Attractions

 

Record Video

Press **[Menu]** > **Multimedia** > **Video Camera** to see the video viewfinder.

Press **[Up/Down]** up or down to zoom in or out.

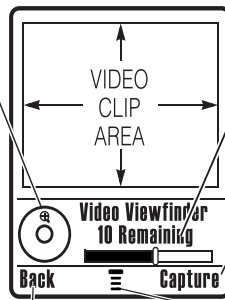

Remaining clips you can capture

Start video capture.

Press **[Menu]** to open **Videos Menu**.

Return to previous screen.

Note: The number of video clips remaining is only an estimate.

Note: You can zoom only before you start recording.

If you want to send your video in an MMS message, the video length must be set to MMS. To set length, press **[Menu]** > **Videos setup** > **Video length**.

To record, point the camera lens at the video subject, then:

- 1 Press the centre key **[Center]** or **Capture** key to start the video.
- 2 Press the **Stop** key to stop the video.
- 3 Press **Store** > **Store Only** to save the video.


or

Press **Store** > **Send in Message** to send the video in MMS.

or

Press **Discard** to delete the video and return to the active video viewfinder.


Press  to open the **Videos Menu** when the viewfinder is active. The menu can include the following options:


Options	
Go To Videos	Watch videos stored on your phone.
Phone Memory/ Memory Card	Choose to see videos on your phone or memory card. 
Videos setup	Open the setup menu to adjust video settings. Note: Set Video length to MMS if you want to send your video in an MMS message. Set Video length to Maximum to record longer clips you can store on your phone.
View free space	See how much memory remains. Note: Your phone stores any content that you add, like ring tones or games, in <i>user memory</i> . Your service provider may store some content in user memory before you receive the phone.



Audio Player

Your phone has an audio player in **Multimedia**





Find it: Press  > **Multimedia** > **Sounds**


Press  up or down to highlight a sound or song then press **Play**.

To continue playing sounds and hide the audio player, press **Hide** > **Back** > **Exit**. In the idle audio player screen, press  left or right to play the previous or next song. To stop the audio player press .


Create and Play a Playlist

 
 
To create a playlist:

- 1 In the **Sounds** menu, press  > **New** > **Playlist**.
- 2 Highlight **Name** and press **Change**.
- 3 Use the keypad to enter a name for your playlist and press **Ok**.
- 4 Highlight **Audio Files** and press **Change**. The **Audio** screen displays with all the sounds available on your phone.
- 5 Press  up or down to navigate to a song you want to add to the playlist.

To select a song press **Check** or the centre select key . A check mark appears ✓ when a song is selected.

- 6 When all sounds and songs are added to your playlist, press **Done**. The playlist is stored to the sounds list with the name you specified.

Press  up or down to highlight the playlist name and press **Play**.






Sound Options


In the Sounds menu, press to view sound options, and scroll to a song. Press up or down to highlight an option:

Options	
Phone Memory/ Memory Card	Choose to see songs on your phone or memory card.
New	Create a new Playlist or iMelody . for more information about iMelody , see page 85.
Categories	Create and store sounds in sound categories.
Sounds Setup	Set your phone to play sounds on auto repeat.
View free space	View space information for your phone or memory card.

 

To download songs to your phone, see page 85. To copy files between your phone and a computer, see page 31.

 Note: Your phone cannot play MP3 files that have a bit rate higher than 192 kbps. If you try to download or play one of these files, your phone might show you an error or ask you to delete the file.



Digital Audio Player

 
Your phone has an audio player in its **Games & Apps**:


Find it: Press > **Games & Apps** > **Digital Audio Player**

Press left or right to highlight a button at the top of the audio player: play , pause , stop , previous , next , repeat , shuffle , and visualizer on/off





28 Main Attractions



Press  up or down to highlight an option:

Options	
Playlists	Create or play a playlist of songs.
Artists	Select an artist to show or play their songs.
Albums	Select an album to show or play its songs.
Songs	Show and play individual songs. Note: All of your phone's songs appear in the Songs list. Some songs do not have any Artist , Album , or Genre information stored, so they don't appear in those lists.
Genres	Select a type of music to show or play songs.
Help	Show instructions on how to use the audio player
About	Show audio player version information

Tip: If you want music in a hurry, you can create a shortcut to the audio player. Highlight **Digital Audio Player** in the **Games & Apps** list, then press and hold . To use the shortcut from the home screen, press  and the shortcut key number.

To download songs to your phone, see page 85. To copy files between your phone and a computer, see page 31.


Note: Your phone cannot play MP3 files that have a bit rate higher than 192 kbps. If you try to download or play one of these files, your phone might show you an error or ask you to delete the file.

Cable Connections

Note: Motorola Original USB data cable and supporting software may be sold together with the phone or separately. Check your computer or hand-held device to determine the type of cable you need. To **transfer data** between your phone and computer, you must install the software included with the Motorola Original data kit. See the data kit user's guide for more information. To make **data and fax calls** through a connected computer, see page 81.



Your phone has a mini-USB port so you can connect it to a computer to transfer data.

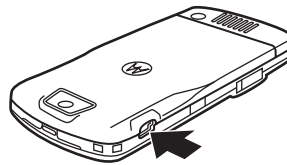

Memory Card

You can use a removable memory card with your phone to store and retrieve multimedia objects (such as photos and sounds).




Note: If you download a copyrighted file and store it on your memory card, you can use the file only while your memory card is inserted in your phone. You cannot send, copy, or change copyrighted files.

Install a Memory Card

Push the card in until it clicks into place.

Do not remove your memory card while your phone is using it or writing files on it.

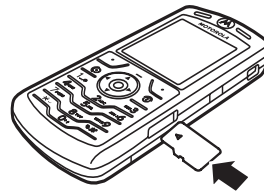

See and Change Memory Card Information

Find it: Press **[Menu]** > **Settings** > **Phone Status** > **Storage devices**

- 1 Press **[Up Arrow]** to highlight the memory card.
- 2 Press the **Details** key to see the memory card information
or
Press **[Menu]** to see the **Storage Dev. Menu**, which lets you **Rename** or **Format** the memory card.

To see memory card files, press **[Menu]** > **Multimedia** > **Pictures/Sounds**, then press **[Menu]** > **Memory Card**. To see files stored on your phone again, press **[Menu]** > **Phone Memory**.

Connect the Memory Card to a Computer

You can access your phone's memory card with a PC.

Note: When your phone is connected to a computer, you can only access the memory card through the computer.

On your phone:

Press **[Menu]** > **Settings** > **Connectivity** > **USB Settings** > **Memory Card**.

 
 


This directs the USB connection to your memory card. Attach the Motorola Original USB cable to the accessory port on your phone and to an available USB port on your computer. Then follow these steps:



On your computer:

- 1 Open your "My Computer" window, where your phone's memory card shows as a "Removable Disk" icon.
- 2 Click on the "Removable Disk" icon to access the files on your phone's memory card.
- 3 To store the desired files onto the memory card, drag and drop them as follows:
MP3 files: mobile > audio
Screensavers: mobile > picture
Wallpapers: mobile > picture
Video Clips: mobile > video
- Note:** MP3 files can be with bit-rate up to 192 kbps.
- 4 When you finish, remove the device by selecting the "Safely Remove Hardware" icon in the system tray at the bottom of your computer screen. Then select "USB Mass Storage Devices" and "Stop".
- 5 Select "USB Mass Storage Device" then "OK".



On your phone:

To return to **Data Fax** as your USB default connection, press  > **Settings > Connectivity > USB Settings > Data/Fax Connection.**



Bluetooth® Wireless

Your phone supports Bluetooth wireless *pairing* (also called *linking* or *bonding*). You can pair your phone with a Bluetooth headset or car kit, or pair your phone with a computer to exchange and synchronize files.

Note: The use of wireless devices and their accessories may be prohibited or restricted in certain areas. Always obey the laws and regulations on the use of these products.

Turn Bluetooth Power On or Off

Find it: Press  > Bluetooth Link > Setup > Power > On

If Bluetooth **Power** is **On**, your phone can automatically pair with the handsfree device you have used before. Just turn on the device or move it near the phone.

Note: To extend battery life, use the above procedure and set Bluetooth **Power** to **Off** when not in use. Your phone will not pair with devices until you set Bluetooth **Power** back to **On** and pair your phone with the devices again.

Pair with a Headset or Handsfree Device

Before you try to pair your phone with a device, make sure your phone's Bluetooth power is **on** and the device is **on** and **ready** in *pairing* or *bonding* mode (see the user's guide for the device). You can pair your phone with only one device at a time.


Find it: Press  > Bluetooth Link > Hands-free > [Look for devices]





Your phone lists the devices it finds within range.

- 1 Highlight a device in the list and press the **Select** key.
- 2 If necessary, enter the device passkey (such as 0000) and press the **Ok** key.

When your phone is paired, the Bluetooth indicator  shows in the home screen.



 


Tip: For information about your headset or handsfree device, refer to the instructions that came with it.

Copy Objects to Another Device

You can use Bluetooth pairing to copy a media object, phonebook entry, datebook event, or bookmark from your phone to a computer or other device.





Note: Preloaded multimedia objects cannot be copied.





  - 1 Highlight the object on your phone that you want to copy to the other device.
- 2 To copy media objects, press  > **Mark** (or press **0** to mark objects) and then press  > **Copy marked files**. For datebook events, choose the date by pressing , then press  > **Send**. To copy Phonebook entries, select the entry, then press  > **Share Phonebook Entry**.
- 3 Choose a recognized device name, or **[Look for devices]** to search for the device where you want to copy the object to.



34 Main Attractions



Advanced Bluetooth Features

Features	
Make Phone Visible to Other Device	<p>Allow a Bluetooth device to discover your phone:</p> <p> > Bluetooth Link > Setup > Find Me</p>
Pair with Recognized Device	<p>Pair your phone with a recognized handsfree device:</p> <p> > Bluetooth Link > Hands-free > [Look for devices]</p>
Drop Pairing with Device	<p>Highlight the device name and press the Drop key.</p>
Switch to Device During Call	<p>Switch to a headset or car kit during a call:</p> <p> > Use Bluetooth</p>
Move Multimedia Object to Device	<p>Move a multimedia object to another device:</p> <p>Note: Preloaded multimedia objects cannot be moved.</p> <p>Highlight the object, press  > Move, select the device name.</p> <p>Caution: Moving an object deletes the original object from your phone.</p>

Features

Copy Media Objects, Datebook Events, and Phonebook Entries Highlight the object you want to copy to another location.
 To copy media objects, press **[Menu]** > **Mark** (or press **0** to mark objects) and then press **[Menu]** > **Copy marked files**. For datebook events, choose the date by pressing **[Date]**, then press **[Menu]** > **Send**. To copy Phonebook entries, select the entry, then press **[Menu]** > **Share Phonebook Entry**.

Print Media Objects, Datebook Events, and Phonebook Entries Highlight the object you want to print to a printer.
 To print media objects, press **[Menu]** > **Mark** (or press **0** to mark objects) and then press **[Menu]** > **Print Marked Files**. For datebook events and phonebook entries, press **[Menu]** > **Print**.

Select Print Templates You can select desired print templates in the **Print Options** screen. After you have selected **Print Marked files** or **Print**, select **Template** > **Change** > **View** (press navigation key up or down to view different templates) > **Select** > **[Print]**
Note: For Border Free picture printing, select **Copy marked files** instead of **Print Marked Files**. Preloaded pictures cannot be printed.

Features

Edit Device Properties

Edit the properties of a recognized device:

Highlight the device name, press the **Edit** key.



Set Bluetooth Options

Highlight the device name, press **[Menu]** > **Bluetooth Link** > **Setup**





Basics



 
 

 
 
See page 1 for a basic phone diagram.



Display


The *home screen* shows when you turn on the phone. To dial a number from the home screen, press number keys and

Note: Your home screen may look different from the one below, depending on your service provider.

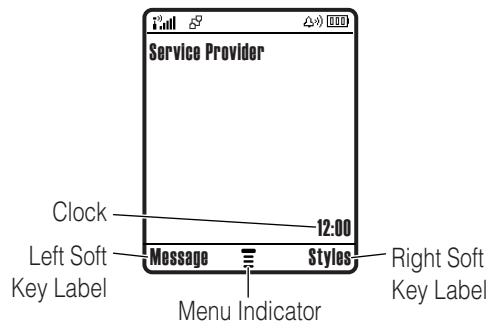Note: The menu feature icons, their names, and functions indicated by soft key labels shown in the above illustration give an example of typical home screen. You can change menu feature icons and functions on soft key labels according to your needs.




The *Menu Indicator*  shows that you can press  to open the menu. *Soft Key Labels* show the current soft key functions. For soft key locations, see page 1.



Your home screen might show news from your service provider at the bottom. To change this news view, press  > **Settings** > **Personalise** > **Home screen** > **Headlines** > **Off**.

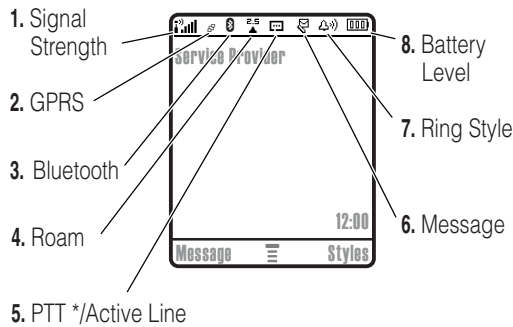

Status indicators may be shown at the top of the home screen:






* Indicates network or subscription-dependent feature

1 Signal Strength Indicator – Vertical bars show the strength of the network connection. You can't make or receive calls when  or  shows.

2 GPRS Indicator – Shows when your phone is using a *General Packet Radio Service* (GPRS) network connection. Indicators can include:




-  = GPRS PDP context active
-  = GPRS packet data available


 



 
3 Bluetooth Indicator – Shows when a Bluetooth® connection is active ().

4 Roam Indicator – Shows when your phone is seeking or using a network outside your home network. Indicators can include:



-  = 2G home
-  = 2G roam
-  = 2.5G home
-  = 2.5G roam

5 PTT* /Active Line Indicator

PTT Indicator – Shows when you can make and receive PTT calls (). Other indicators can include:


-  = secure packet data transfer
-  = unsecure packet data transfer
-  = secure application connection
-  = unsecure application connection
-  = secure *Circuit Switch Data* (CSD) call
-  = unsecure CSD call

* Indicates network or subscription-dependent feature

Active Line Indicator – Shows  to indicate an active call, or  to indicate when call diverting is on. Indicators for dual-line-enabled SIM cards can include:



- ☎ = line 1 active ☎☎ = line 1 active, call divert on
- ☎☎ = line 2 active ☎☎☎ = line 2 active, call divert on

Note: The icon of Active Line Indicator will be changed to  when you make PTT calls.

 
 
6 Message Indicator – Shows when you receive a new message.

- ✉ = text message





7 Ring Style Indicator – Shows the ring style setting.


- 🔊 = loud ring 📞🔊 = vibrate & ring
- 🔊 = soft ring 📞🔊 = vibrate then ring
- 📞 = vibrate 📞🔇 = silent




  8 Battery Level Indicator – Vertical bars show the battery charge level. Recharge the battery when your phone shows **Low Battery**.







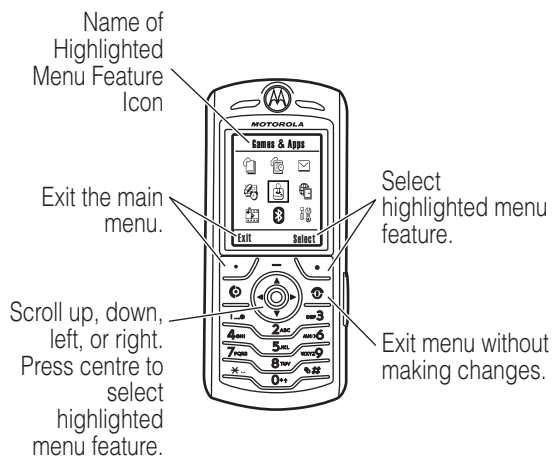

Menus




From the home screen, press  to enter the main menu.




* Please refer to your handset for actual display of menu feature icons.

The following menu icons may be available, depending on your service provider and service subscription options.

Menu Features	
 Phonebook	 WebAccess
 Recent Calls	 Multimedia
 Messages	 Bluetooth Link

Menu Features	
 Tools	 Settings
 Games & Apps	

Some features require you to select an option from a list:

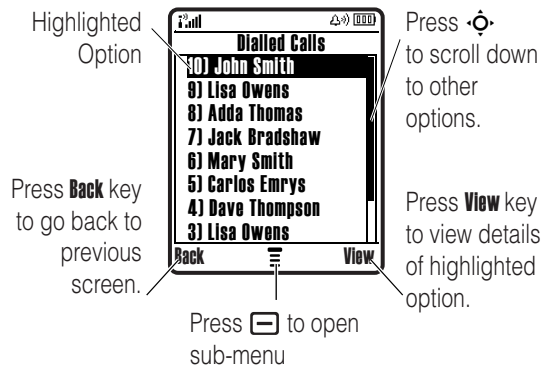


- Scroll up or down to highlight the option you want.
- In a numbered list, press a number key to highlight an option.
- In an alphabetized list, press a key repeatedly to cycle through its letters and highlight the closest matching list option.
- When an option has a list of possible settings, scroll left or right to select the setting.
- When an option has a list of possible numeric values, press a number key to set the value.

Create SMS

To create a new message, enter text.

For indicator descriptions, see following section.

Flashing cursor indicates insertion point.

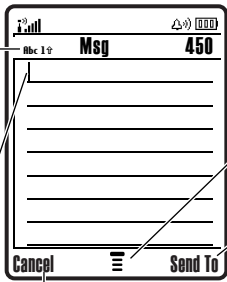

Press the **Cancel** key to exit without making changes.

Press **[Menu]** to open sub-menu.

After you enter text, press the **Send To** key to enter recipients.

Press **[#]** in a text entry view to select an entry mode:

Entry Modes	
[1] or 1	Your Primary text entry mode can be set to any iTAP™ [1] or tap 1 mode.
[2] or 2	Your Secondary text entry mode can be set to any iTAP [2] or tap 2 mode, or set to None if you don't want a secondary entry mode.
123	Numeric mode enters numbers only.
@	Symbol mode enters symbols only.

To set your primary and secondary text entry modes, press **[Menu]** > **Entry Setup** in a text entry view and select **Primary Setup** or **Secondary Setup**.

Tip: WANT TO BE LOUD IN YOUR MESSAGE? Press **[0]** in a text entry view to change text case to all capital letters (**ABC**), next letter capital (**Abc**), or no capitals (**abc**).

iTAP™ Mode

Press **[#]** in a text entry view to switch to iTAP mode. If you don't see **[#]** or **[#]**, press **[Menu]** > **Entry Setup** to set iTAP mode as your primary or secondary text entry mode.

iTAP mode lets you enter words using one key press per letter. The iTAP software combines your key presses into common words, and predicts each word as you enter it.

For example, if you press **[7] [7] [6] [4]**, your display shows:

Press **[Up]** to accept **Program**.


Press **[Right]** to highlight another combination.

Press **[Space]** to enter **Prog** and a space.

Press **Delete** key to delete last letter.



Press **Select** key to lock highlighted combination.



 
 
 
 
- If you want a different word (such as **Progress**), continue pressing keypad keys to enter the remaining letters.
- To enter numbers quickly, press and hold a number key to temporarily switch to numeric mode. Press the number keys to enter the numbers you want. Enter a space to change back to iTAP mode.
- Press  to enter punctuation or other characters.




Tap Mode

Press  in a text entry view to switch to tap mode. If you don't see **Abc 1** or **Abc 2**, press  > **Entry Setup** to set tap mode as your primary or secondary text entry mode.

To enter text in tap mode, press a keypad key repeatedly to cycle through the letters and number on the key. Repeat this step to enter each letter.



For example, if you press **[8]** one time, your display shows:

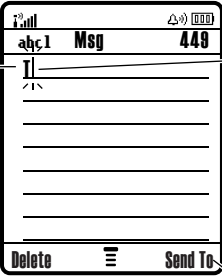


Character displays at insertion point.

After 2 seconds, character is accepted and cursor moves to next position.

Press the **Delete** key to delete character to left of insertion point.

After you enter text, press the **Send To** key to enter recipients.

When you enter three or more characters in a row, your phone may guess the rest of the word. For example, if you enter **prog** your display might show:

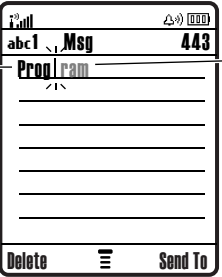

Character displays at insertion point.

Press **◂** right to accept **Program**, or press **[X]** to reject it and enter a space after **Prog**.

 


- The first character of every sentence is capitalized. If necessary, press down to change the character to lowercase before the cursor moves to the next position.
- Press to move the flashing cursor to enter or edit message text.
- If you don't want to save your text or text edits, press > **Abort Message** to exit without saving.




Numeric Mode

Press in a text entry view until you see 123. Press the number keys to enter the numbers you want.



Symbol Mode



 
Press in a text entry view until you see @. Press a keypad key to show its symbols at the bottom of the display. Highlight the symbol you want, then press the **Select** key.



Volume

Press the volume keys to:

  - turn off an incoming call alert (press the down volume key)
- change the earpiece volume during calls
- change the ringer volume from the home screen

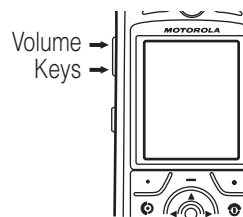 



 
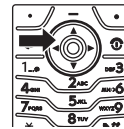


Tip: Sometimes silence really is golden. That's why you can quickly set your ringer to **Vibrate** or **Silent** by pressing and holding the down volume key or press the **0** key to set the ringer Vibrate.



Navigation Key

Press the *navigation key*  up, down, left, or right to scroll and highlight items in the display. When you highlight something, press the *centre key*  to select it. The centre key usually performs the same function as the right soft key.

 


Hands-free Speaker

You can use your phone's handsfree speaker to make calls without holding the phone to your ear.


During a call, press the **Speaker** key to turn the handsfree speaker on. Your display shows **Spkrphone On** until you turn it off or end the call.

Note: The handsfree speaker won't work when your phone is connected to a handsfree car kit or headset.




Codes & Passwords

 Your phone's 4-digit **unlock code** is originally set to **1234**. The 6-digit **security code** is originally set to **000000**. If your service provider didn't change these codes, you should change them:





Find it: Press  > **Settings** > **Security** > **New Passwords**


If you forget your unlock code: At the **Enter Unlock Code** prompt, try entering 1234 or the last four digits of your phone number. If that doesn't work, press  and enter your 6-digit security code instead.

If you forget other codes: If you forget your security code, SIM PIN code, PIN2 code, or call barring password, contact your service provider.



Lock & Unlock Phone



You can lock your phone to keep others from using it. To lock or unlock your phone, you need the 4-digit unlock code.

 
 
 
 
To **manually lock** your phone: Press  > **Settings** > **Security** > **Phone Lock** > **Lock Now**.

To **automatically lock** your phone whenever you turn it off: Press  > **Settings** > **Security** > **Phone Lock** > **Automatic Lock** > **On**.

Note: You can make emergency calls on a locked phone (see page 58). A locked phone still rings or vibrates for incoming calls or messages, **but you need to unlock it to answer**.

Lock & Unlock Keypad

You can lock your keypad to prevent accidental key presses. Press   to lock or unlock the keypad.





Customize



Ring Style

Each ring style profile uses a different set of sounds or vibrations for incoming calls and other events. Here are the profiles you can choose:

- | | | |
|-------------|------------------------|-----------------------|
| Loud | Vibrate | Vibe then Ring |
| Soft | Vibe & Ring | Silent |

The ring style profile's indicator shows at the top of your home screen. To choose your profile:

Find it: Press > **Settings** > **Ring Styles** > **Style:** *style name*

 
Change Alerts in a Ring Style

You can change the alerts for incoming calls and other events. Your changes are saved in the current ring style profile.

Find it: Press > **Settings** > **Ring Styles** > **Style Detail**

Note: *Style* represents the current ring style. You can't set an alert for the **Silent** ring style setting.

- 1 Highlight **Calls** (or **Line 1** or **Line 2** for dual-line phones), then press the **Change** key to change it.
- 2 Highlight the alert you want, then press the **Select** key.
- 3 Press the **Back** key to save the alert setting.





Time & Date



Your phone needs the time and date for the datebook.

To synchronize the time and date with the network*: Press > **Settings** > **Initial Setup** > **Time and Date** > **Autoupdate** > **On**

 


To set the time and date: Press > **Settings** > **Initial Setup** > **Time and Date** > *time or date*.


Note: If your home screen shows news information from your service provider*, you must turn off the news view to see a clock. Press > **Settings** > **Personalise** > **Home screen** > **Headlines** > **Off**.



* Indicates network or subscription-dependent feature





Wallpaper

 

Set a photo, picture, or animation as a wallpaper (background) image in your home screen.

Find it: Press > **Settings** > **Personalise** > **Wallpaper**

Options	
Picture	Select an image for your wallpaper, or None for no wallpaper.
Layout	Select Centre to centre the image in the display, Tile to repeat the image across the display, or Fit-to-screen to stretch the image across the display.

  





Screen Saver

Set a photo, picture, or animation as a screen saver. The screen saver shows when no activity is detected for a specified time.


Tip: This feature helps save your screen, but not your battery. To extend battery life, turn off the screen saver.


Find it: Press  > **Settings** > **Personalise** > **Screen Saver**

Options	
Picture	Select an image for your screen saver, or None for no screen saver.
Delay	Select the length of inactivity before the screen saver shows.

  


Display Appearance

 
To choose a phone **skin** that sets the look and feel of your phone's display: Press  > **Settings** > **Personalise** > **Skin**.

To set your display **brightness**: Press  > **Settings** > **Initial Setup** > **Brightness**.

To save battery life, your **backlight** turns off when you're not using your phone. The backlight turns back on when you press a key. To set how long your phone waits before the backlight turns off:

Press  > **Settings** > **Initial Setup** > **Backlight**.

To save battery life, the **display** can turn off when you're not using your phone. The display turns back on when you press





a key. To set how long your phone waits before the display turns off:

 
 
 
Press  > **Settings** > **Initial Setup** > **Display Timeout**.



Answer Options

You can use additional, alternative methods to answer an incoming call. To activate or deactivate an answer option:

Find it: Press  > **Settings** > **In-Call Setup** > **Answer Options** > **Multi-key** > **On** or **Off**





Calls




To make and answer calls, see page 21.

Turn Off a Call Alert



You can press the volume keys to turn off a call alert before answering the call.

 
 
Recent Calls

Your phone keeps lists of incoming and outgoing calls, even for calls that didn't connect. The most recent calls are listed first. The oldest calls are deleted as new calls are added.

Shortcut: Press  from the home screen to see the dialed calls list.



Find it: Press  > **Recent Calls**


- 1 Highlight **Received Calls** or **Dialed Calls**, then press the **Select** key.
- 2 Highlight a call. A ✓ next to a call means the call connected.
 - To call the number, press .
 - To see call details (like time and date), press the **View** key.
 - To see the **Last Calls Menu**, press . This menu can include:



Options	
Store	Create a phonebook entry with the number in the No. field. Store does not appear if the number is already stored.
Delete	Delete the entry.
Delete All	Delete all entries in the list.
Hide ID/Show ID	Hide or show your caller ID for the next call.
Send Message	Open a new text message with the number in the To field.
Add Digits	Add digits after the number.
Attach Number	Attach a number from the phonebook or recent calls lists.

Redial

- 1 Press  from the home screen to see the dialled calls list.
- 2 Highlight the entry you want to call, then press .


If you hear a **busy signal** and you see **Call Failed**, you can press  or the **Retry** key to redial the number. When the call goes through, your phone rings or vibrates one time, shows **Redial Successful**, and connects the call.






Return a Call



Your phone keeps a record of your unanswered calls, and shows **X Missed Calls**, where **X** is the number of missed calls.

 
 
- 1 Press the **View** key to see the received calls list.
- 2 Highlight the call you want to return, then press .

Notepad


The last set of digits entered on the keypad are stored in *notepad* memory. This can be the last phone number you called, or a number that you “jot down” during a call for later use. To see the number stored in the notepad:


Find it: Press  > **Recent Calls** > **Notepad**



- To call the number, press .
- To create a phonebook entry with the number in the **No.** field, press the **Store** key.
- To open the **Dialling Menu** to attach a number or insert a special character, press .



Hold or Mute a Call

Press  > **Hold** to put all active calls on hold.

  
Press the **Mute** key (if available) or  > **Mute** to put all active calls on mute.



Call Waiting

When you're on a call, you'll hear an alert if you receive a second call.

Press  to answer the new call.

- To switch between calls, press the **Switch** key.
- To connect the two calls, press the **Link** key.
- To end the call on hold, press  > **End Call on Hold**.

To turn the call waiting feature on or off:

Find it: Press  > **Settings** > **In-Call Setup** > **Call Waiting**



Caller ID

Calling line identification (caller ID) shows the phone number for an incoming call in your display.

Your phone shows the caller's name and picture when they're stored in your phonebook, or **Anonymous Call** when caller ID information isn't available.

You can set your phone to play a different ringer ID for an entry stored in your phonebook (see page 69).

To show or hide **your phone number** from the next person you call, enter the phone number and press

 > **Hide ID/Show ID**.




Emergency Calls

Your service provider programs one or more emergency phone numbers, such as 999 or 112, that you can call under

 




any circumstances, even when your phone is locked or the SIM card is not inserted.

Note: Emergency numbers vary by country. Your phone's preprogrammed emergency number(s) may not work in all locations, and sometimes an emergency call cannot be placed due to network, environmental, or interference issues.

- 1 Press the keypad keys to dial the emergency number.
- 2 Press  to call the emergency number.

International Calls

  If your phone service includes international dialling, press and hold  to insert your local international access code (indicated by +). Then, press the keypad keys to dial the country code and phone number.





1-Touch Dial

To call phonebook entries 1 through 9, press and hold the single-digit speed dial number for one second.

You can set 1-touch dial to call the entries in your phone's memory phonebook, your SIM card's phonebook, or your Fixed Dial list:

  Find it: Press  > **Settings** > **Initial Setup** > **1-Touch Dial** > **Phone, SIM, or Fixed Dial**





To add a new phonebook entry, see page 68. To edit the **Speed No.** for a phonebook entry, press > **Phonebook**, highlight the entry, and press > **Edit**.



Voice mail

Your network stores the voicemail messages you receive. To listen to your messages, call your voicemail number.



Note: Your service provider may include additional information about using this feature.

When you **receive** a voicemail message, your phone shows the message indicator and **New Message**.

 
 
 
 


To **check** voicemail messages:

Find it: Press > **Messages** > **Voice mail**

Your phone may prompt you to store your voicemail phone number. If you don't know your voicemail number, contact your service provider.

Note: You can't store a **p** (pause), **w** (wait), or **n** (number) character in this number. If you want to store a voicemail number with these characters, create a phonebook entry for it. Then, you can use the entry to call your voicemail.



Push-to-Talk (PTT)*

Push-to-Talk (PTT) lets you talk walkie-talkie style with other PTT subscribers. You can talk to one person or a group.


PTT and the other related features indicated are network and subscription dependent features, and are only available in PTT supported network areas. PTT connectivity requires PTT-compatible phones.



Note: To lock your PTT Key or turn PTT on or off, see page 64.

* Indicates network or subscription-dependent feature

Make a PTT Call


When  shows at the top of your home screen after you have pressed the PTT Key, you can make and receive PTT calls. To make a PTT call:

- 1 Enter a PTT subscriber's phone number in your home screen, or select a contact or group from a list and press the PTT Key:
 - **PTT Contacts** (press the PTT Key to open the list)
Note: If you change your **Open To** setting, your PTT Key does not open the contacts list (see page 65).
 - **PTT Quick Group** (press the PTT Key > **PTT Menu** > **PTT Quick Group**) This lets you select more than one contact for the call.
 - **PTT Groups** (press the PTT Key > **PTT Menu** > **PTT Groups**)

 


- 2 After the PTT call has been connected, hold the PTT Key and speak after you hear the tone. Release the PTT Key to let others speak.

To speak during a PTT call, hold your PTT Key and speak after the tone. Only one person can speak at a time.


To end the call, press . If nobody speaks for 20 seconds, the call ends.

To send a PTT alert instead of a standard PTT call, highlight a PTT contact in **PTT Contacts** and press the **Alert** key. The contact's phone rings or vibrates, and the contact can speak first. If the contact does not respond, the call ends. You can send alerts to groups after getting no response from a contact.





Answer a PTT Call

When you receive a PTT call, you hear a tone or alert followed by conversation from the caller.

- **To speak** when the caller stops speaking, hold your PTT Key and speak after the tone. Only one person can speak at a time.
- **To end the call**, press .

If you change your **My Answer Mode** setting, your phone does not automatically answer as described (see page 65).

  
When you receive a PTT alert, press the PTT Key and speak after the tone. You can also press the **Ignore** key to cancel the call.





Your phone shows **Missed Call** if you miss a PTT alert. It does not show **Missed Call** when you miss a standard PTT call unless you set **My Answer Mode** to **Manual** (see page 65).

 
PTT Contacts and Groups

You can store **PTT Contacts** to make one-to-one calls, or you can store **PTT Groups** to make group calls.



To store a contact, press PTT Key >  > **Add New Contact**. Enter the contact's **Name** and phone number (**No.**), then press the **Done** key. Your network stores the contact and your phone returns to the **PTT Contacts** list with the new contact shown.



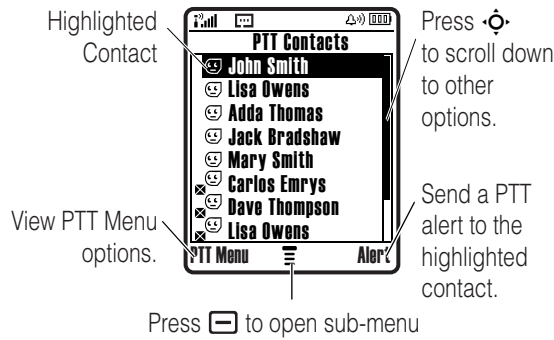



To create a group of contacts that you can call at the same time, press PTT Key >  > **Go To Groups** > **[Add New Group]**. Enter the group's **Name** and select the **Members**, then press the **Done** key. Your network stores the group and your phone returns to the **PTT Groups** list with the new group shown.



 To see PTT contacts, press the PTT Key. Scroll to a contact and press  to **View**, **Edit**, or **Delete** it.









To see PTT groups, press the PTT Key >  > **Go To Groups**. Scroll to a group and press  to **View** or **Delete** it. You cannot edit a group, but you can delete it and create a new one with the members you want.

Icons in the PTT contact and group lists indicate if someone is online (, ) or offline (, ). They also tell you if a contact is blocked  (highlight the contact and press  > **Edit** > **Block Mode** > **On or Off**).


To set an **online alert**  to tell you when a contact comes online, highlight the contact and press  > **Enable Online Alert**. You can turn online alert tones on or off in your **PTT Setup** menu (see page 64).

To refresh the contact or group list from your network, press  > **Refresh List**.

  To see only your frequently used contacts or groups, press  > **Frequently Used**.




PTT Settings


To **turn PTT on or off** from your home screen, press  > **Settings** > **PTT Settings** > **PTT Service** > **On/Off**.

You can change your PTT menu and call preferences.

 Note: Once PTT service is activated, the right side key will be changed from Browser Key to Smart Key.




 





 



Find it: Press PTT Key > **PTT Menu** > **PTT Setup** > **Personalise**












Options	
Open to	From the home screen, the PTT Key can open the PTT menu (PTT Menu), or your contacts list sorted by name (Contacts), or most recent call (Last Contact Called).
Sort by	Sort your contacts and groups by Name , online Status , or call Frequency .
My Answer Mode	Set the mode for incoming PTT calls to Manual (press the PTT Key to answer), Auto-Accept (standard mode that accepts all calls), or Do Not Disturb (accepts no calls).
Tone Volume	Set the volume for the tone you hear when it is your turn to speak.
PTT Speaker	Turn the speakerphone On or Off for PTT calls.
Set Online Alert Tone	<p>You can set an online alert to tell you when a contact or group comes online (highlight the entry in your PTT Contacts or PTT Groups and press  > Enable Online Alert).</p> <p>This setting tells your phone whether to play these alert tones (On) or not (Off).</p>

Other Features

Advanced Calling

Features	
Conference Call	<p>During a call: Dial next number, press , press the Link key.</p> 
Transfer a Call	<p>During a call:  > Transfer, dial transfer number, press </p> 
Attach a Phone Number	<p>Dial an area code or prefix for a phonebook number, then:  > Attach Number</p> 
Speed Dial	<p>Speed dial a phonebook entry: Enter the speed dial number, press , then press .</p> <p>To add a phonebook entry, see page 68.</p> <p>Tip: If you forget Aunt Mildred's speed dial number, press  > Phonebook, highlight her entry, and press the View key.</p> 
Call Diverting	<p>Set up or cancel call diverting:  > Settings > Call Divert</p> 

Features	
Call Barring	<p>Restrict outgoing or incoming calls:</p> <p> > Settings > Security > Call Barring</p> 
Change Phone Line	<p>If you have a dual-line-enabled SIM card, you can change your line to make and receive calls from your other phone number.</p> <p> > Settings > Phone Status > Active Line</p> <p>The active line indicator shows the active phone line (see page 40).</p> 
Fixed Dial	<p>When you turn on fixed dialling, you can call only numbers stored in the fixed dial list.</p> <p>Turn fixed dialling on or off:</p> <p> > Settings > Security > Fixed Dial</p> <p>Use the fixed dial list:</p> <p> > Tools > Dialling services > Fixed Dial</p> 
DTMF Tones	<p>Activate DTMF tones:</p> <p> > Settings > Initial Setup > DTMF</p> <p>To send DTMF tones during a call, just press number keys or highlight a number in the phonebook or recent calls lists and press  > Send Tones.</p>

Phonebook

Features	
Add New Entry	<p>☐ > Phonebook > ☐ > New > Phone Number or Email Address</p> <p>Shortcut: Enter a phone number in the home screen, then press the Store key to create an entry for that number.</p> <p>Tip: One phone isn't enough for some people. When creating a phonebook entry, select MORE to store another number for the same Name.</p>
Dial Number	<p>Call a number stored in the phonebook:</p> <p>☐ > Phonebook, highlight the phonebook entry, press ☐</p> <p>Shortcut: In the phonebook, press keypad keys to enter the first letters of an entry name, then press the Search key to jump to the entry.</p>
Record a Voice Name	<p>When creating a phonebook entry, highlight Voice Name and press the Record key. Press Record and say the entry's name (within 2 seconds). When prompted, press Record and repeat the name.</p> <p>Note: The Voice Name option isn't available in entries stored on the SIM card.</p>




Features	
Voice Dial Number	Voice dial a number stored in the phonebook: ☰ > Tools > Dialling services > Voice Dial
Set Ringer ID for Entry	Assign a ring alert (ringer ID) to an entry: ☰ > Phonebook > entry > ☰ > Edit > Ringer ID > ringer name Note: The Ringer ID option isn't available in entries stored on the SIM card. Activate ringer IDs: ☰ > Settings > Ring Styles > style Detail > Ringer IDs
Set Picture ID for Entry	Assign a photo or picture to show when you receive a call from an entry: ☰ > Phonebook > entry > ☰ > Edit > Picture Note: The Picture option isn't available in entries stored on the SIM card.
Set Picture ID View	Show entries as a text list, or with picture caller ID photos: ☰ > Phonebook > ☰ > Setup > View by > Picture
Set Category for Entry	☰ > Phonebook > entry > ☰ > Edit > Category > category name Note: The Category option isn't available in entries stored on the SIM card.





Features	
Set Category View	<p>☰ > Phonebook > ☰ > Categories > <i>category view</i></p> <p>You can show All entries, entries in a predefined category (Business, Personal, General, VIPs), or entries in a category you create.</p>
Set Primary Number or Address	<p>Set the primary number for an entry with multiple numbers:</p> <p>☰ > Phonebook, highlight the entry, press ☰ > Set Primary > <i>number or address</i></p> <p>Note: The Set Primary option isn't available in entries stored on the SIM card.</p> <p>Tip: In Primary number view mode, you can still peek at other numbers stored for the same name. Highlight the name and press ⬅️ or ➡️ left or right to see the other numbers.</p>
Create Group Mailing List	<p>You can put several phonebook entries in a group mailing list, then send a multimedia message to the list. To create a list:</p> <p>☰ > Phonebook > ☰ > New > Mailing List</p> <p>You can select the list name as an address for multimedia messages.</p> <p>Note: A Mailing List cannot include entries stored on the SIM card.</p>










Features	
Sort Phonebook List	<p>Set the order in which entries are listed:</p> <p>☐ > Phonebook > ☐ > Setup > Sort by > <i>sort order</i></p> <p>You can sort the phonebook list by Name, Speed No., Voice Name, or Email. When sorting by name, you can see All numbers or just the Primary number for each name.</p>
Copy Phonebook Entry	<p>Copy an entry from the phone to the SIM card, or from the SIM card to the phone:</p> <p>☐ > Phonebook, highlight the entry, press ☐ > Copy > Entries > To</p>
Send Phonebook Entry in a Text Message	<p>Send a phonebook entry in a text or email message:</p> <p>☐ > Messages > New Message > New Short Msg > ☐ > Insert > Contact Info > Phonebook (highlight phonebook entries), press Add > Done</p>
Send Phonebook Entry in a Multimedia Message	<p>Send a phonebook entry in a multimedia message:</p> <p>☐ > Phonebook, highlight the entry, press ☐ > Share Phonebook Entry > Multimedia Msg</p>

Features	
Send Phonebook Entry over Bluetooth® Connection	Send a phonebook entry to another phone, computer, or device: ☰ > Phonebook, highlight the entry, press ☰ > Share Phonebook Entry > Bluetooth > [Look for devices]





Messages

Features	
Send Text Message	☰ > Messages > New Message > New Short Msg > enter text > Send To > press centre key to select recipient(s) > Send 
Send Multimedia Message	☰ > Messages > New Message > New Multimedia Msg 
Send Email	☰ > Messages > New Message > New Email 

Features	
<p>Send Voice Message</p>	<p>☐ > Messages > New Message > New Voice Msg</p> <p>To record the voice message, press the Record key, speak, then press the Stop key. Your phone inserts the voice recording into a message and lets you enter email addresses or phone numbers to send the message.</p> 
<p>Use a Multimedia Template</p>	<p>Open a multimedia message with preloaded animations:</p> <p>☐ > Messages > New Message > MMS Templates</p> 
<p>Read Messages</p>	<p>☐ > Messages > Message Inbox</p> <p>Icons next to each message indicate if it is read ☐ or unread ☐. Icons can also indicate if the message is urgent !, locked ☐ or has an attachment ☐.</p> <p>To see message options like Lock or Delete, highlight a message and press ☐.</p> 
<p>Read Old Email</p>	<p>☐ > Messages > Email Msgs</p> <p>Press ☐ to perform various operations on a message.</p> 



Features	
Store Message Objects	<p>Go to a multimedia message press:</p> <p> > Store</p> 
Store Text Messages on Your SIM Card	<p>To store incoming text messages on your SIM card, press:</p> <p> > Messages ></p> <p> > Messages Setup > Text Msg Setup > Store To > SIM</p> 
Browser Messages	<p>Read messages received by your micro-browser:</p> <p> > Messages > Browser Msgs</p> 
Info Services*	<p>Read subscription-based information services messages:</p> <p> > Messages > Info Services</p> 

* Indicates network or subscription-dependent feature

Features	
<p>Set Up More Email Accounts</p>	<p>You can set up, edit, and use more than one email account on your phone. Each account stores protocol, host, port, and other information.</p> <p> > Messages > Email Msgs > Setup > Account Settings</p> <p>To create a new account, select [New Entry].</p> <p>Note: Your display shows a folder for each email account under  > Messages > Email Msgs</p>
<p>Change Message Service centre Number</p>	<p>You can change the message service centre number.</p> <p> > Messages >  > Message Setup > Text Msg Setup > Service Centre No.</p>



Personalising

Features	
<p>Language</p>	<p>Set menu language:</p> <p> > Settings > Initial Setup > Language</p>
<p>Scroll</p>	<p>Set the highlight bar to stop or wrap around in menu lists:</p> <p> > Settings > Initial Setup > Scroll</p>

Features	
Activate Ringer IDs	Activate ringer IDs assigned to phonebook entries and categories: ☰ > Settings > Ring Styles > <i>style Detail</i> > Ringer IDs
Ring Volume	☰ > Settings > Ring Styles > <i>style Detail</i> > Ring Volume
Keypad Volume	☰ > Settings > Ring Styles > <i>style Detail</i> > Key Volume
Reminders	Set reminder alerts for messages that you receive: ☰ > Settings > Ring Styles > <i>style Detail</i> > Reminders
News View*	If your service provider broadcasts news information that always appears in your home screen, you can turn the news view on or off: ☰ > Settings > Personalise > Home screen > Headlines > On or Off
Menu View	Show the main menu as graphic icons or as a text-based list: ☰ > Settings > Personalise > Main Menu > View
Main Menu	Reorder your phone's main menu: ☰ > Settings > Personalise > Main Menu > Reorder



* Indicates network or subscription-dependent feature

Features	
Show/Hide Menu Icons	Show or hide menu feature icons in the home screen: ☐ > Settings > Personalise > Home screen > Home Keys > Icons
Shortcuts	Create a shortcut to a menu item: Highlight the menu item, then press and hold ☐. Use a shortcut in the home screen: Press ☐, then press the shortcut number.
Master Reset	Reset the phone to the default settings: ☐ > Settings > Initial Setup > Master Reset This phone will be reset to default settings.


Features

Master Clear Erase all downloaded files and clear all settings and entries you made **except** SIM card information, unlock code, security code, and lifetime timer:

 > Settings > Initial Setup > Master Clear

Caution: Master clear **erases all information you have entered** (including phonebook and datebook entries) **and content you have downloaded** (including photos and sounds) stored in your phone's memory. After you erase the information, you can't recover it.

Call Times & Costs*

Network connection time is the elapsed time from the moment you connect to your service provider's network to the moment you end the call by pressing . This time includes busy signals and ringing.

The amount of network connection time you track on your resettable timer may not equal the amount of time for which you are billed by your service provider. For billing information, contact your service provider.











Features	
Call Times	Show call timers: ☰ > Recent Calls > Call Times
In-Call Timer	Show time or cost information during a call: ☰ > Settings > In-Call Setup > In-Call Timer
Call Cost *	Show call cost trackers: ☰ > Recent Calls > Call Cost

* Indicates network or subscription-dependent feature

Handsfree






Note: The use of wireless devices and their accessories may be prohibited or restricted in certain areas. Always obey the laws and regulations on the use of these products.

Features	
Speakerphone	Activate the speakerphone during a call: Press the Speaker key (if available, or ☰ > Spkrphone On).

Features		
Auto Answer (Car Kit or Headset)	Automatically answer calls when connected to a car kit or headset:	
	 > Settings > Car Settings or Headset > Auto Answer	
Voice Dial (Headset)	Enable voice dial with headset send/end key:	
	 > Settings > Headset > Voice Dial	
Auto Handsfree (Car Kit)	Automatically route calls to a car kit when connected:	
	 > Settings > Car Settings > Auto Handsfree	
Power-off Delay (Car Kit)	Set the phone to stay on for a specified time after the ignition is switched off:	
	 > Settings > Car Settings > Power-off Delay	
Charger Time (Car Kit)	Charge the phone for a specified time after the ignition is switched off:	
	 > Settings > Car Settings > Charger Time	


Data & Fax Calls*

To connect your phone with a USB cable, see page 30.

Features	
Send Data or Fax	<p>Connect your phone to the device, then place the call through the device application.</p> 
Receive Data or Fax	<p>Connect your phone to the device, then answer the call through the device application.</p> 
Using Sync	<p>You can call an Internet server and synchronize your phonebook and datebook entries with the server.*</p> <p>To set up an Internet sync partner, press  > Settings > Connectivity > Sync > [New Entry]. Enter the server details, including URL (you can omit http://) and Data paths (the folder below the URL where your data is stored).</p> <p>To synchronize files with a partner you set up, select the partner from the list in  > Settings > Connectivity > Sync</p> 




 


* Indicates network or subscription-dependent feature

Network

Features	
Network Settings	See network information and adjust network settings:  > Settings > Network



Personal Organizer

Features	
Set Alarm	 > Tools > Alarm Clock
Turn off Alarm	When an alarm happens: To turn off the alarm, press the Disable key. To set an 8 minute delay, press the Snooze key.
Add New Datebook Event	 > Tools > Datebook , highlight the day, press  , press  > New
See Datebook Event	See or edit event details:  > Tools > Datebook , highlight the day, press  , press the View key
Event Reminder	When an event reminder happens: To see reminder details, press the View key. To close the reminder, press the Exit key.


Features	
Send Datebook Event to Another Device	Send a datebook event to another phone, computer, or device: ☐ > Tools > Datebook, highlight the day, press ⬅ , highlight the event, press ☐ > Send
Calculator	☐ > Tools > Calculator
Currency Converter	☐ > Tools > Calculator > ☐ > Exchange Rate Enter exchange rate, press the Ok key, enter amount, and press ☐ > Convert Currency.

Security

Features	
SIM PIN	Lock or unlock the SIM card: ☐ > Settings > Security > SIM PIN Caution: If you enter an incorrect PIN code 3 times in a row, your SIM card is disabled and your display shows SIM Blocked .
Lock Feature	☐ > Settings > Security > Lock Application

Features

Manage Certificates* Enable or disable Internet access certificates stored on your phone:

 > **Settings** > **Security**
> **Certificate Mgmt**

Certificates are used to verify the identity and security of Web sites when you download files or share information.




* Indicates network and subscription-dependent feature


Fun & Games

For basic information on the camera, see page 23.


Features

Manage Pictures Manage photos, pictures, and animations:




 > **Multimedia** > **Pictures**

Manage Video Clips  > **Multimedia** > **Videos**

Manage Sounds Manage ring tones and music that you have downloaded or composed:

 > **Multimedia** > **Sounds**




Features	
Create Ring Tones	<p>Create ring tones that you can use with your phone:</p> <p>☐ > Multimedia > Sounds > [New iMelody]</p> <p>Note: If a memory card is installed in the phone, change to Phone Memory to create ring tones with New iMelody. Press ☐ > Multimedia > Sounds > ☐ > Phone Memory > [New iMelody].</p>
Start Micro-browser	<p>☐ > WebAccess > Browser</p> 
Download Objects from Web Page	<p>Download a picture, sound, or other object from a Web page:</p> <p>☐ > WebAccess > Browser, go to the page that links to the file, highlight the link, and select it.</p> <p>Note: Normal airtime and/or carrier usage charges apply.</p> 
Web Sessions	<p>Select or create a Web session:</p> <p>☐ > WebAccess > Web Sessions</p> 

Features

Download Game or Application

You can download a Java™ game or application the same way you download pictures or other objects:


 > **WebAccess** > **Browser**, go to the page that links to the file, highlight the link, and select it.

Note: Normal airtime and/or carrier usage charges apply.



Start Game or Application

Start a Java™ game or application:

 > **Games & Apps**, highlight the game or application, press the **Select** key

Note: To install and run games stored on your memory card, press  > **Games & Apps** > **[Install New]**.





MyMobileSoft.com

 
 
 
 
Introduction

MyMobileSoft.com¹ provides download of both free and paid software for your Motorola handset. Depends on each model, you may download games, ring tones, screen savers, wall papers, e-books, financial and others software from MyMobileSoft.com.

1. All software and applications contained on MyMobileSoft.com are third party products and provided as is. Motorola or its subsidiaries make no representations or warranties, expressly or impliedly. By way of example but not of limitation, Motorola or its subsidiaries make no representations or warranties of merchantability or fitness for a particular purpose, or that the use of the software and applications will not infringe any intellectual property rights. Motorola or its subsidiaries shall not be liable for any damages of any kind arising out of or relating to the use or inability to use the software and applications and services thereof. Amendment and availability of these software and applications are subject to change without any prior notice.

For more information, please visit the internet website:

www.mymobilesoft.com





Access to MyMobileSoft.com²

Find the Feature

 
☐ > Tools
> Shortcuts > ☐
> Go To

OR



☐ > ☐

This link guides you to the service of MyMobileSoft.com, which provides software and applications for your newly bought Motorola Mobile Phone.

2. You need to subscribe WAP service from your local operators, please make sure that you set up your handset correctly with appropriate parameters provided by your local operators.



  www.mymobilesoft.com
Unlimited surprises waiting for
you to download





Specific Absorption Rate Data



 
 
 
This model meets international guidelines for exposure to radio waves.

Your mobile device is a radio transmitter and receiver. It is designed not to exceed the limits for exposure to radio waves recommended by international guidelines. These guidelines were developed by the independent scientific organization ICNIRP and include safety margins designed to assure the protection of all persons, regardless of age and health.

The guidelines use a unit of measurement known as the Specific Absorption Rate, or SAR. The ICNIRP SAR limit for mobile devices used by the general public is 2 W/kg and the highest SAR value for this device when tested at the ear was 0.95 W/kg.¹ As mobile devices offer a range of functions, they can be used in other positions, such as on the body as described in this user guide.² In this case, the highest tested SAR value is 0.49 W/kg.¹

As SAR is measured utilizing the device's highest transmitting power, the actual SAR of this device while operating is typically below that indicated above. This is due to automatic changes to the power level of the device to ensure it only uses the minimum level required to reach the network. While there may be differences between the SAR levels of various phones and at various positions, they all meet the governmental requirements for safe exposure. Please note that improvements to this product model could cause differences in the SAR value for later products; in all cases, products are designed to be within the guidelines.

The World Health Organization has stated that present scientific information does not indicate the need for any special precautions for the use of mobile devices. They note that if you want to reduce your exposure








then you can do so by limiting the length of calls or using a “hands-free” device to keep the mobile phone away from the head and body.

Additional Information can be found on the websites of the World Health Organization (<http://www.who.int/emf>) or Motorola, Inc. (<http://www.motorola.com/rfhealth>).

   - 1 The tests are carried out in accordance with international guidelines for testing. The limit incorporates a substantial margin for safety to give additional protection for the public and to account for any variations in measurements. Additional related information includes the Motorola testing protocol, assessment procedure, and measurement uncertainty range for this product.
- 2 Please see the Safety and General Information section about body worn operation.





Index



A

accessories 17, 78
accessory connector port 1
active line indicator 40
active line, changing 67
alarm clock 81
alert
 set 49, 51
 turn off 48, 49, 55
animation 83
answer a call 22, 54
attach a number 56, 66
audio player 27, 29
auto repeat 28

B

backlight 53
battery 19
battery indicator 41
battery life, extending 20,
 33, 53, 54
Bluetooth
 indicator 40
Bluetooth connection 33,
 35, 71, 82
brightness 53
browser messages 73





browser. See micro-browser

C

cables 30
calculator 82
call
 answer 22, 54
 end 21, 22
 make 21, 68
call barring 67
call divert indicator 40
call diverting 66
call timers 78
call waiting 58
caller ID 56, 58, 69
camera 23
car kit 78
centre key 1, 49
certificate management 83
clock 52
codes 49, 50
conference call 66
copy files 34
costs, tracking 78

D

    data call 80





data indicator 40
date, setting 52
datebook 81
dial a phone number 21, 67,
68
dialled calls 55
digital audio 27, 29
display 38, 53, 75
divert calls 66
download media objects
73, 84
DTMF tones 67

E

earpiece volume 48
email 72, 73, 74
email address 68
emergency number 58
end a call 21, 22
end key 1, 21, 22
Enter Unlock Code
message 50


F

fax call 80
fixed dial 67

G

games 85
GPRS indicator 39
group mailing list 70

 92 Index



H

handsfree speaker 49
headset 78
headset jack 1
hold a call 57
home screen 38, 75, 76

I

in-call indicator 40
Incoming Call message 58
information services 74
international access code
59
iTAP text entry mode 45

J

Java applications 85

K


keypad 50, 75

L

language 75
linking. See Bluetooth
connection

lock

 application 82
keypad 50
phone 50
SIM card 82





Low Battery message 41

M

make a call 21, 68
master clear 77
master reset 76
memory card 31
menu 42, 75, 76
menu icons 42, 76
menu indicator 39
menu key 1, 17
message 72, 73
message indicator 41
message reminders 75
micro-browser 73, 84, 85
Missed Calls message 57
MP3 sound files 27, 28, 29,
30
multimedia message 72, 73
music 83
mute a call 57

N

 
 
 
navigation key 1, 17, 49
network settings 81
news 39, 75
notepad 57
number. See phone number
numeric entry mode 48

O

object exchange 34
1-touch dial 59
optional accessory 17
optional feature 17

P

pairing. See Bluetooth
connection
passwords. See codes
personalise 75
phone number 22, 67, 68
phonebook 56, 59, 66, 68
photo 23, 83
picture 83
picture ID 58, 69
PIN code 21, 82
power key 1, 21
PTT 61
calls, answering 62
calls, making 61
contacts and groups 63
icons 64
indicator 40
Quick Groups 61
settings 64
turning on or off 64
Push-to-Talk. See PTT





R

received calls 55
recent calls 55
redial 56
reminders 75
return a call 57
ring style indicator 41
ring style, setting 49, 51
ring tone 83, 84
ringer ID 58, 69, 75
ringer volume 48, 75
roam indicator 40

S

screen saver 53
security code 49
send key 1, 21, 22
shortcuts 76
signal strength indicator 39
SIM 73
SIM Blocked message 21,
82
SIM card 17, 21, 82
skin 53
soft keys 1, 39
song
 auto repeat 28
sound
 auto repeat 28
speakerphone 78
speed dial 66

94 Index

store your number 22
symbol entry mode 48
synchronizing 80

T

 
 
tap text entry mode 46
telephone number. See
 phone number
text entry 44
text message 72, 73
time, setting 52
timers 78
transfer a call 66
turn on/off 21

U

unlock
 application 82
 keypad 50
 phone 21, 50
 SIM card 82
unlock code 49, 50
USB cables 30

V

video clip 83
videos 25
voice dial 69, 79
voice message 72
voice name, recording 68
voicemail 60








volume 48, 75

W


- wallpaper 52
- Web pages 84
- Web sessions 84
- wireless connection. See
Bluetooth connection

Y

   - your phone number 22





Index **95**

 



www.motorola.com.hk

  

MOTOROLA, the stylized M Logo and all other trademarks indicated as such herein are trademarks of Motorola, Inc.® Reg. U.S. Pat. & Tm. Off. All other product or services names are the property of their respective owners. ©2005 Motorola, Inc. All rights reserved. Printed in PRC.

6887370Z31

