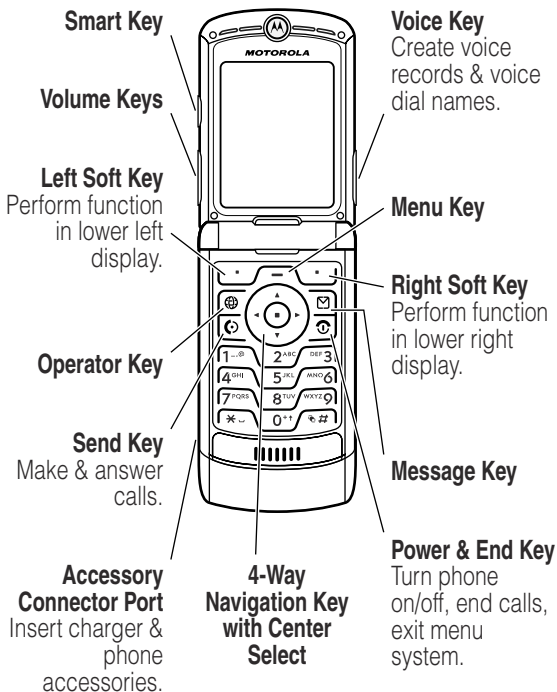


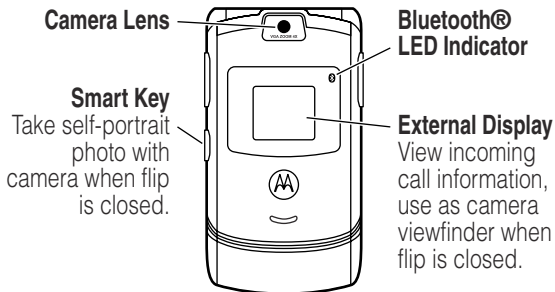
Welcome

Welcome to the world of Motorola digital wireless communications! We are pleased that you have chosen the Motorola V3 GSM wireless phone.



* Note: There may be slight differences between the above illustration and your phone. Refer to your phone for actual appearance.



Check It Out!



* Note: Refer to your phone for actual appearance.

Feature	Description
Take Photo	Press CAMERA (_ /) to activate the camera, point lens at subject, press CAPTURE (_ /) to take a photo.
Take Self-Portrait (flip closed)	Activate the camera, close the flip, use viewfinder to aim lens, press smart key to take a photo.
Send Photo	Send a photo to a phone number or email address: Take photo, then press STORE (_ /) > Send in Message .



Feature	Description
Set Photo as Picture ID	Assign a photo to a phonebook entry to allow picture caller ID: Take photo, then press STORE (⏏) > Apply as Phonebook Entry .
Send Multimedia Message	Send a multimedia message with pictures, animations, sounds, and videos:  > New Message > New Multimedia Msg
Wireless Connection	Set up a Bluetooth® wireless connection to a headset accessory, car kit, or external device:  > Settings > Connection > Bluetooth Link > Setup > Power > On , press BACK (⏏), press > Hands-free > [Look for devices]



Personal Communications Sector
(852)2506-3888 (Hong Kong)

www.motorola.com.hk (Hong Kong)

MOTOROLA and the Stylized M Logo are registered in the US Patent & Trademark Office. The Bluetooth trademarks are owned by their proprietor and used by Motorola, Inc. under license. Java and all other Java-based marks are trademarks or registered trademarks of Sun Microsystems, Inc. in the U.S. and other countries. All other product or service names are the property of their respective owners.

© Motorola, Inc. 2004.

Software Copyright Notice

The Motorola products described in this manual may include copyrighted Motorola and third-party software stored in semiconductor memories or other media. Laws in the United States and other countries preserve for Motorola and third-party software providers certain exclusive rights for copyrighted software, such as the exclusive rights to distribute or reproduce the copyrighted software. Accordingly, any copyrighted software contained in the Motorola products may not be modified, reverse-engineered, distributed, or reproduced in any manner to the extent allowed by law. Furthermore, the purchase of the Motorola products shall not be deemed to grant either directly or by implication, estoppel, or otherwise, any license under the copyrights, patents, or patent applications of Motorola or any third-party software provider, except for the normal, non-exclusive, royalty-free license to use that arises by operation of law in the sale of a product.

Mobile Phone Tools Software Disclaimer

Music or other audio works, whether originating from CD's, MP-3's or some other source, ("Music Materials") may be protected under copyright law. Unauthorized copying of copyrighted works may be contrary to the provisions of the copyright laws of the United States and other countries. It is your responsibility, not Motorola's, to ensure that your use of Mobile Phone Tools software and/or Motorola phones to copy, edit, play or otherwise use any Music Materials does not violate the copyright laws. You are responsible for obtaining any necessary permission and paying any necessary licensing fees for the Music Materials other materials you choose to copy, edit, play or otherwise use. A violation of copyright laws could result in a civil or criminal claim brought against you, even if you don't receive any money or other commercial benefit from your copying or other use of the material. This software should only be used for your personal, noncommercial purposes.

Manual number: 6887301Z78

Contents

Safety and General Information	8
Getting Started	15
About This Guide	15
Installing the SIM Card	16
Battery Use	16
Installing the Battery	18
Charging the Battery	18
Turning Your Phone On	20
Turning Your Phone Off	20
Adjusting Volume	21
Making a Call	21
Answering a Call	22
Viewing Your Phone Number	22
Highlight Features	23
Taking and Sending a Photo	23
Sending a Multimedia Message	26
Using a Bluetooth® Wireless Connection	29
Learning to Use Your Phone	32
Using the Display	32
Using the 4-Way Navigation Key	37
Using the Operator Key	37
Using the Message Key	37
Using Menus	38
Entering Text	40
Using the Smart Key	48
Using the External Display	48
Using the Handsfree Speaker	49
Changing a Code, PIN, or Password	50

Locking and Unlocking Your Phone	51
If You Forget a Code, PIN, or Password.	52
Using the Phonebook	53
Setting Up Your Phone.	56
Setting a Ring Style.	56
Changing the Call Alert	57
Setting the Time and Date	57
Setting a Wallpaper Image	58
Setting a Screen Saver Image	59
Changing Phone Skin	60
Setting a Phone Theme	60
Setting Answer Options.	61
Setting Display Brightness	62
Adjusting the Backlight	62
Setting Display Timeout	62
Storing Your Name and Phone Number	63
Calling Features	64
Turning Off a Call Alert	64
Viewing Recent Calls	64
Redialling a Number	65
Using Automatic Redial.	65
Returning an Unanswered Call	66
Using the Notepad	66
Putting a Call On Hold or Mute	67
Using Call Waiting.	67
Using Caller ID (Incoming Calls).	68
Calling an Emergency Number	68
Dialling International Numbers	69
Calling With 1-Touch Dial	69
Using Voicemail	69
Changing the Active Line	71

Phone Features	72
Main Menu	72
Settings Menu	73
Feature Quick Reference	74
Calling Features	74
Messages	74
Phonebook	75
Personalizing Features	78
Instant Messaging	79
Chat	80
Email	81
Menu Features	81
Special Dialling Features	82
Call Monitoring	83
Handsfree Features	84
Data and Fax Calls	85
Bluetooth® Wireless Connections	85
Network Features	86
Personal Organizer Features	87
Security	88
News and Entertainment	89
MyMobileSoft.com	89
Specific Absorption Rate Data	93
Index	95

Note:

The functions available on this mobile phone may vary in different regions and nations. Please contact your local customer service centres, agencies or retailers if you have any question about the mobile phone functions. Motorola reserves all rights to revise and change this user's manual without obligation to notify any person of such revisions or changes.

Safety and General Information

IMPORTANT INFORMATION ON SAFE AND EFFICIENT OPERATION.
READ THIS INFORMATION BEFORE USING YOUR PHONE.

The information provided in this document supersedes the general safety information in user's guides published prior to December 1, 2002.

Exposure To Radio Frequency (RF) Energy

Your phone contains a transmitter and a receiver. When it is ON, it receives and transmits RF energy. When you communicate with your phone, the system handling your call controls the power level at which your phone transmits.

Your Motorola phone is designed to comply with local regulatory requirements in your country concerning exposure of human beings to RF energy.

Operational Precautions

To assure optimal phone performance and make sure human exposure to RF energy is within the guidelines set forth in the relevant standards, always adhere to the following procedures.

External Antenna Care

Use only the supplied or Motorola-approved replacement antenna. Unauthorized antennas, modifications, or attachments could damage the phone.

Do NOT hold the external antenna when the phone is IN USE. Holding the external antenna affects call quality and may cause the phone to operate at a higher power level than needed. In addition, use of unauthorized antennas may result in non-compliance with the local regulatory requirements in your country.

Phone Operation

When placing or receiving a phone call, hold your phone as you would a wireline telephone.

Body-Worn Operation

To maintain compliance with RF energy exposure guidelines, if you wear a phone on your body when transmitting, always place the phone in a Motorola-supplied or approved clip, holder, holster, case, or body harness for this phone, if available. Use of accessories not approved by Motorola may exceed RF energy exposure guidelines. If you do not use one of the body-worn accessories approved or supplied by Motorola, and are not using the phone held in the normal use position, ensure the phone and its antenna are at least 1 inch (2.5 centimeters) from your body when transmitting.

Data Operation

When using any data feature of the phone, with or without an accessory cable, position the phone and its antenna at least 1 inch (2.5 centimeters) from your body.

Approved Accessories

Use of accessories not approved by Motorola, including but not limited to batteries and antennas, may cause your phone to exceed RF energy exposure guidelines. For a list of approved Motorola accessories, visit our website at www.Motorola.com.

RF Energy Interference/Compatibility

Note: Nearly every electronic device is susceptible to RF energy interference from external sources if inadequately shielded, designed, or otherwise configured for RF energy compatibility. In some circumstances your phone may cause interference.

Facilities

Turn off your phone in any facility where posted notices instruct you to do so. These facilities may include hospitals or health care facilities that may be using equipment that is sensitive to external RF energy.

Aircraft

When instructed to do so, turn off your phone when on board an aircraft. Any use of a phone must be in accordance with applicable regulations per airline crew instructions.

Medical Devices

Pacemakers

Pacemaker manufacturers recommend that a minimum separation of 6 inches (15 centimeters) be maintained between a handheld wireless phone and a pacemaker.

Persons with pacemakers should:

- ALWAYS keep the phone more than 6 inches (15 centimeters) from your pacemaker when the phone is turned ON.
- NOT carry the phone in the breast pocket.
- Use the ear opposite the pacemaker to minimize the potential for interference.
- Turn OFF the phone immediately if you have any reason to suspect that interference is taking place.

Hearing Aids

Some digital wireless phones may interfere with some hearing aids. In the event of such interference, you may want to consult your hearing aid manufacturer to discuss alternatives.

Other Medical Devices

If you use any other personal medical device, consult the manufacturer of your device to determine if it is adequately shielded from RF energy. Your physician may be able to assist you in obtaining this information.

Use While Driving

Check the laws and regulations on the use of phones in the area where you drive. Always obey them.

When using your phone while driving, please:

- Give full attention to driving and to the road.
- Use handsfree operation, if available.
- Pull off the road and park before making or answering a call if driving conditions so require.

Responsible driving best practices may be found at the Motorola website: www.Motorola.com/callsmart.

Operational Warnings

For Vehicles With an Air Bag

Do not place a phone in the area over an air bag or in the air bag deployment area. Air bags inflate with great force. If a phone is placed in the air bag deployment area and the air bag inflates, the phone may be propelled with great force and cause serious injury to occupants of the vehicle.

Potentially Explosive Atmospheres

Turn off your phone prior to entering any area with a potentially explosive atmosphere. Do not remove, install, or charge batteries in such areas. Sparks in a potentially explosive atmosphere can cause an explosion or fire resulting in bodily injury or even death.

Note: The areas with potentially explosive atmospheres referred to above include fueling areas such as below decks on boats, fuel or chemical transfer or storage facilities, areas where the air contains chemicals or particles, such as grain, dust, or metal powders. Areas with potentially explosive atmospheres are often but not always posted.






Blasting Caps and Areas

To avoid possible interference with blasting operations, turn OFF your phone when you are near electrical blasting caps, in a blasting area, or in areas posted “Turn off electronic devices.” Obey all signs and instructions.

Batteries

Batteries can cause property damage and/or bodily injury such as burns if a conductive material such as jewelry, keys, or beaded chains touch exposed terminals. The conductive material may complete an electrical circuit (short circuit) and become quite hot. Exercise care in handling any charged battery, particularly when placing it inside a pocket, purse, or other container with metal objects. **Use only Motorola original batteries and chargers.**

Your battery or phone may contain symbols, defined as follows:

Symbol	Definition
	Important safety information will follow.
	Your battery or phone should not be disposed of in a fire.
	Your battery or phone may require recycling in accordance with local laws. Contact your local regulatory authorities for more information.
	Your battery or phone should not be thrown in the trash.
	Your phone contains an internal lithium ion battery.

Seizures/Blackouts

Some people may be susceptible to epileptic seizures or blackouts when exposed to flashing lights, such as when watching television or playing

video games. These seizures or blackouts may occur even if a person never had a previous seizure or blackout.

If you have experienced seizures or blackouts, or if you have a family history of such occurrences, please consult with your doctor before playing video games on your phone or enabling a flashing-lights feature on your phone. (The flashing-light feature is not available on all products.)

Parents should monitor their children's use of video game or other features that incorporate flashing lights on the phones. All persons should discontinue use and consult a doctor if any of the following symptoms occur: convulsion, eye or muscle twitching, loss of awareness, involuntary movements, or disorientation.

To limit the likelihood of such symptoms, please take the following safety precautions:

- Do not play or use a flashing-lights feature if you are tired or need sleep.
- Take a minimum of a 15-minute break hourly.
- Play in a room in which all lights are on.
- Play at the farthest distance possible from the screen.

Repetitive Motion Injuries

When you play games on your phone, you may experience occasional discomfort in your hands, arms, shoulders, neck, or other parts of your body. Follow these instructions to avoid problems such as tendonitis, carpal tunnel syndrome, or other musculoskeletal disorders:

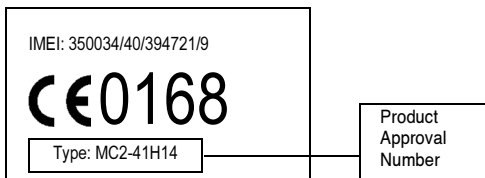
- Take a minimum 15-minute break every hour of game playing.
- If your hands, wrists, or arms become tired or sore while playing, stop and rest for several hours before playing again.
- If you continue to have sore hands, wrists, or arms during or after play, stop playing and see a doctor.

European Union Directives Conformance Statement



Hereby, Motorola declares that this product is in compliance with

- The essential requirements and other relevant provisions of Directive 1999/5/EC
- All other relevant EU Directives



The above gives an example of a typical Product Approval Number.

You can view your product's Declaration of Conformity (DoC) to Directive 1999/5/EC (the R&TTE Directive) at www.motorola.com/rtte - to find your DoC, enter the product Approval Number from your product's label in the "Search" bar on the Web site.

Getting Started



About This Guide



This guide describes the basic features of your Motorola wireless phone.



Selecting a Menu Feature

Use the menu system to access your phone's features. This guide shows you how to select a menu feature from the home screen as follows:

Find the Feature

 > **Recent Calls**
> **Dialled Calls**

This example shows that, from the home screen, you must press the menu key  to open the menu, scroll to and select  **Recent Calls**, then scroll to and select **Dialled Calls**.

Press the 4-way navigation key  to scroll and highlight a menu feature. Press **SELECT** () to select the highlighted menu feature.

Optional Features



This label identifies an optional network, SIM card, or subscription-dependent feature that may not be offered by all service providers in all geographical areas. Contact your service provider for more information.

Optional Accessories



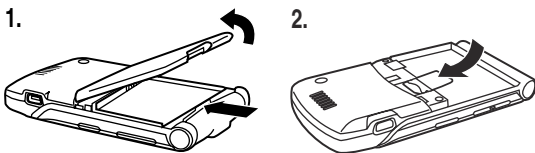
This label identifies a feature that requires an optional Motorola Original™ accessory.

Installing the SIM Card

Your *Subscriber Identity Module* (SIM) card contains your phone number, service details, and phonebook/message memory.

Caution: Do not bend or scratch your SIM card. Avoid exposing your SIM card to static electricity, water, or dirt.

Slide the SIM card under the retention strap to insert it into the card slot as shown below:



Battery Use

Battery performance depends on many factors, including your wireless carrier's network configuration; signal strength; the temperature at which you operate your phone; the features and/or settings you select and use; items attached to the phone's accessory connector; and your voice, data, and other application usage patterns.

Caution: To prevent injuries or burns, do not allow metal objects to contact or short-circuit the battery terminals.

To maximize your battery's performance:

- Always use Motorola Original batteries and battery chargers. The phone warranty does not cover damage caused from using non-Motorola batteries and/or battery chargers.
- New batteries or batteries that have been stored for a long time may require a longer charge time.
- Maintain the battery at or near room temperature when charging.
- Do not expose batteries to temperatures below -10°C (14°F) or above 45°C (113°F). Always take your phone with you when you leave your vehicle.
- When you do not intend to use a battery for a while, store it uncharged in a cool, dark, dry place, such as a refrigerator.
- Batteries gradually wear down and require longer charging times. This is normal. If you charge your battery regularly and notice a decrease in talk time or an increase in charging time, then it is probably time to purchase a new battery.



The rechargeable batteries that power this phone must be disposed of properly and may need to be recycled. Refer to your battery's label for battery type. Contact your local recycling centre for proper disposal methods.

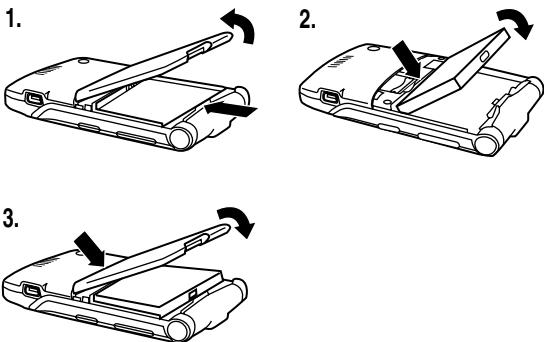
Warning: Never dispose of batteries in a fire because they may explode.



Installing the Battery



™ Your phone is designed to use only Motorola Original batteries and accessories.



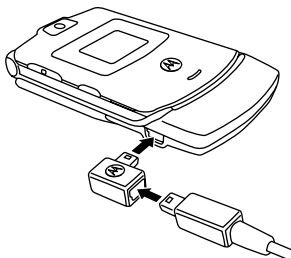
Charging the Battery

New batteries are shipped partially charged. Before you can use your phone, you need to install and charge the battery as described below. Some batteries perform best after several full charge/discharge cycles.

Tip: The angle connector provided with your phone makes it easier for you to use the phone with an attached battery charger or phone accessory.

Action

- 1 Insert the travel charger plug into the detachable angle connector as shown.
- 2 Insert the angle connector plug into the USB connector port on your phone.



- 3 Plug the other end of the travel charger into the appropriate electrical outlet.

Note: It may take up to 10 seconds for your phone to provide a visible or audible indication that the battery is charging.

- 4 When your phone indicates **Charge Complete**, remove the travel charger and angle connector.


Note: You can safely leave the travel charger connected to the phone after charging is complete. This will **not** damage the battery.



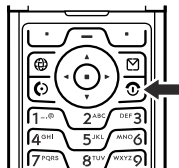
Turning Your Phone On




Action


- 1 Press and hold the power key  for 2 seconds to turn the phone on.

 
 
Note: It may take up to 4 seconds for the display to illuminate after you turn the phone on.



- 2 If necessary, enter your SIM card PIN code and press **OK** () to unlock the SIM card.


Caution: If you enter an incorrect PIN code 3 times in a row, your SIM card is disabled and your phone displays **SIM Blocked**.

- 3 If necessary, enter your 4-digit unlock code and press **OK** () to unlock the phone.

At startup, you may be prompted to personalise your phone. Select **YES** () to set personal phone options, or **NO** () to go to the home screen. For more information about personalizing your phone, see page 78.

Turning Your Phone Off

Action

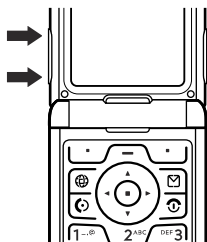
Press and hold the power key  for 2 seconds to turn the phone off.

Adjusting Volume

Press the up or down volume keys to:

- silence an incoming call alert
- increase or decrease earpiece volume during a call
- increase or decrease ringer volume when the home screen is visible (flip must be open)

Tip: At the lowest volume setting, press the down volume key once to switch to vibrate alert. Press it again to switch to silent alert. Press the up volume key to switch back to vibrate alert, then ring alert.



Making a Call


You must be in the home screen to dial a phone number (see page 32).

	Press	To
1	keypad keys	dial the phone number
2		make the call
3		end the call and “hang up” the phone when you are finished




Tip: You can also close the phone flip to end the call.

Answering a Call

 
 
When you receive a call, your phone rings and/or vibrates and displays an incoming call message.

When the phone flip is active, open the phone to answer the call. (To activate, press  > **Settings** > **In-Call Setup** > **Answer Options** > **Open To Answer**.)

If the phone flip is **not** active:

	Press	To
1	 or ANSWER ()	answer the call
2		end the call and “hang up” the phone when you are finished

Viewing Your Phone Number

To view your phone number from the home screen, press  .

While you are on a call, press  > **My Tel. Numbers**.

Note: Your phone number must be stored on your SIM card to use this feature. To store your phone number on the SIM card, see page 63. If you do not know your phone number, contact your service provider.

Highlight Features

You can do much more with your phone than make and receive calls!



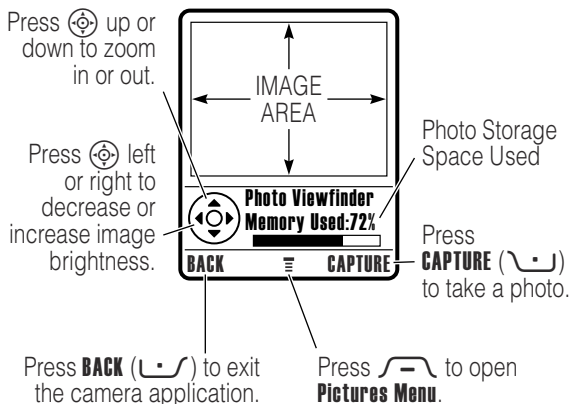
Taking and Sending a Photo

Shortcut: From the home screen, press **CAMERA** (📷) to activate the camera.

To activate your phone's camera from the menu system:

Find the Feature 📷 > **Multimedia** > **Camera**

The active viewfinder image appears on your display.



Point the camera lens at the photo subject, then:



	Press	To
1	CAPTURE (\)	take a photo
2	STORE (\)	view storage options If you choose to store the photo, continue to step 3.
	or	
	DISCARD (\)	delete the photo and return to active viewfinder
3		scroll to Send in Message, Store Only, Apply as Wallpaper, Apply as Screen Saver, or Apply as Phonebook Entry
4	SELECT (\)	perform the storage option

Taking a Self-Portrait

	Action
1	From the home screen, press CAMERA (\) to activate the camera, then close the flip. or Close the flip, then press and hold the smart key to activate the camera and external display viewfinder.
2	Use the external viewfinder to aim the camera lens.
3	Press the smart key to take a photo.
4	Wait 5 seconds for your phone to save the photo and reset the external viewfinder. or Open the flip to store or discard the photo.

Adjusting Camera Settings

Press  to open the **Pictures Menu** when the camera is active. The **Pictures Menu** can include the following options:



Option	Description
Go to Pictures	View pictures and photos stored on your phone.
Auto-Timed capture	Set a timer for the camera to take a photo.
Pictures Setup	Open the setup menu to adjust the following settings:
	<ul style="list-style-type: none">• Auto Repeat: Return to the beginning when the last picture displays in a picture album slideshow.• Shuffle: Set pictures to display randomly when viewing a picture album slideshow.• Lighting conditions: Set to Automatic, Sunny, Cloudy, Indoor (Home), Indoor (Office), or Night.• Exposure: Set to +2, +1, 0, -1, or -2.• Resolution: Set the camera to capture photos at the following resolutions: MMS (160x120 pixels), Medium (320x240 pixels), or High (640x480 pixels)• Shutter Tone: Activate a tone that sounds when you take a photo. Can be set to None, Chimp, Quack, Flix, Boing, or Click.
View free space	See how much memory remains for storing pictures.

Sending a Multimedia Message









A *Multimedia Messaging Service* (MMS) multimedia message contains one or more pages with text and embedded media objects (including photos, pictures, animations, sounds, voice records, and video clips). You can send a multimedia message to other wireless phone users, and to email addresses.

Tip: The layout of all pages in a multimedia message is defined by the layout of the first page. To display a media object at the top of the page, insert it in the first half of the message text. To display a media object at the bottom of the page, insert it in the second half of the message text.

Find the Feature

 > **New Message**
> **New Multimedia Msg**

Press	To
1 keypad keys	enter text on the page
2 	open the MMS Menu
3 	scroll to Insert
4 SELECT ()	display a list of items you can insert
5 	scroll to Picture, Voice Record, Sound, Video, New Page, Quick Note, or Contact Info
6 SELECT ()	select the file type
7 	highlight the file you want







Press	To
8 SELECT (↵)	insert the file To add another page to the message, continue to step 9.
9 ↵	open the MMS Menu to insert a new page
10 ⬇	scroll to Insert
11 SELECT (↵)	display a list of items you can insert
12 ⬇	scroll to New Page
13 SELECT (↵)	insert a new page after the current page Repeat steps 1 to 8 to enter contents for the new page.


When you finish composing the multimedia message:

Press	To
1 OK (↵)	store the message
2 ⬇	scroll to a Send To option: Highlight an existing phonebook entry. Or highlight [One Time Entry] to enter one or more phone numbers or email addresses. Or highlight [New Phonebook Entry] to enter a number/address and add it to the phonebook.



Press	To
3 ADD (↵)	add the phonebook entry to the list of recipients Repeat steps 2 and 3 to add additional phonebook entries to the list.
or	
SELECT (↵)	select [One Time Entry] or [New Phonebook Entry]
4 DONE (↵)	store the numbers/addresses
5 	scroll to Subject
6 CHANGE (↵)	select Subject
7 keypad keys	enter the subject
8 OK (↵)	store the subject
9 CHANGE (↵)	select Attachments to attach a file to the message, if desired
10 	scroll to Picture , Sounds , or Video
11 SELECT (↵)	select the file type
12 	highlight the file you want
13 SELECT (↵)	attach the file
14 BACK (↵)	return to the message editor
15 	scroll to Receipt to request a receipt, if desired
16 CHANGE (↵)	select Receipt



Press	To
17 ADD (↵) or REMOVE (↵)	activate/deactivate the delivery report
18 DONE (↵)	return to the message editor
19 SEND (↵)	send the message
or 	view message details, save the message in the drafts folder, or cancel the message



Using a Bluetooth® Wireless Connection

Your phone supports Bluetooth wireless connections. You can set up a wireless link with a Bluetooth headset or handsfree car kit, or connect to a computer or hand-held device to exchange and synchronize data.

Turning Bluetooth On or Off

The preferred method for connecting your phone to a Bluetooth headset or handsfree car kit is to turn on Bluetooth on your phone, then connect your phone to the headset or car kit.

To turn Bluetooth on:

Find the Feature

 > **Settings** > **Connection**
> **Bluetooth Link** > **Setup**
> **Power** > **On**

This procedure turns Bluetooth on and leaves it on until you turn it off. When your phone's Bluetooth power is on, your handsfree accessory can automatically reconnect to the phone when you turn on the accessory or move it within range of the phone.

 
Note: To extend battery life, use the above procedure and set Bluetooth power to **Off** when not in use.

Searching for Other Devices

To connect your phone to a Bluetooth headset or handsfree device:


Find the Feature


 **> Settings > Connection**
> Bluetooth Link
> Hands-free
> [Look for devices]


If Bluetooth is turned off, your phone asks if you want to **Temporarily power on?** Bluetooth. Press **YES** () to proceed. Alternatively, set **Power** to **On** in the **Setup** menu to turn Bluetooth on and leave it on.

Your phone scans for and displays a list of device(s) located within range of the phone.

Note: If your phone is already connected to a device, you must disconnect from it to search for other devices.

To connect to a device, highlight the device name and press **SELECT** (.

 
The device may request permission to bond with your phone. Select **YES** () and enter the correct PIN code to create a secure connection with the device. When the

connection is made, the Bluetooth indicator  displays in the home screen, and the external Bluetooth LED indicator flashes.

Sending Objects to Another Device

 
You can use a Bluetooth wireless connection to send a picture, sound, video, phonebook entry, datebook event, or bookmark from your phone to another phone, computer, or hand-held device.

Sending a Picture, Sound, or Video

Highlight the object on your phone that you want to send to the other device, then press  > **Copy**.

Select a recognized device name listed in the **Object exchange** menu, or **[Look for devices]** to search for the device to which you want to send the object.

Sending a Phonebook Entry, Datebook Event, or Bookmark

Highlight the item on your phone that you want to send to the other device, then press  > **Send**.

Select a recognized device name listed in the **Object exchange** menu, or **[Look for devices]** to search for the device to which you want to send the item.

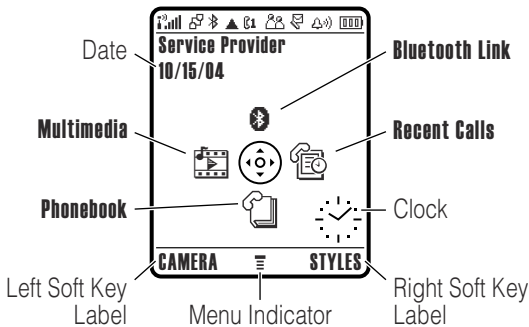




Learning to Use Your Phone


 
See page 1 for a basic phone diagram.


 
Using the Display

The *home screen* is displayed when you are **not** on a call or using the menu. You must be in the home screen to dial a phone number.



Press the 4-way navigation key  up, down, left, or right to select a menu feature icon. If you select a menu icon by mistake, press  to return to the home screen.

The menu indicator  shows that you can press the menu key  to enter the main menu.

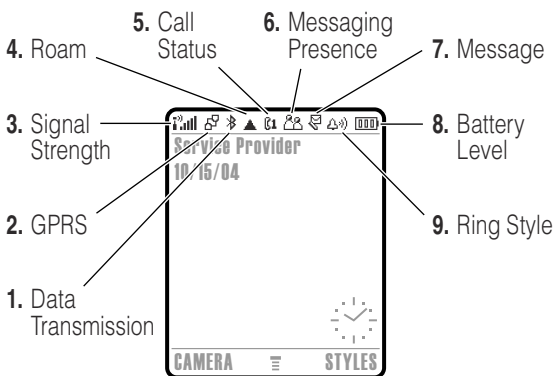
Labels at the bottom corners of the display show the current soft key functions. Press the left soft key  or right soft key  to perform the indicated function.


Notes:


- Your home screen may appear different than shown. For example, the menu feature icons normally are hidden to allow a better view of the wallpaper image. You can still select the menu icons when they are hidden from view. To show or hide menu icons, see page 79.
- Your phone can display an analog or digital clock in the home screen (see page 78).
- Your phone's display normally is visible only when the display backlight is on, or when the display is viewed in direct sunlight. To extend battery life, the backlight turns off automatically when no activity is detected for a period of time. The backlight turns back on when you open the flip or press any key. To set the time that the backlight stays on, see page 62.
- To further extend battery life, you can set the display to turn off, in addition to the backlight, after a period of inactivity. The display turns back on when you open the flip or press any key. To set the time that the display stays on, see page 62.





The following status indicators can display:





1. Data Transmission Indicator – Show connection and data transmission status. The Bluetooth® wireless connection indicator  shows when a Bluetooth connection is active. Other indicators can include:


 = secure packet data transfer

 = unsecure packet data transfer

 = secure application connection

 = unsecure application connection

 = secure *Circuit Switch Data* (CSD) call


 = unsecure CSD call





2. GPRS Indicator – Shows that your phone is using a high-speed *General Packet Radio Service* (GPRS) network connection. GPRS allows faster data transfer speeds. Other


indicators can include:

 = GPRS PDP context active

 = GPRS packet data available


3. Signal Strength Indicator – Vertical bars show the strength of the network connection. You cannot make or receive calls when the no signal indicator  or no transmit indicator  is displayed.

 



4. Roam Indicator – The roam indicator  shows when your phone is seeking or using another network outside your home network.

 


 
5. Call Status Indicator – Shows the call status of your phone. For dual-line-enabled SIM cards, shows the current active phone line. Indicators can include:

 
 = phone in call

 = call forward on

 = line 1 active

 = line 2 active

 = line 1 active, call forward on

 = line 2 active, call forward on





6. Messaging Presence Indicator – Shows when instant messaging is active. Indicators can include:

= IM active

= available for IM

= busy

= invisible to IM

= available for phone calls

= offline

When a Java™ application is active, the Java midlet indicator displays in this location.



7. Message Indicator – Displays when you receive a new message. Indicators can include:

= text message

= voicemail message

= voicemail and text message

= IM message

= active chat session

8. Battery Level Indicator – Vertical bars show the battery charge level. Recharge the battery when **Low Battery** displays and the battery alert sounds.

9. Ring Style Indicator – Shows the ring style setting.

= Loud Ring

= Soft Ring




= Vibrate

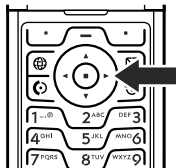
= Vibe then Ring

= Vibe & Ring


= Silent

Using the 4-Way Navigation Key

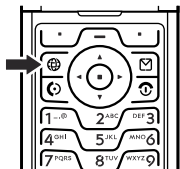
Press the 4-way navigation key  up, down, left, or right to scroll through the menu system, highlight menu items, change feature settings, and play games. Press the *centre select* key  in the centre of the 4-way navigation key to select a highlighted menu item. The centre select key usually performs the same function as the right soft key .




Using the Operator Key

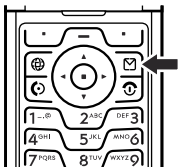
From the home screen, press the operator key  to go to your service provider's portal site to access customized content and services. Please contact your service provider for more details.

If a portal site is not available, pressing the operator key launches the micro-browser.



Using the Message Key




From the home screen, press the message key  to go to the message centre, to send a message or read messages you have received.







Using Menus






From the home screen, press  to enter the main menu.



Press  to scroll to and highlight a menu feature icon in the main menu. Press **SELECT** () or  to select the highlighted menu feature.

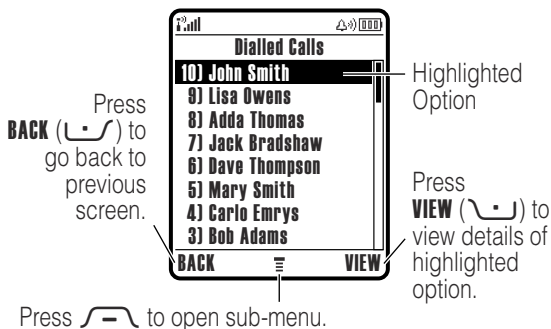
The following icons represent features that may display in the main menu, depending on your service provider and service subscription options.



Menu Icon	Feature	Menu Icon	Feature
	Phonebook		Recent Calls
	Messages		Office Tools

Menu		Menu	
Icon	Feature	Icon	Feature
	Games & Apps		WebAccess
	Multimedia		IM
	Settings		

Selecting a Feature Option

Some features require you to select an option from a list:




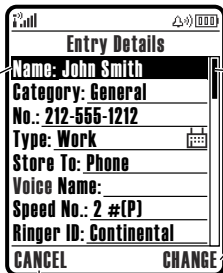
- Press  to scroll up or down to highlight the option you want.
- In a numbered list, press a number key to highlight the option.
- In an alphabetized list, press a key repeatedly to cycle through the letters on the key and highlight the closest matching list option.
- When an option has a list of possible values, press  left or right to scroll through and select a value.
- When an option has a list of possible numeric values, press a number key to set the value.



Entering Text



Some features require you to enter information.

Highlighted option. Press  to scroll to other options.



Scroll down to bottom of list to view more options.

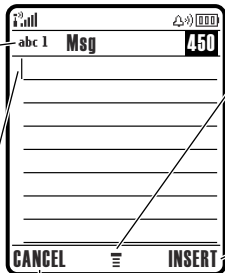
Press **CHANGE** () to set or edit highlighted option.

Press **CANCEL** () to exit without making changes. **DONE** () displays when you enter or edit information.


The message centre lets you compose text messages.

For indicator descriptions, see following section.

Flashing cursor indicates insertion point.



Press  to open sub-menu.

Press **INSERT** () to insert a quick note, picture, animation, sound or contact info.

Press **CANCEL** () to exit without making changes.

Selecting a Text Entry Mode

Multiple text entry modes make it easy for you to enter names, numbers, and messages. The mode you select remains active until you select another mode.

Press $\sqrt{\#}$ in a text entry screen to select one of the following entry modes:

Primary	Your primary text entry mode (see below to set).
Numeric	Enter numbers only (see page 46).
Symbol	Enter symbols only (see page 46).
Secondary	Your secondary text entry mode (see below to set).

Alternatively, you can select a text entry mode in any text entry screen by pressing $\sqrt{-}$ > **Entry Mode**.

Setting Primary and Secondary Text Entry Modes

You can set different primary and secondary text entry modes, and easily switch between modes as needed when you enter data or compose a message.

Press $\sqrt{-}$ > **Entry Setup** in a text entry screen. Select **Primary Setup** or **Secondary Setup**, and choose:

iTAP English	iTAP® software predicts each word as you enter it, to simplify and speed up text entry.
TAP English	Enter individual letters and numbers by pressing a key one or more times.



None

Hide the **Secondary** setting if you prefer not to set a secondary text entry mode (only available for **Secondary Setup**).

Using Capitalization

Press $\sqrt{0+}$ in a text entry screen to change text case. Indicators at the top of the display show the capitalization setting:

abc = no capital letters

Abc = capitalize next
letter only

ABC = all capital letters

The following indicators identify **Numeric** or **Symbol** entry mode:

123 = numeric mode

@ = symbol mode

Using iTAP® Mode





iTAP mode lets you enter words using one keypress per letter. The iTAP software combines your keypresses into common words, and predicts each word as you enter it.

For example, to type “the,” you would press

$\sqrt{8TUV}$ $\sqrt{4GHI}$ $\sqrt{DEF3}$. The iTAP software recognizes that the most common word formed by this keypress combination is “the,” and predicts that “the” is the word you are spelling. Other common words or word fragments that can be spelled by the same keypress combination are presented as alternate choices at the bottom of the display.

If necessary, press $\sqrt{*#}$ in a text entry screen to switch to iTAP mode. If iTAP mode is not set as the **Primary** or **Secondary** entry mode, see page 41.

Entering Words in iTAP Mode

Press	To
1 keypad keys (one press per letter)	show possible letter combinations at the bottom of the display
2  left or right	highlight the combination you want
3  up	accept the predicted word completion, followed by a space
or 	enter the highlighted combination, followed by a space
or SELECT 	select the highlighted combination, with no space You can press keypad keys to add more letters at the end of the combination.



Entering Novel Words in iTAP Mode

You may enter a word that the iTAP software does not recognize. If your word is not shown as a letter combination choice at the bottom of the display:

Action

- 1 Press **DELETE** (⌫) one or more times to delete letters, until you see a letter combination at the bottom of the display that matches the start of the word you want to enter.
- 2 Press ⏪ left or right to highlight the letter combination.
- 3 Press **SELECT** (⏩) to select the letter combination.
- 4 Continue to enter letters and select letter combinations to spell the word.

Your phone automatically stores the novel word and displays it as an option the next time you enter its letter combination. When the memory space for storing novel words is filled, your phone deletes the oldest words to add new words.

Entering Numbers and Punctuation in iTAP Mode

To enter numbers quickly, press and hold a number key to temporarily switch to numeric mode. Press the number keys to enter the numbers you want. Enter a space to revert to **iTAP** mode.


Press ⏪ to enter punctuation or other characters.







Using Tap Mode

This is the basic text entry mode on your phone.

Tap mode cycles through the letters and number of the key you press.


 


If necessary, press  in a text entry screen to switch to **Tap** mode. If **Tap** is not set as the **Primary** or **Secondary** entry mode, see page 41.

Tap Mode Text Entry Rules

 
- Press a keypad key repeatedly to cycle through its characters. For example, you would press  one time to enter “a,” two times to enter “b,” three times to enter “c,” or four times to enter “2.”
- After 2 seconds, **Tap** mode accepts the character, and the cursor moves to the next position.
- The first character of every sentence is capitalized. If necessary, press  down to change the character to lowercase before the cursor moves to the next position.
- Press  to move the flashing cursor to enter or edit message text.
- If you do not want to save your text or text edits, press  to exit without saving.




Entering Words in Tap Mode


	Press	To
1	a keypad key one or more times	enter a letter, number, or symbol
2	keypad keys	enter remaining characters Tip: Press  right to accept a word completion, or  to insert a space.
3	 ()	store the text



 
Using Numeric Mode

In a text entry screen, press  to switch entry modes until the numeric indicator **123** displays.

Press the number keys to enter the numbers you want. When you finish entering numbers, press  to switch to another entry mode.


 
Using Symbol Mode

In a text entry screen, press  to switch entry modes until the symbol indicator @ displays.

Press	To
1 keypad keys (one press per symbol)	show possible symbol combinations at the bottom of the display
2  left or right	highlight the combination you want
3 SELECT 	select the highlighted combination
	You can press keypad keys to add more symbols to the end of the combination.
or	
	enter the highlighted combination

Deleting Letters and Words


Place the cursor to the right of the text you want to delete, and then:

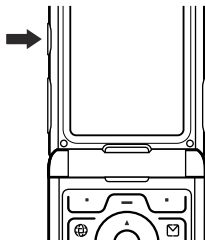
Action
Press DELETE  to delete one letter at a time.
Hold DELETE  to delete all entered text.



Using the Smart Key

The *smart key* gives you another way to perform many basic phone functions. It anticipates the next action you are likely to perform. For example, when you highlight a menu item, you can press the smart key to select it.

You can use the smart key to make and end calls, turn features on and off, and open your phonebook. The smart key usually performs the same function as the right soft key .



Using the External Display

When the flip is closed, the external display shows time and phone status information. It also displays messages to notify you of incoming calls and other events. You can perform the following functions in the external display.

Setting Phone Ring Style

Press	To
1 volume keys	select Ring Styles
2 smart key	set a ring style
3 volume keys	return to the home screen

Returning an Unanswered Call

Your phone keeps a record of your unanswered calls and displays **X Missed Calls** in the external display.

Action

- 1 Press the smart key to display the received calls list.

or

Press the volume keys to dismiss the **Missed Calls** message.

- 2 If necessary, press the volume keys to scroll through the list and highlight an unanswered call.

- 3 Press and hold the smart key to call the number, then open the flip to talk to the other party.

or

Press the smart key to exit without calling.

Tip: With a headset or other handsfree device, you can use this feature to return a call without opening the flip.

Using the Handsfree Speaker

When you activate your phone's integrated handsfree speaker, you can talk to the other party without holding the phone to your ear.

Press **SPEAKER** (📞) to turn the handsfree speaker on or off during a call.



When you turn the handsfree speaker on, your phone displays **Spkrphone On** in the home screen. The handsfree speaker remains on until you press **SPEAKER** (🔊) again or end the call.

Note: The handsfree speaker is disabled when you connect your phone to a handsfree car kit or headset accessory.

Changing a Code, PIN, or Password

Your phone's 4-digit unlock code is originally set to 1234, and the 6-digit security code is originally set to 000000. Your service provider may reset these codes before you receive your phone.

If your service provider has **not** reset these codes, we recommend that you change them to prevent others from accessing your personal information. The unlock code must contain 4 digits, and the security code must contain 6 digits.

You can also reset your SIM card PIN code, PIN2 code, and/or call barring password if necessary.

To change a code or password:

Find the Feature

☰ > **Settings** > **Security**
> **New Passwords**

Locking and Unlocking Your Phone

You can lock your phone manually or set the phone to lock automatically whenever you turn it off.

To use a locked phone, you must enter the unlock code. A locked phone still rings or vibrates for incoming calls or messages, **but you must unlock it to answer.**


You can make emergency calls on your phone even when it is locked (see page 68).



Locking Your Phone Manually

Find the Feature


 > Settings > Security
> Phone Lock > Lock Now

Press	To
1 keypad keys	enter your unlock code
2 OK ()	lock the phone

Unlocking Your Phone

Tip: Your phone's unlock code is originally set to 1234. Your service provider may reset the unlock code to the last 4 digits of your phone number.

At the **Enter Unlock Code** prompt:


Press	To
1 keypad keys	enter your unlock code
2 OK ()	unlock your phone

Setting Your Phone to Lock Automatically

You can set your phone to lock every time you turn it off:

Find the Feature



 > Settings > Security
> Phone Lock
> Automatic Lock > On

	Press	To
1	keypad keys	enter your unlock code
2	OK ()	activate automatic lock

If You Forget a Code, PIN, or Password

Note: Your phone's 4-digit unlock code is originally set to 1234, and the 6-digit security code is originally set to 000000. Your service provider may reset the unlock code to the last 4 digits of your phone number before you receive your phone.

If you forget your unlock code, try entering 1234 or the last 4 digits of your phone number. If that does not work, do the following at the **Enter Unlock Code** prompt:

	Press	To
1		display the unlock code bypass screen
2	keypad keys	enter your security code
3	OK ()	submit your security code

If you forget your security code, SIM card PIN code, PIN2 code, or call barring password, contact your service provider.

Using the Phonebook

This section describes basic phonebook operations. For more information about using the phonebook, see page 75.

Storing a Phone Number

Enter a phone number in the home screen, then press **STORE** (⌨) to create a phonebook entry with that number. Press **DONE** (⌨) to store the number by itself, or fill in the other fields as necessary to complete the entry.

If you assign a **Name** to the phonebook entry, you can select **MORE** to store another number (for example, a work number) for the same **Name**.

Recording a Voice Name

When creating a phonebook entry, scroll to **Voice Name** and press **RECORD** (⌨). Press and release the voice key and say the entry's name (within 2 seconds). When prompted, press and release the voice key and repeat the name.

Note: This option is not available for entries stored on the SIM card.



Dialling a Number

Press $\sqrt{-}$ > **Phonebook**, highlight the phonebook entry, press \odot to call.

Shortcut: In the phonebook, press a keypad key one or more times to jump to entries that begin with the key's letters.

Voice Dialling a Number

Press and release the voice key, and say the entry's name (within 2 seconds).

Sorting Phonebook Entries

Press $\sqrt{-}$ > **Phonebook**, press $\sqrt{-}$ > **Setup** > **Sort by**, then select whether you want to sort the phonebook list by **Name**, **Speed No.**, **Voice Name**, or **Email**.

When sorting by **Name**, you can view **All Contacts** or just the **Primary Contacts** for each name. To set the primary number for a name, see page 77.



Tip: In **Primary Contacts** view mode, highlight a name and press \odot left or right to view other numbers associated with the name.

Setting a Picture ID for a Phonebook Entry



Press $\sqrt{-}$ > **Phonebook** > *entry*, press $\sqrt{-}$ > **Edit** > **Picture** > *picture name*.

Also see pages 3 and 23.

Setting Picture ID View

Press  > **Phonebook**, press  > **Setup** > **View by** > **Picture**.

Viewing Entries By Category

Press  > **Phonebook**, press  > **Categories**, then select whether you want to view **All** entries, entries in a predefined category (**Business**, **Personal**, **General**, **VIPs**), or entries in a category you created.

To set the category for a phonebook entry, see page 76.



Setting Up Your Phone

Setting a Ring Style

You can set the following ring styles on your phone:

- **Loud**
- **Soft**
- **Vibrate**
- **Vibe & Ring**
- **Vibe then Ring**
- **Silent**

Each ring style is a profile that uses a different set of ring tone alerts or vibration alerts to notify you of incoming calls, text messages, and other events. The **Silent** setting silences your phone until you set another ring style.

To set a ring style:


Find the Feature

 **> Settings > Ring Styles**
> Style > style name





 
The ring style indicator shows the current ring style setting (see page 36).

Changing the Call Alert

You can change the alert that a ring style uses to notify you of incoming calls or other events. Any changes you make are saved to the ring style profile.

Find the Feature  > **Settings** > **Ring Styles**
> **Style Detail**

 
Note: *Style* represents the current ring style. You cannot set an alert for the **Silent** ring style setting.

	Press	To
1		scroll to Calls (or Line 1 or Line 2 for dual line phones)
2	CHANGE ()	select the event
3		scroll to the alert you want
4	SELECT ()	select the alert
5	BACK ()	save the alert setting

The ring style profile contains additional settings for other events, and settings for ringer ID, ringer and keypad volume. You can change ring style profile settings as desired to personalise the ring style.

Setting the Time and Date

You must set the time and date to use the datebook.

Find the Feature  > **Settings** > **Initial Setup**
> **Time and Date**












Setting a Wallpaper Image

Set a photo, picture, or animation as a wallpaper (background) image in your phone's home screen. The wallpaper image appears as a faint watermark in text and menu displays.

Find the Feature

 > **Settings** > **Personalise**
> **Wallpaper**

Press	To
1 	scroll to Picture
2 CHANGE ()	open the picture viewer
3  up or down	scroll to a picture/animation Scroll to (None) to turn off the wallpaper image.
4 SELECT ()	select the image
5 	scroll to Layout
6 CHANGE ()	adjust the image layout
7 	scroll to Centre , Tile , or Fit-to-screen Centre places the image in the centre of the display. Tile fills the display with adjacent copies of the image. Fit-to-screen resizes the image, if necessary, to fit the display.
8 SELECT ()	confirm the layout setting
9 BACK ()	save wallpaper settings









 
Setting a Screen Saver Image

Set a photo, picture, or animation as a screen saver image. The screen saver image displays when the flip is open and no activity is detected for a period of time. If necessary, the image shrinks to fill the display. An animation repeats for 1 minute, then the first frame of the animation displays.

Tip: Turn off the screen saver to extend battery life.

Find the Feature

 > **Settings** > **Personalise**
> **Screen Saver**


Press	To
1 	scroll to Picture
2 CHANGE ()	open the picture viewer
3  up or down	scroll to a picture/animation Scroll to (None) to turn off the screen saver image.
4 SELECT ()	select the image
5 	scroll to Delay
6 CHANGE ()	set the delay interval
7 	scroll to the inactivity interval that starts the screen saver
8 SELECT ()	select the inactivity interval
9 BACK ()	save screen saver settings



Changing Phone Skin

Change the look and feel of your phone's user interface by selecting a different skin setting.

Find the Feature

 > Settings > Personalise
> Skin > skin

Your phone displays the new skin.

Setting a Phone Theme

A *phone theme* consists of a bundled set of image and sound files with a specific theme (such as a special event or cartoon character) that you can apply collectively to your phone. Phone themes typically include a wallpaper image, screen saver image, and ring tone. Your phone includes several preloaded themes. You can download and install additional themes on your phone.

Downloading a Theme

To download a theme from a Web page with the micro-browser, see page 91. When you install the theme, you can instantly apply its screen saver, wallpaper, and ring tone when your phone prompts you to **Apply Theme Now?**

Selecting a Theme

You can apply any of the themes installed on your phone.


Note: If one of a theme's components is not available, then a default setting is applied.


 


 
Find the Feature

 > Multimedia > Themes
> theme

Deleting a Theme

You cannot delete the preloaded themes on your phone. To delete one or all of the themes that you have downloaded and installed:

Find the Feature  > **Multimedia** > **Themes**

Press	To
1 	scroll to the theme you want to delete
2 	open the Themes Menu
3 	scroll to Delete or Delete All
4 SELECT ()	select the option
5 YES ()	confirm deletion

Setting Answer Options



You can use additional, alternative methods to answer an incoming call.

Multi-key answer by pressing any key



Open To Answer answer by opening the flip

To activate or deactivate an answer option:

Find the Feature  > **Settings** > **In-Call Setup**
> **Answer Options**

Press	To
1 	scroll to Multi-key or Open To Answer
2 CHANGE ()	select the option



Press	To
3 	scroll to On or Off
4 SELECT ()	confirm the setting

Setting Display Brightness

Find the Feature

 > **Settings** > **Initial Setup**
> **Brightness**

Adjusting the Backlight

Set the amount of time that the display backlight remains on.

Find the Feature

 > **Settings** > **Initial Setup**
> **Backlight**

Note: Your phone's display normally is visible only when the display backlight is on, or when the display is viewed in direct sunlight. To extend battery life, the backlight turns off automatically when no activity is detected for a period of time. The backlight turns back on when you open the flip or press any key.

Setting Display Timeout

To further extend battery life, you can set the display to turn off (in addition to the backlight) when no activity is detected for a period of time.

Find the Feature

 > **Settings** > **Initial Setup**
> **Display Timeout**

You can set the display to stay on for 1 or 2 minutes, or set **Off** to disable display timeout.

Note: The display turns back on when you open the flip or press any key.



Storing Your Name and Phone Number



To store or edit your name and phone number information on your SIM card:

Find the Feature

 > **Settings** > **Phone Status**
> **My Tel. Numbers**

Shortcut: Press   from the home screen to view and edit your name and phone number(s).

If you do not know your phone number, contact your service provider.



Calling Features

For basic instructions on how to make and answer calls, see page 21.

Turning Off a Call Alert


You can turn off your phone's incoming call alert before answering the call.

Action

- 1 Press the volume keys to turn off the alert.
- 2 Open the flip (or press the button on a handsfree headset) to answer the call.

Viewing Recent Calls

Your phone keeps lists of incoming and outgoing calls, even for calls that did not connect. The most recent calls are listed first. The oldest calls are deleted as new calls are added.



Shortcut: Press  from the home screen to view the dialled calls list.

Find the Feature




 
 > Recent Calls

Press




To

- | | | |
|---|---|---|
| 1 |  | scroll to Received Calls or Dialled Calls |
| 2 | SELECT () | select the list |



Press	To
3 	scroll to an entry Note: ✓ means the call connected.
4 	call the entry's number
or VIEW 	view entry details (such as time and date of call)
or 	open the Last Calls Menu to perform other procedures


 
Redialling a Number

Press	To
1 	view the dialled calls list
2 	scroll to the entry you want to call
3 	redial the number

Using Automatic Redial



When you receive a busy signal, your phone displays **Call Failed, Number Busy**.


Press	To
 or RETRY 	redial the number




When the call goes through, your phone rings or vibrates one time, displays **Redial Successful**, and connects the call.



Returning an Unanswered Call


Your phone keeps a record of your unanswered calls, and displays:




- the missed call indicator 
- **X Missed Calls**, where **X** is the number of missed calls

Press	To
1 VIEW ()	display the received calls list
2 	select a call to return
3 	make the call

Using the Notepad



The most recent set of digits entered on the keypad are stored in your phone's *notepad* memory. This can be a phone number that you called, or a number that you jot down during a call, for later use. To retrieve the number stored in the notepad:

Find the Feature  > Recent Calls > Notepad

Press	To
	call the number
or	
STORE ()	create a phonebook entry with the number in the No. field
or	
	open the Dialling Menu to attach a number or insert a special character







Putting a Call On Hold or Mute

Press	To
 > Hold	put all active calls on hold
or	
 > MUTE	mute all active calls

Using Call Waiting



When you are on a call, an alert tone sounds to indicate that you have received a second call.

Press	To
1 	answer the new call
2 SWITCH ()	switch between calls
or	
LINK ()	connect the 2 calls
or	
 > End Call on Hold	end the call on hold

If necessary, you must turn on call waiting to use the feature. To turn call waiting on or off:

Find the Feature  > Settings > In-Call Setup
> Call Waiting



Using Caller ID (Incoming Calls)



Calling line identification (caller ID) displays the phone number for incoming calls in your phone's external and internal displays.


The phone displays the caller's name (and picture ID, if available) when the name is stored in your phonebook, or **Incoming Call** when caller ID information is not available.

You can also set your phone to play a distinctive ringer ID for specific entries stored in your phonebook. For more information, see page 75.

Calling an Emergency Number

Your service provider programs one or more emergency phone numbers, such as 999 or 112, that you can call under any circumstances, even when your phone is locked or the SIM card is not inserted.


Note: Emergency numbers vary by country. Your phone's preprogrammed emergency number(s) may not work in all locations, and sometimes an emergency call cannot be placed due to network, environmental, or interference issues.

Press	To
1 keypad keys	dial the emergency number
2 	call the emergency number



Dialling International Numbers



If your phone service includes international dialling, press and hold  to insert the local international access code (+) for the country from which you are calling. (Inserting + enables your phone to make an international call.) Then press the keypad keys as usual to dial the country code and phone number.



Calling With 1-Touch Dial

To call phonebook entries 1 through 9, press and hold the single-digit speed dial number for one second.

You can set 1-touch dial to call the entries in your phone memory phonebook or the SIM card phonebook:

Find the Feature

 > Settings > Initial Setup
> 1-Touch Dial

Press	To
1 	scroll to the location you want
2 SELECT ()	select the location

Using Voicemail



Voicemail messages that you receive are stored on the network. To listen to your messages, you must call your voicemail phone number.

Note: Your service provider may include additional information about using this feature.




Listening to Voicemail Messages

Find the Feature

 > Voicemail

The phone calls your voicemail phone number. If no voicemail number is stored, your phone prompts you to store a number.

Receiving a Voicemail Message

When you receive a voicemail message, your phone displays the voicemail message indicator  and the **New Voicemail** notification.

Press	To
CALL (📞)	listen to the message

The phone calls your voicemail phone number. If no voicemail number is stored, your phone prompts you to store a number.

Storing Your Voicemail Number

If necessary, use the following procedure to store your voicemail phone number on your phone. Usually, your service provider has already done this for you.

Find the Feature

  > Voicemail Setup
> Voicemail No.

Press	To
1 keypad keys	enter your voicemail number
2 OK (📞)	store the number



Note: You cannot store a **p** (pause), **w** (wait), or **n** (number) character in this number. If you want to store a voicemail number with these characters, create a phonebook entry for it. Then, you can use the entry to call your voicemail.

Changing the Active Line



Change the active phone line to make and receive calls from your other phone number.

Note: This feature is available only for dual-line-enabled SIM cards.

Find the Feature

 > **Settings** > **Phone Status**
> **Active Line**

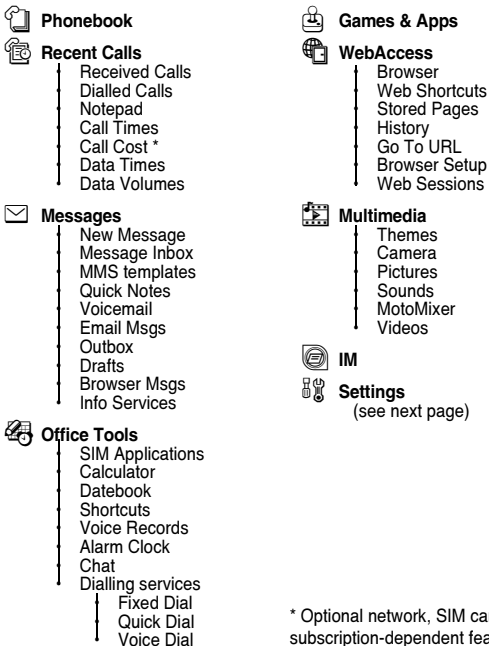
The call status indicator in the display shows the currently active phone line (see page 35).



Phone Features

Main Menu

This is the standard main menu layout. **Menu organization and feature names may vary on your phone.** Not all features may be available on your phone.



* Optional network, SIM card or subscription-dependent features.

Settings Menu



Personalise

- Home screen
- Main Menu
- Skin
- Greeting
- Wallpaper
- Screen Saver
- Quick Dial



Ring Styles

- Style
- Style Detail



Connection

- Bluetooth Link
- Sync



Call Divert

- Voice Calls
- Fax Calls
- Data Calls
- Cancel All
- Divert Status



In-Call Setup

- In-Call Timer
- Call Cost Setup *
- My Caller ID
- Answer Options
- Call Waiting



Initial Setup

- Time and Date
- 1-Touch Dial
- Display Timeout
- Backlight
- Scroll
- Language
- Brightness
- DTMF
- Master Reset
- Master Clear



Phone Status

- My Tel. Numbers
- Credit Info/Available *
- Active Line
- Battery Meter



Headset

- Auto Answer
- Voice Dial



Car Settings

- Auto Answer
- Auto Handsfree



Network

- New Network
- Network Setup
- Available Networks
- My Network List
- Service Tone
- Call Drop Tone



Security

- Phone Lock
- Lock Application
- Fixed Dial
- Call Barring
- SIM PIN
- New Passwords
- Certificate Mgmt



Java Settings

- Java System
- Delete All Apps
- App Vibration
- App Volume
- App Priority
- App Backlight
- Set standby app
- DNS IP


 





* Optional network, SIM card or subscription-dependent features.







Feature Quick Reference

This section helps you locate and use additional phone features that are not described in this guide.












Calling Features

Feature	Description	
Conference Call	During a call: Dial next number, press  , press LINK ()	
Call Diverting	Set up or cancel call diverting:  > Settings > Call Divert	
Call Barring	Restrict outgoing or incoming calls:  > Settings > Security > Call Barring	



Messages


 
 
 
 
 

 
Feature	Description	
Send Text Message	Send a text message:  > New Message > New Short Msg	
Send Multimedia Message	Send a multimedia message:  > New Message > New Multimedia Msg	















Feature	Description
Send Letter	Send a multimedia letter:  > New Message > New Letter 
Use MMS Template	Open an MMS template with preloaded media:  > New Message > MMS templates 
Read New Message	Read a new text or multimedia message that you have received: Press READ () when the New Message notification is displayed. 
Received Messages	Read received messages:  > Message Inbox Tip: Press  to perform various operations on the message. 
Store Message Objects	Go to a multimedia message page, or highlight an object in a letter, then:  > Store 

Phonebook

Feature	Description
Add New Entry	Add a new entry to the phonebook:  > Phonebook  > New > Phone Number or Email Address 

Feature	Description
Set Ringer ID for Entry	<p>Assign a distinctive ringer alert to a phonebook entry:</p> <p> > Phonebook > <i>entry</i></p> <p> > Edit > Ringer ID > <i>ringer name</i></p> <p>Note: The Ringer ID option is not available for entries stored on the SIM card.</p>
Set Picture ID for Entry	<p>Assign a photo or picture to a phonebook entry:</p> <p> > Phonebook > <i>entry</i></p> <p> > Edit > Picture > <i>picture name</i></p> <p>Note: The Picture option is not available for entries stored on the SIM card.</p>
Set Picture ID View	<p>View phonebook entries as text list, or with picture caller ID photos:</p> <p> > Phonebook</p> <p> > Setup > View by > <i>view name</i></p>
Set Category for Entry	<p>Set the category for a phonebook entry:</p> <p> > Phonebook > <i>entry</i></p> <p> > Edit > Category > <i>category name</i></p> <p>Note: The Category option is not available for entries stored on the SIM card.</p>






Feature	Description
Set Category View	Set a phonebook category view:  > Phonebook  > Categories > <i>category view</i>
Sort Phonebook List	Set the order in which phonebook entries are listed:  > Phonebook  > Setup > Sort by > <i>sort order</i>
Set Primary Number	Set the primary number for a phonebook entry with multiple numbers:  > Phonebook , highlight the entry, press  > Set Primary > <i>phone number</i> .
Copy Phonebook Entry	Copy a phonebook entry between the phone and SIM card:  > Phonebook , highlight the entry, press  > Copy > Entries > To
Send Phonebook Entry to Another Device	Send a phonebook entry to another phone, computer, or device:  > Phonebook , highlight the entry, press  > Send
Create Group Mailing List	Create a group mailing list as a phonebook entry:  > Phonebook  > New > Mailing List




Personalizing Features

Feature	Description
Ring Style	Change the ring alert for an event: ☰ > Settings > Ring Styles > Style Detail > <i>event name</i>
Ringer IDs	Activate distinctive ring alerts assigned to phonebook entries: ☰ > Settings > Ring Styles > Style Detail > Ringer IDs
Ring Volume	Set ringer volume: ☰ > Settings > Ring Styles > Style Detail > Ring Volume
Keypad Volume	Set keypad keypress volume: ☰ > Settings > Ring Styles > Style Detail > Key Volume
Reminders	Set reminder alerts for messages that you receive: ☰ > Settings > Ring Styles > Style Detail > Reminders
Clock View	Display an analog clock or digital time readout in the home screen: ☰ > Settings > Personalise > Home screen > Clock
Menu View	Display the main menu as graphic icons or as a text-based list: ☰ > Settings > Personalise > Main Menu > View



Feature	Description
Main Menu	Reorder your phone's main menu:  > Settings > Personalise > Main Menu > Reorder
Show or Hide Menu Icons	Show or hide menu feature icons in the home screen:  > Settings > Personalise > Home screen > Home Keys > Icons
Change Soft Keys & Menu Icons	Change soft key labels and menu feature icons in the home screen:  > Settings > Personalise > Home screen > Home Keys
Shortcuts	Create a shortcut to a menu item: Highlight the menu item, then press and hold  . Use a shortcut: Press  , then press the shortcut number.

Instant Messaging

Feature	Description
Log In	Log in to instant messaging:  > IM > Log In
Find Others Online	After you sign on: Select Contact List to see a list of other users.



Feature	Description
Start Conversation	Start a conversation: From your Contact List , highlight a name in Online Contacts , press SEND IM (📞).
Open Active Conversation	Open a conversation in progress: From your Contact List , highlight a name in Conversations , press VIEW (📞).
End Conversation	From the conversation display: 📞 > End Conversation
Log Out	Log out of instant messaging: Select Log Out from the IM Online menu.



Chat

Feature	Description
Start Chat	Start a new chat session: 📞 > Office Tools > Chat 📞 > New Chat
Receive Chat Request	When you receive a chat request: Press ACCEPT (📞) or IGNORE (📞).





Feature	Description
End Chat	During a chat session:  > End Chat 


Email

Feature	Description
Send Email Message	Send an email message:  > New Message > New Email 
Read Email Message	Read a new email message that you have received: Press READ (⏮). 






Menu Features

Feature	Description
Language	Set menu language:  > Settings > Initial Setup > Language
Master Reset	Reset all options <i>except</i> unlock code, security code, and lifetime timer:  > Settings > Initial Setup > Master Reset





Feature	Description
Master Clear	<p>Reset all options <i>except</i> unlock code, security code, and lifetime timer, and clear all user settings and entries <i>except</i> SIM card information:</p> <p> > Settings > Initial Setup > Master Clear</p> <p>Caution: Master clear erases all user-downloaded content (including photos and sounds) and user-entered information (including phonebook and datebook entries) stored in your phone's memory. After you erase the information, you cannot recover it.</p>


Special Dialling Features

Feature	Description
Fixed Dial	<p>Turn fixed dialling on or off:</p> <p> > Settings > Security > Fixed Dial</p> <p>Use the fixed dial list:</p> <p> > Office Tools > Dialling services > Fixed Dial</p> 
Quick Dial	<p>Dial preprogrammed phone numbers:</p> <p> > Office Tools > Dialling services > Quick Dial</p> 





Feature	Description
DTMF Tones	<p>Activate DTMF tones:  > Settings > Initial Setup > DTMF</p> <p>Send DTMF tones during a call: Press number keys.</p> <p>Send stored numbers as DTMF tones during a call: Highlight a number in the phonebook or recent calls lists, then press  > Send Tones.</p>



Call Monitoring

Network connection time is the elapsed time from the moment you connect to your service provider's network to the moment you end the call by pressing . This time includes busy signals and ringing.

The amount of network connection time you track on your resettable timer may not equal the amount of time for which you are billed by your service provider. For billing information, please contact your service provider directly.

Feature	Description
Call Times	<p>View call timers:  > Recent Calls > Call Times</p> 






Feature	Description
In-Call Timer	Display time or cost information during a call:  > Settings > In-Call Setup > In-Call Timer
Call Cost	View call cost trackers:  > Recent Calls > Call Cost



Handsfree Features

Note: The use of wireless devices and their accessories may be prohibited or restricted in certain areas. Always obey the laws and regulations on the use of these products.

Feature	Description
Auto Answer (car kit or headset)	Automatically answer calls when connected to a car kit or headset:  > Settings > Car Settings or Headset > Auto Answer
Voice Dial (headset)	Enable voice dial with headset send/end key:  > Settings > Headset > Voice Dial
Auto Handsfree (car kit)	Automatically route calls to a car kit when connected:  > Settings > Car Settings > Auto Handsfree



Data and Fax Calls



 



 

Feature	Description
Send Data or Fax	Connect your phone to the device, then place the call through the device application.
Receive Data or Fax	Connect your phone to the device, then answer the call through the device application.





Bluetooth® Wireless Connections

Feature	Description
Make Phone Visible to Other Device	Allow an unknown Bluetooth device to discover your phone: ↶ > Settings > Connection > Bluetooth Link > Setup > Find Me
Connect to Recognized Device	Connect to a recognized handsfree device: ↶ > Settings > Connection > Bluetooth Link > Hands-free > <i>device name</i>
Disconnect From Device	Disconnect from a device: Highlight the device name and press DROP (↵).









Feature	Description	
Switch to Device During Call	Switch to a headset or car kit during a call:  > Use Bluetooth	
Move Multimedia Object to Device	Move a multimedia object to another device: Highlight the object, press  > Move , select the device name. Caution: Moving an object deletes the original object from your phone.	
Edit Device Properties	Edit the properties of a recognized device: Highlight the device name and press  > EDIT .	
Set Bluetooth Options	Set your phone's Bluetooth options:  > Settings > Connection > Bluetooth Link > Setup	





Network Features

Feature	Description	
Network Settings	View network information and adjust network settings:  > Settings > Network	




Personal Organizer Features

Feature	Description
Set Alarm	Set an alarm:  > Office Tools > Alarm Clock
Turn Off Alarm	Turn off alarm: Press DISABLE () or  . Set delay: Press SNOOZE ().
Add New Datebook Event	Add a new event to the datebook:  > Office Tools > Datebook , highlight the day, press  , press  > New
View Datebook Event	View or edit event details:  > Office Tools > Datebook , highlight the day, press  , press VIEW ()
Event Reminder	View an event reminder: VIEW () Dismiss an event reminder: EXIT ()
Create Voice Record	Create a voice record: Press and hold voice key, speak into the phone, release voice key Note: Recording phone calls is subject to varying state and federal laws regarding privacy and recording of conversations.
Play Voice Record	Play back a voice record:  > Office Tools > Voice Records > <i>voice record</i>



Feature	Description
Calculator	Calculate numbers:  > Office Tools > Calculator
Currency Converter	Convert currency:  > Office Tools > Calculator  > Exchange Rate Enter exchange rate, press OK (OK), enter amount, press  > Convert Currency.

Security

Feature	Description
SIM PIN	Lock or unlock the SIM card:  > Settings > Security > SIM PIN Caution: If you enter an incorrect PIN code 3 times in a row, your SIM card is disabled and your phone displays SIM Blocked .
Lock Application	Lock phone applications:  > Settings > Security > Lock Application
Certificate Management	Enable or disable security certificates stored on your phone:  > Settings > Security > Certificate Mgmt



News and Entertainment

MyMobileSoft.com

Introduction

MyMobileSoft.com¹ provides download of both free and paid software for your Motorola handset. Depends on each model, you may download games, ring tones, screen savers, wall papers, e-books, financial and others software from MyMobileSoft.com.

1. All software and applications contained on MyMobileSoft.com are third party products and provided as is. Motorola or its subsidiaries make no representations or warranties, expressly or impliedly. By way of example but not of limitation, Motorola or its subsidiaries make no representations or warranties of merchantability or fitness for a particular purpose, or that the use of the software and applications will not infringe any intellectual property rights. Motorola or its subsidiaries shall not be liable for any damages of any kind arising out of or relating to the use or inability to use the software and applications and services thereof. Amendment and availability of these software and applications are subject to change without any prior notice.

For more information, please visit the internet website :
www.mymobilesoft.com



Access to MyMobileSoft.com²

Find the Feature

 > Office Tools
> Shortcuts > 
> GO TO

OR

 


 
 > 





 







This link guides you to the service of MyMobileSoft.com, which provides software and applications for your newly bought Motorola Mobile Phone.

2. You need to subscribe WAP service from your local operators, please make sure that you set up your handset correctly with appropriate parameters provided by your local operators.




www.mymobilesoft.com

Unlimited surprises waiting for
you to download

Feature	Description
Manage Pictures	Manage pictures and animations:  > Multimedia > Pictures
Manage Sounds	Manage ring tones and music that you have downloaded or composed:  > Multimedia > Sounds
Manage Video Clips	Manage video clips:  > Multimedia > Videos
Apply Phone Theme	Apply a grouped set of image and sound files to your phone:  > Multimedia > Themes > <i>theme</i>

Feature	Description
Edit Sounds With MotoMixer	Edit MIDI-based songs that you can use with your phone:  > Multimedia > MotoMixer > [New MotoMixer] or <i>mix file name</i>
Launch Micro-Browser	Start a micro-browser session: Press  
Download Objects from Web Page	Download a picture, sound, or phone theme from a Web page: Highlight the file, press SELECT () , press STORE (). Note: The maximum bit rate of downloading a MP3 file is 96 kbps. 
Web Sessions	Select or create a Web session:  > WebAccess > Web Sessions 
Download Game or Application (Micro-Browser)	Download a Java™ game or application with the micro-browser:  > WebAccess > Browser , highlight the application, press SELECT () , press DOWNLOAD () 



Feature	Description
Launch Game or Application	Launch a Java game or application:  > Games & Apps , highlight the application, press SELECT ()
Create Ring Tones	Create iMelody ring tones that you can use with your phone:  > Multimedia > Sounds > [New iMelody]



Specific Absorption Rate Data

This model phone meets the international standards for exposure to radio waves.

Your mobile phone is a radio transmitter and receiver. It is designed and manufactured not to exceed limits for exposure to radio frequency (RF) energy. These limits are part of comprehensive guidelines and establish permitted levels of RF energy for the general population. The guidelines are based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. The guidelines include a substantial safety margin designed to assure the safety of all persons, regardless of age and health.

The exposure standard for mobile phones employs a unit of measurement known as the Specific Absorption Rate, or SAR. Under the guidelines for your phone model, the SAR limit is 2.0 W/kg.¹ Tests for SAR are conducted in accordance with CENELEC² testing procedures using standard operating positions with the phone transmitting at its highest certified power level in all tested frequency bands. Although the SAR is determined at the highest certified power level, the actual SAR of the phone while operating can be well below the maximum value. This is because the phone is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a base station, the lower the power output of the phone.

Before a phone model is available for sale to the public, it is tested to confirm compliance with the guidelines. The tests are performed in positions that conform to a uniform testing methodology determined by an expert standards body. The highest SAR value for this model phone when tested for use at the ear is 0.62 W/kg.³

While there may be differences between the SAR levels of various phones and at various positions, they all meet the governmental requirements for safe exposure. Please note that improvements to this

product model could cause differences in the SAR value for later products; in all cases, products are designed to be within the guidelines.

1. The SAR limit recommended by international guidelines (ICNIRP) for mobile phones used by the public is 2.0 watts/kilogram (W/kg) averaged over ten grams of tissue. The limit incorporates a substantial margin for safety to give additional protection for the public and to account for any variations in measurements.
2. CENELEC is a European Union standards body.
3. Additional related information includes the Motorola testing protocol, assessment procedure, and measurement uncertainty range for this product.

Index

A

- accessories 16, 49
- active line indicator 35
- active line, changing 71
- alarm clock 87
- alert
 - creating 92
 - defined 56
 - setting 21, 48, 56, 57, 78
 - turning off 21, 64
- animation
 - downloading 75, 91
 - screen saver 59
 - viewing 90
 - wallpaper 58
- answering a call 22, 61
- application, locking and
 - unlocking 88
- automatic redial 65

B

- backlight 62
- barring calls 74
- battery
 - charging 18
 - extending battery life 16, 30, 33, 59, 62

installing 18

level indicator 36

Bluetooth 3, 29, 77, 85, 86

brightness, setting 62

browser. See micro-browser

C

calculator 88

call

alert, setting 57

alert, turning off 21, 64

answer options 61

answering 22

barring 74

barring password,
changing 50

call waiting 67

costs 84

deleting 64

dialled calls list 64

dialling 21

diverting 74

emergency number 68

ending 21, 22

handsfree speaker 49

hold 67

international access code
69

- making 21
- received calls list 64
- receiving 22
- recent calls 64
- ring style 21, 48, 56, 78
- storing 64
- timers 83, 84
- unanswered call 49, 66
- Call Failed, Number Busy
 - message 65
- call waiting 67
- caller ID 3, 24, 54, 55, 68, 76
- calling line identification.
 - See caller ID
- camera
 - self portrait 24
 - taking a photo 2, 23
- car kit 84
- centre select key 37
- certificate management 88
- chat 80
- clock 32, 57, 78
- codes
 - changing 50
 - default 50, 51, 52
 - forgetting 52
- conference call 74
- cursor 40
- customizing the menu 78

D

- data call 85
- date, setting 57
- datebook 87
- deleting a call 64
- dialled calls list 64
- dialling a number 21, 82
- display
 - backlight 62
 - brightness 62
 - description 32
 - home screen 32
 - language 81
 - personalizing 79
 - skin 60
 - timeout 62
- distinctive ringer alert 78
- diverting calls 74
- drafts folder 29
- DTMF tones
 - activating 83
 - sending 83

E

- earpiece volume 21
- email 78, 81
- emergency number 68
- end key 21, 22
- ending a call 21, 22
- Enter Unlock Code
 - message 51, 52

event alert 57
external display 48

F

fax call 85
fixed dial 82
flashing cursor 40
flip
 external display 48
 open to answer 22, 61
 screen saver 59
4-way navigation key 37

G

games 91
GPRS indicator 35
groove tunes 91

H

handsfree speaker 49
handsfree use 84
headset 49, 84
hold a call 67
home keys, personalizing
 79
home screen
 clock 78
 defined 32

I

IM 79

incoming call
 answering 22
 diverting 74
Incoming Call message 68
indicators
 active line 35
 battery level 36
 GPRS 35
 Java midlet 36
 loud ring style 36
 message 36
 messaging presence 36
 missed call 66
 ring style 36
 roam 35
 signal strength 35
 silent alert 36
 soft ring style 36
 transmission 34
 vibrate and ring style 36
 voicemail message 36,
 70

instant messaging. See IM
international access code
 69

iTAP software 42

J

Java applications 91
Java midlet indicator 36

K

key

- centre select 37
- end 21, 22
- 4-way navigation 37
- left soft key 33, 79
- menu 15
- message 37
- operator 37
- power 20
- right soft key 33, 79
- send 21, 22, 64
- smart 48, 49
- volume control 21

keypad

- answering calls 61
- volume, setting 78

L

language, setting 81

left soft key

- functions 33
- personalizing 79

line, changing 71

lock

- application 88
- phone 51
- SIM card 88

Low Battery message 36

M

making a call 21

master clear 82

master reset 81

menu

- entering text 40
- features, rearranging 79
- features, selecting 39
- icons, changing in home screen 79
- icons, converting to text 78
- icons, described 32
- icons, showing or hiding 79
- language, setting 81
- lists 39
- navigating 38
- personalizing 79
- view, changing 78

menu key 15

message

- chat 80
- draft 29
- menu feature icon 32
- MMS template 75
- MMS, defined 26
- multimedia letter 75
- multimedia message 74
- reading 75

- reminders, turning on/off 78
- text 74, 75
- message indicator 36
- message key 37
- messages menu feature
 - icon 32
- messaging presence indicator 36
- micro-browser
 - browser setup 91
 - Java applications 91
 - menu feature icon 32
 - using 91
 - Web sessions 91
- missed call indicator 66
- Missed Calls message 49, 66
- MMS template 75
- MMS. See message
- MotoMixer 91
- multimedia letter, sending 75
- multimedia message
 - reading 75
 - sending 3, 26, 74
- multimedia messaging service. See message
- music
 - downloading 75, 91
 - managing 90

- my telephone number 22, 63

N

- network settings 86
- notepad 66
- number
 - entering 46
 - storing your number 63
 - viewing your number 22

O

- object exchange 31
- 1-touch dial 69
- open to answer 61
- operator key 37
- optional accessory, defined 16
- optional feature, defined 15

P

- passwords. See codes
- phone
 - active line indicator 35
 - active line, changing 71
 - alert, setting 57
 - alert, turning off 21, 64
 - answer options 61
 - clear stored information 82
 - codes 50

- date, setting 57
- flip 22
- keypad, answering calls
 - 61
- language, setting 81
- locking 51
- network settings 86
- reset all options 81
- ring style 21, 48, 56, 78
- security code 50
- skin 60
- time, setting 57
- turning off 20
- turning on 20
- unlock code 50
- unlocking 20, 51, 52
- phone number
 - active line indicator 35
 - active line, changing 71
 - international access code
 - 69
 - redialling 65
 - storing in phonebook 75
 - storing your number 63
 - viewing your number 22
- phone theme 60, 90
- phonebook
 - adding an entry 75
 - category views 55, 77
 - copying entries 77
 - entry category 76
 - group mailing list 77
 - 1-touch dial 69
 - picture ID 3, 24, 54, 55, 68, 76
 - primary number, setting
 - 77
 - ringer ID 76, 78
 - sending entries 77
 - sorting entries 54, 77
- photo
 - downloading 75, 91
 - picture ID 3, 24, 54, 55, 68, 76
 - self portrait 24
 - self-portrait 2
 - sending 2, 23
 - taking 2, 23
- picture
 - downloading 75, 91
 - screen saver 59
 - viewing 90
 - wallpaper 58
 - picture ID 3, 24, 54, 55, 68, 76
- PIN code
 - changing 50
 - entering 88
- PIN2 code, changing 50
- power key 20
- predictive text entry 42
- primary text entry mode 41

Q

quick dial 82

R

received calls list 64

recent calls 64

redial

 automatic redial 65

 busy number 65

reminders

 turning on/off 78

right soft key

 functions 33

 personalizing 79

ring style indicators 36

ring style, setting 21, 48,

 56, 78

ring tone

 creating 92

 downloading 75, 91

 editing with MotoMixer 91

 managing 90

ringer ID

 setting 76

 turning on/off 78

ringer volume, setting 21,

 78

roam indicator 35

S

screen saver 59

secondary text entry mode

 41

security code

 changing 50

 default 50

 forgetting 53

self-portrait 2

send key 21, 22, 64

shortcuts 79

signal strength indicator 35

silent alert indicator 36

silent alert, setting 21, 48,

 56, 57, 78

SIM Blocked message 20,

 88

SIM card

 defined 16

 installing 16

 locking 88

 PIN code entry 20

 PIN code, changing 50

 PIN2 code, changing 50

 precautions 16

 SIM Blocked message

 20, 88

SIM PIN code

 changing 50

 entering 88

SIM PIN2 code, changing

 50

skin 60

smart key 48, 49

- soft keys
 - functions 33
 - personalizing 79
- song
 - downloading 75, 91
 - managing 90
- sound
 - downloading 75, 91
 - managing 90
- Speaker On message 50
- speakerphone
 - automatic answer 84
- standby time, increasing
 - 59, 62
- storing a call 64
- symbols, entering 46

T

- tap mode text entry 45
- telephone number
 - storing your number 63
 - viewing your number 22
- text
 - capitalization, changing
 - 42
 - entering 40
 - entry mode, selecting 41
 - entry mode, setup 41
 - flashing cursor 40
 - iTAP software predictive text entry 42

- numeric mode 46
- symbol mode 46
- tap mode 45
- text entry mode
 - selecting 41
 - setup 41
- theme 60, 90
- time, setting 57
- timers 83, 84
- transmission indicator 34
- travel charger 19

U

- unlock
 - application 88
 - phone 51
- unlock code
 - bypassing 52
 - changing 50
 - default 50, 51, 52
 - entering 20, 51, 52
 - forgetting 52

V

- vibrate alert
 - setting 21, 48, 56, 78
 - turning off 21, 64
- video clip
 - downloading 75, 91
 - managing 90
- voice dial 84

- voice record 87
- voicemail 69
- voicemail message indicator
 - 36, 70
- volume
 - earpiece 21
 - keypad 78
 - ringer 21, 78
- volume keys 21

W

- wallpaper 58
- Web pages 91
- Web sessions 91