 
 


HELLMOTO

Introducing your new Motorola ROKR E2 GSM wireless phone. Here's a quick anatomy lesson.

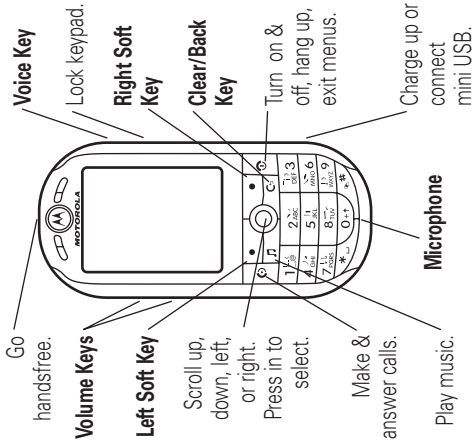

Home Screen

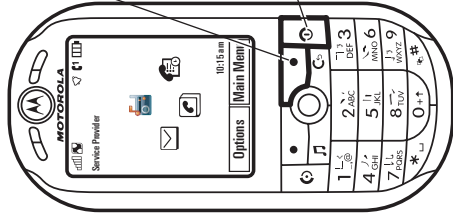 


1

Press the **Main Menu** soft key to open the **Main Menu**.

Press and hold the **Power Key** for a few seconds or until the display lights up to turn on your phone.

Main Menu

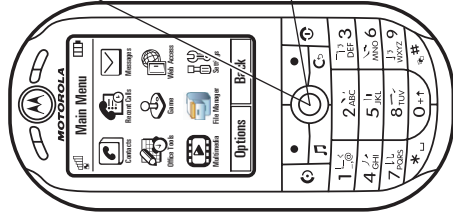

3

Press the Navigation Key **up, down, left, or right** to highlight a menu feature.

4

Press the Navigation Key **in** to select it.

Mobile Devices Business
(852)2506-3888 (Hong Kong)
www.motorola.com.hk (Hong Kong)

MOTOROLA and the Stylized M Logo are registered in the US Patent & Trademark Office. The Bluetooth trademarks are owned by their proprietor and used by Motorola, Inc. under license. Java and all other Java-based marks are trademarks or registered trademarks of Sun Microsystems, Inc. in the U.S. and other countries. All other product or service names are the property of their respective owners.

© Motorola, Inc. 2006.

Software Copyright Notice

The Motorola products described in this manual may include copyrighted Motorola and third-party software stored in semiconductor memories or other media. Laws in the United States and other countries preserve for Motorola and third-party software providers certain exclusive rights for copyrighted software, such as the exclusive rights to distribute or reproduce the copyrighted software. Accordingly, any

copyrighted software contained in the Motorola products may not be modified, reverse-engineered, distributed, or reproduced in any manner to the extent allowed by law. Furthermore, the purchase of the Motorola products shall not be deemed to grant either directly or by implication, estoppel, or otherwise, any license under the copyrights, patents, or patent applications of Motorola or any third-party software provider, except for the normal, non-exclusive, royalty-free license to use that arises by operation of law in the sale of a product.

While Products specifications and features may be subject to change without notice, we are making every possible effort to ensure that user manuals are updated on a regular basis to reflect product functionality revisions. However, in the unlikely event that your manual version does not fully reflect the core functionality of your product, please let us know. You may also be able to access up-to-date versions of our manuals from our Motorola web site, at <http://www.motorola.com.hk>.

Certain mobile phone features are dependent on the capabilities and settings of your service provider's network. Additionally, certain features may not be activated by your service provider, and/or the provider's network settings may limit the feature's functionality. Always contact your service provider about feature availability and functionality. All features, functionality, and other product specifications, as well as the information contained in this user's guide are based upon the latest available information and are believed to be accurate at the time of printing. Motorola reserves the right to change or modify any information or specifications without notice or obligation.

Manual Number: 6887370Z61

contents

menu map	7	main attractions	25	lock & unlock phone	54
Safety Information	9	audio player	25	lock & unlock keypad	55
Use and Care	16	FM Radio	30	customize	56
EU Conformance	17	airplane mode	31	profiles	56
Recycling Information	18	memory card	32	time & date	57
essentials	19	voice commands	35	themes	57
about this guide	19	photos	37	display appearance	59
SIM card	19	video clips	39	answer options	59
battery	20	Bluetooth™ wireless	41	calls	60
turn it on & off	23	synchronize phone information	45	turn off a call alert	60
make a call	23	basics	47	recent calls	60
answer a call	23	display	47	redial	61
store a phone number in the contact list	23	text entry	50	return a call	61
call a stored phone number	24	volume	53	Notepad	62
your phone number	24	handsfree speaker	53	hold or mute a call	62
		codes & passwords	54	call waiting	62
				caller ID	63

emergency calls	63
international calls	64
speed dial	64
voicemail	64
other features	65
advanced calling	65
contacts	67
messages	72
personalize	75
call times & costs	77
handsfree	79
data & fax calls	80
network	80
personal organizer	81
security	84
fun & games	84
MyMobileSoft.com	86
SAR Data	88
WHO Information	89
GNU License	90
index	91

menu map

main menu



Contacts

Messages

- Create Message
- Inbox
- My Folders
- Templates
- Drafts
- Outbox
- Email
- Call Voicemail



Office Tools

- Calculator
- Calendar
- Email
- MOTOSYNC
- Alarm Clock
- World Clock
- SIM Applications *
- Dialling Services
- Fixed Dial
- Service Dial *
- Task List
- Notepad



Multimedia

- Media Finder
- Camera
- Video Camera
- Voice Recorder
- FM Radio
- Download Manager



Recent Calls



Games



Web Access

- Browser
- My Bookmarks
- My Web Pages
- History
- Go To Page
- Browser Setup



Settings

- (see next page)



File Manager

Tip: Press **[#]** to change the main menu to a list view and back. For feature help, select **Help** in the Settings menu.

This is the standard main menu layout. **Your phone's menu may be different.**

* Indicates network or subscription-dependant features

settings menu

- **Profiles**
 - Normal
 - Vibrate
 - Silent
 - Meeting
 - Airplane Mode
 - Sleeping
 - Active
 - Car
- **Connections**
 - Bluetooth™
 - Modem
 - USB Settings
 - Data Connections
- **Themes**
- **Call Settings**
 - Speed Dial
 - Call Forward
 - In-Call Setup
 - My Caller ID
 - Call Waiting
 - In-Call Message Alert
 - Active Line
 - In-Call Timer
 - Answer Options
 - Auto Redial
 - Roam Alert
 - DTMF
 - Call Barring
 - Fixed Dialling
 - Call Drop Tone
 - My SIM Number
- **Phone Settings**
 - Display Settings
 - Backlight Timeout
 - Display Timeout
 - Screensaver Timeout
 - Brightness
 - Battery Meter
 - Battery Save
 - Time & Date
 - Language
 - Talking Phone
 - Text Entry
 - Reset
 - Reset All Settings
 - Delete All Data
 - Properties
 - Java™ System
 - Headset Settings
 - Auto-Answer
 - Voice Dial
- **Security**
 - Phone Lock
 - Application Lock
 - SIM Lock
 - Change Passwords
- **Network**
 - Current Network
 - Scan Available Networks
 - Search For New Network
 - My Network List
 - Search Setup
 - Service Tone
- **Help**

Tip: You can press number keys to select options that have numbers next to them.

This is the standard main menu layout. **Your phone's menu may be different.**

* Indicates network or subscription-dependant features

Safety and General Information

This section contains important information on the safe and efficient operation of your mobile device. Read this information before using your mobile device.*

Exposure To Radio Frequency (RF) Energy

Your mobile device contains a transmitter and receiver. When it is ON, it receives and transmits RF energy. When you communicate with your mobile device, the system handling your call controls the power level at which your mobile device transmits.

* The information provided in this document supersedes the general safety information in user's guides published prior to September 1, 2006.

Your Motorola mobile device is designed to comply with local regulatory requirements in your country concerning exposure of human beings to RF energy.

Operational Precautions

For optimal mobile device performance and to be sure that human exposure to RF energy does not exceed the guidelines set forth in the relevant standards, always follow these instructions and precautions.

External Antenna Care

If your mobile device has an external antenna, use only a Motorola-supplied or approved replacement antenna. Use of unauthorized antennas, modifications, or attachments could damage the mobile device and/or may result in your device not complying with local regulatory requirements in your country.

DO NOT hold the external antenna when the mobile device is IN USE. Holding the external antenna affects call quality and may cause the mobile device to operate at a higher power level than needed.

Product Operation

When placing or receiving a phone call, hold your mobile device just like you would a landline phone.

If you wear the mobile device on your body, always place the mobile device in a Motorola-supplied or approved clip, holder, holster, case, or body harness. If you do not use a body-worn accessory supplied or approved by Motorola, keep the mobile device and its antenna at least 2.5 centimeters (1 inch) from your body when transmitting.

When using any data feature of the mobile device, with or without an accessory cable, position the mobile device and its antenna at least 2.5 centimeters (1 inch) from your body.

To maintain compliance with RF exposure guidelines while you are transmitting with your phone attached

to this neck lanyard, hold the phone in its normal use position at your ear or ensure that the phone and its antenna are at least one inch (2.5 centimeters) away from your body while transmitting.

Using accessories not supplied or approved by Motorola may cause your mobile device to exceed RF energy exposure guidelines. For a list of Motorola-supplied or approved accessories, visit our website at www.motorola.com.

RF Energy Interference/Compatibility

Nearly every electronic device is subject to RF energy interference from external sources if inadequately shielded, designed, or otherwise configured for RF energy compatibility. In some circumstances your mobile device may cause interference with other devices.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Follow Instructions to Avoid Interference Problems

Turn off your mobile device in any location where posted notices instruct you to do so. These locations include hospitals or health care facilities that may be using equipment that is sensitive to external RF energy.

In an aircraft, turn off your mobile device whenever instructed to do so by airline staff. If your mobile device offers an airplane mode or similar feature, consult airline staff about using it in flight.

Pacemakers

If you have a pacemaker, consult your physician before using this device.

Persons with pacemakers should observe the following precautions:

- ALWAYS keep the mobile device more than 20 centimeters (8 inches) from your pacemaker when the mobile device is turned ON.
- Caution to Pacemaker Users: To avoid interference with pacemakers while you are transmitting with your phone attached to this neck lanyard, the Advanced Medical Technology Association recommends that you maintain a minimum separation distance of six inches (15 centimeters) between your phone and a pacemaker.
- DO NOT carry the mobile device in the breast pocket.
- Use the ear opposite the pacemaker to minimize the potential for interference.

- Turn OFF the mobile device immediately if you have any reason to suspect that interference is taking place.

Hearing Aids

Some digital mobile devices may interfere with some hearing aids. In the event of such interference, you may want to consult your hearing aid manufacturer or physician to discuss alternatives.

Other Medical Devices

If you use any other personal medical device, consult your physician or the manufacturer of your device to determine if it is adequately shielded from RF energy.

- Give full attention to driving and to the road. Using a mobile device may be distracting. Discontinue a call if you can't concentrate on driving.
- Use handsfree operation, if available.
- Pull off the road and park before making or answering a call if driving conditions so require.

Responsible driving practices can be found in the "Smart Practices While Driving" section at the end of this guide and/or at the Motorola website: www.motorola.com/callsmart.

Operational Warnings

Obey all posted signs when using mobile devices in public areas, such as health care facilities or blasting areas.

Driving Precautions

Check the laws and regulations on the use of mobile devices in the area where you drive. Always obey them.

When using your mobile device while driving, please:

Automobile Air Bags

Do not place a mobile device in the air bag deployment area.

Potentially Explosive Atmospheres

Areas with potentially explosive atmospheres are often but not always posted, and can include fueling areas such as below decks on boats, fuel or chemical transfer or storage facilities, or areas where the air contains chemicals or particles, such as grain, dust, or metal powders.

When you are in such an area, turn off your mobile device, and do not remove, install, or charge batteries. In such areas, sparks can occur and cause an explosion or fire.

Damaged Products



If your mobile device or battery has been submerged in water, punctured, or subjected to a severe fall, do not use it until you take it to a Motorola Authorized Service Center. Do not attempt to dry it with an external heat source, such as a microwave oven.




Batteries and Chargers

If jewelry, keys, beaded chains, or other conductive materials touch exposed battery terminals, this could complete an electrical circuit (short circuit), become very hot, and could cause damage or injury. Be careful when handling a charged battery, particularly when placing it inside a pocket, purse, or other container with metal objects. **Use only Motorola Original™ batteries and chargers.**

Caution: To avoid risk of personal injury, do not dispose of your battery in a fire.

Your battery, charger, or mobile device may contain symbols, defined as follows:

Symbol	Definition
	Important safety information follows.
	Do not dispose of your battery or mobile device in a fire.

Symbol	Definition
	Your battery or mobile device may require recycling in accordance with local laws. Contact your local regulatory authorities for more information.
	Do not throw your battery or mobile device in the trash.
	Your mobile device contains an internal lithium ion battery.

glass breaks, do not touch or attempt to remove. Stop using your mobile device until the glass is replaced by a qualified service center.

Seizures/Blackouts

Some people may be susceptible to epileptic seizures or blackouts when exposed to flashing lights, such as when playing video games. These may occur even if a person has never had a previous seizure or blackout.

If you have experienced seizures or blackouts, or if you have a family history of such occurrences, please consult with your physician before playing video games or enabling a flashing-lights feature (if available) on your mobile device.

Discontinue use and consult a physician if any of the following symptoms occur: convulsion, eye or muscle twitching, loss of awareness, involuntary movements, or disorientation. It is always a good idea to hold the screen away from your eyes, leave

Choking Hazards

Your mobile device or its accessories may include detachable parts, which may present a choking hazard to small children. Keep your mobile device and its accessories away from small children.

Glass Parts

Some parts of your mobile device may be made of glass. This glass could break if the product is dropped on a hard surface or receives a substantial impact. If

the lights on in the room, take a 15-minute break every hour, and stop use if you are very tired.

Repetitive Motion

When you repetitively perform actions such as pressing keys or entering finger-written characters, you may experience occasional discomfort in your hands, arms, shoulders, neck, or other parts of your body. If you continue to have discomfort during or after such use, stop use and see a physician.

Use and Care

To care for your Motorola phone, please keep it away from:



liquids of any kind

Don't expose your phone to water, rain, extreme humidity, sweat, or other moisture.



dust and dirt

Don't expose your phone to dust, dirt, sand, food, or other inappropriate materials.



extreme heat or cold

Avoid temperatures below $-10^{\circ}\text{C}/14^{\circ}\text{F}$ or above $45^{\circ}\text{C}/113^{\circ}\text{F}$.



cleaning solutions

To clean your phone, use only a dry soft cloth. Don't use alcohol or other cleaning solutions.



microwaves

Don't try to dry your phone in a microwave oven.



the ground

Don't drop your phone.

 
European Union Directives Conformance Statement



Approval Number from your product's label in the "Search" bar on the web site.

Hereby, Motorola declares that this product is in compliance with

- The essential requirements and other relevant provisions of Directive 1999/5/EC
- All other relevant EU Directives

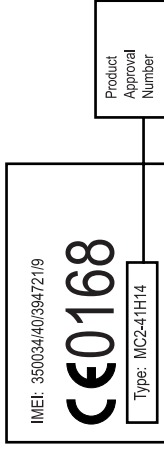

The above gives an example of a typical Product Approval Number.

You can view your product's Declaration of Conformity (DoC) to Directive 1999/5/EC (to R&TTE Directive) at www.motorola.com/rtte. To find your DoC, enter the product

Caring for the Environment by Recycling



When you see this symbol on a Motorola product, do not dispose the product with household waste.

Recycling Mobile Phones and Accessories


Do not dispose of mobile phones or electrical accessories, such as chargers or headsets, with your household waste. In some countries or regions, collection systems are set up to handle electrical and electronic waste items. Contact your regional authorities for more details. If collection systems aren't available, return unwanted mobile phones or electrical accessories to any Motorola Approved Service Centre in your region.

 
essentials



about this guide

This guide shows how to locate a menu feature as follows:

Find it: Press **Main Menu** >  **Office Tools** > **Calculator**

This example shows that, from the home screen, you press the **Main Menu** soft key to open the menu, scroll to and select  **Office Tools**, then scroll to and select **Calculator**.

Press the navigation key *up, down, left, or right*  to scroll to a menu feature. Press the navigation key *in*  to select the highlighted menu feature.

symbols	
	This means a feature is network/subscription dependent and may not be available in all areas. Contact your service provider for more information.
	This means a feature requires an optional accessory.

SIM card

 
Caution: Don't bend or scratch your SIM card. Keep it away from static electricity, water, and dirt.

Your *Subscriber Identity Module* (SIM) card contains personal information like your phone


number and phonebook entries. It can also contain your voicemail, text message, and Internet access settings. If you put your SIM card in another phone, that phone uses your phone number.

Insert the SIM card with the gold plate facing down and the notch in the upper right corner as shown:

1

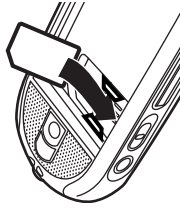


2

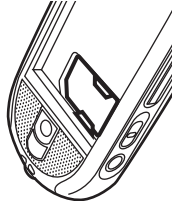 


battery

battery installation

 
- 1 Pull the release button down and hold it there while you lift up the battery door.

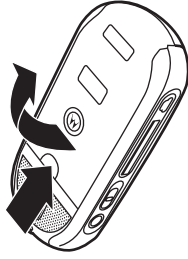

2

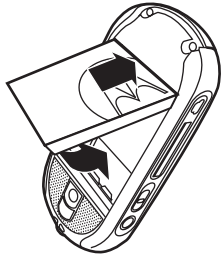 

3

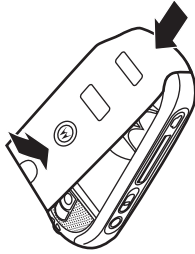 


battery charging

New batteries are not fully charged. Plug the battery charger into your phone and an electrical outlet. Your phone might take several

seconds to start charging the battery. Your display shows **Charge Complete** when finished.

Tip: Relax, you can't overcharge your battery. It will perform best after you fully charge and discharge it a few times.

 
Note: You can charge your battery by connecting a cable from your phone's mini-USB port to a USB port on a computer. Both your phone and the computer must be turned on, and your computer must have the correct

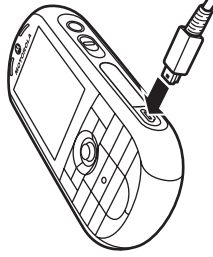

software drivers installed. Cables and software drivers are available in Motorola Original data kits, sold separately.

battery tips

Battery life depends on the network, signal strength, temperature, features, and accessories you use.

- Always use Motorola Original  batteries and chargers. The warranty does not cover damage caused by non-Motorola batteries and/or chargers.
- New batteries or batteries stored for a long time may take more time to charge.
- When charging your battery, keep it near room temperature.

- When storing your battery, keep it uncharged in a cool, dark, dry place, such as a refrigerator.
- Never expose batteries to temperatures below -10°C (14°F) or above 45°C (113°F). Always take your phone with you when you leave your vehicle.
- It is normal for batteries to gradually wear down and require longer charging times. If you notice a change in your battery life, it is probably time to purchase a new battery.




Contact your local recycling center for proper battery disposal.

 
Warning: Never dispose of batteries in a fire because they may explode.

Before using your phone, read the battery safety information in the “Safety and General Information” section included in this guide.

turn it on & off

Caution: Some phones ask for your SIM card PIN code when you turn them on. If you enter an incorrect PIN code three times before the correct code, your SIM card is disabled and your display shows **SIM Blocked**. Contact your service provider.


To turn on your phone, press and hold  for a few seconds or until the display lights up. If prompted, enter your eight-digit SIM card PIN code and/or four-digit unlock code.




To turn off your phone, press and hold  for two seconds.


make a call

Enter a phone number and press  to make a call.

To “hang up,” press .

answer a call


When your phone rings and/or vibrates, just press  to answer.



To “hang up,” press .

store a phone number in the contact list

You can store a phone number in your **Contacts** list.

Note: You can store a contact in phone memory or on your SIM card. You can't set a picture ID or special alerts for contacts stored on the SIM card. To change your default save location to phone, SIM card, or both, see page 68.

- 1 Enter a phone number in the home screen.
- 2 Press the **Save** key.
- 3 Enter a name for the phone number, and specify the number type if necessary. To select a highlighted item, press the *navigation key in* .
- 4 Press the **Save** key to store the contact.
To edit or store additional information about the contact, see page 68. To delete a contact, see page 71.

- Shortcut:** In the contact list, press keypad keys to enter the first letters of the contact you want. Press the *navigation key in*  to go to the contact.
- 2 Press  to call the contact.

your phone number

To see your phone number from the home screen, press the **Main Menu** key >  **Settings** > **Call Settings** > **My SIM Number**.

To see your phone number while you're on a call, press the **Options** key > **My Telephone Number**

To store or edit your name and phone number on your SIM card, select the field you want to edit. If you don't know your phone number, contact your service provider.

call a stored phone number

Find it: Press the **Main Menu** key >  **Contacts**

- 1 Scroll to the contact.

main attractions

You can do much more with your phone than make and receive calls!

audio player

load music files on your computer

To load music on your phone, you need to have a digital music library on your computer. Here is how to create a digital music library on your computer:

- 1 Insert a music CD in your computer's CD drive.
- 2 Launch your computer's music player program (such as Windows® Media Player).

- 3 Copy the music CD to your media player program's library (also called *ripping* the CD).

If your computer is connected to the Internet when you insert your music CD, the music player program may retrieve data about the Album such as Song Titles, Album name, Artist name, and Album art work. This data can be edited or entered manually by using your computer's music player application. This data will be displayed in your phone's audio player.

load music files on your phone

To transfer your music from your computer's digital music library to your phone and its SD™ memory card, see page 33. To

download songs from the Web, see page 85. For a list of the file formats your phone can play, see page 34.

play music files

Your phone can play and store audio files (for a list of formats, see page 34). You can use a removable SD™ memory card with your phone to store more songs (see page 32).

Note: You can use any stereo headset with a 3.5 mm plug. For best performance, use a Motorola Original headset or a headset with an impedance rating between 16-32 ohm.




options	
All	Show and play individual songs. Note: All of your phone's songs appear in the All list. Some songs may not have any Artist , Album , or Genre information stored, so they don't appear in those lists.
Playlists	Create or play a playlist of songs (see page 28).
Recently Played	See songs you recently played.
Albums	Select an album to show or play its songs.
Artists	Select an artist to show or play their songs.
Composers	Select a composer to show or play their songs.

options

Genres Select a type of music to show or play songs.

Preloaded Ringtones Show and play your standard ringtones.

 You can control playback with the keys on the left side of your phone, or with your navigation key.

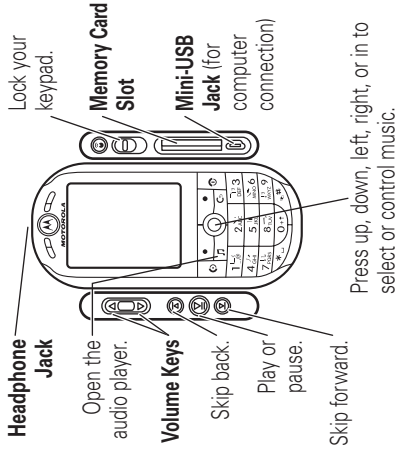

Press **•◊•** up to play or pause. Press **•◊•** down to stop. Press **•◊•** right or left to go forward or back.

If you receive a call during a song, the song pauses until the call is over. You can hear the call through your headphones and speak into the microphone on your phone (or the microphone on your headphones, if available).

During a song, you can press the **Options** key to show these options:

options	
Hide	Hide the audio player while music plays. To see the audio player again, press ⏮ up. To stop the hidden audio player, press ⏸ .
Manage	Show song Properties , such as the file name, type, and size.
Send to	Attach the song to a message, or send it over a Bluetooth™ connection.
Apply to	Add the song to a playlist or make it a ringtone.

options

Setup Customize settings (see page 29).

During a song, the music player shows the song Title, Artist, Album, and Artwork if available. To see a larger image of the

Artwork, press the *navigation key in* **⏮** (press it again to return to the media player).


add music files to a playlist


Find it: Press **⏮**. Then, press **⏮** up or down to scroll to a folder (such as **All**), and press the *navigation key in* **⏮** to open the folder:

1 Scroll to a song you want to add to the playlist.

Tip: To select multiple songs for the list, press the **Options** key and select **Select Multiple**. Your phone shows a song list

where you can scroll to songs you want to add and press the *navigation key* in  to select them.

- 2 Press the **Options** key and select **Apply to > Playlist**. Your phone shows a list of playlists.
- 3 Scroll to an existing playlist. To create a new playlist, press the **Options** key and select **New Playlist**. Enter a name for the playlist and press the **Save** key.
- 4 Press the **Apply** key.
- 5 Repeat the procedure to add more songs, or press the **Back** key to return to the  menu.

To hear a playlist, press  > **Playlists**. Scroll to the playlist, press the **Options** key, and select **Play**.

customize audio player*

Find it: Press , press the **Options** key, and select **Setup**. You can change:

options	
Shuffle	Play songs in a random order.
Equalizer	Choose a setting (such as Techno or Reggae) to customize sound.
End Call	If you receive a call during a song, the song pauses. When the call is done, this setting makes the song resume playing (Auto-Play) or stay paused (Pause).
Stereo Effect Settings	Set Spatial Audio and Bass Boost to customize sound.

If you highlight a song in a song list and press the **Options** key, you may also see options for the song and list such as **Delete**, **Send to**, **Apply to**, and **Sort by**.

*Features are subject to change without prior notice. Please refer to your handset for actuality.

Find it: Press the **Main Menu** key >  **Multimedia** > **FM Radio**.

FM Radio

To listen to an FM radio station on your phone, you must plug in a headset. Then:

Headphone Jack Lock your keypad (up).

 
Volume Keys Move tuner up (hold to search).

Mute or unmute.

Move tuner down (hold to search).
Hold a number key to store the current station as a preset (1-9). Press a key to go to its preset.

Press up or down to scroll through presets.

Press left or right to move tuner.

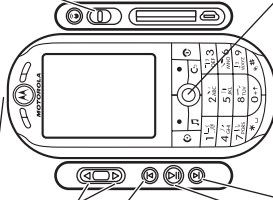

Note: You can use any stereo headset with a 3.5 mm plug. For best performance, use a



Motorola Original headset or a headset with an impedance rating between 16-32 ohm.

Press the **Options** key for these options:

options	
Hide	Hide the radio display while it is on. To see the radio display again, press •◂◃• up. To stop the hidden radio, press ☒ .
Mute [*] / Unmute [*]	Mute or unmute the radio.
Switch to Speaker	Switch sound to your phone speaker.
Switch Bands [#]	Switch to FM1 , FM2 , or FM3 . Each band stores presets 1-9.
Scan	Briefly hear each station your phone can receive. Press the <i>navigation key in ◂◃</i> to stop the scan.

options	
Scan Presets	Briefly hear each station stored as a preset. Press the <i>navigation key in ◂◃</i> to stop the scan.
Presets List	See the list of preset stations for the current band. Press the Options key to tune, store, rename, or clear presets.


To turn off the radio, press **☒** in the radio display.

airplane mode

Airplane mode turns off your phone's Bluetooth™ and calling features in locations where wireless phone use is prohibited. You can use the phone's music player and other non-calling features in airplane mode.

To set airplane mode:

Find it: Press the **Main Menu** key >  **Settings**
> **Profiles** > **Airplane Mode**

When airplane mode is active, the airplane mode indicator  shows in the top left corner of the display. To reactivate your phones calling features, return to the **Profiles** menu and select a different profile.

memory card

You can use a removable SD™ memory card with your phone to store and retrieve multimedia objects (such as photos and sounds). Your phone can use SD™ cards with up to a 2 GB capacity.

Note: If you download a copyrighted file and store it on your memory card, you can use the file only while your memory card is inserted in

your phone. You cannot send, copy, or change copyrighted files.

 
install a memory card

Caution: Don't bend or scratch your memory card. Keep it away from static electricity, water, and dirt.

Open the memory card door and

press the SD™ memory card into its slot until it clicks into place. Do not

remove your memory card while your phone is using or writing files on it.

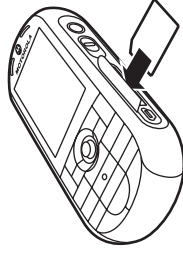


To remove the memory card, push the card in until it clicks. It begins to slide out, and you can slide it the rest of the way out.

see memory card contents

Find it: Press the **Main Menu** key >  **Multimedia** > **Media Finder**.

Note: If your phone does not prompt you to refresh the list, press the **Options** key > **Refresh**.

To see only the files stored on your memory card, press the **Main Menu** key > **File Manager**, then choose the memory card icon ().

Tip: Is your phone not seeing your memory card? Try turning your phone off, then on again. Then, return to the **File Manager** list.

copy files from the phone to the memory card

You can copy files (such as pictures and photos, video clips, and sound files) from your phone to the memory card.

Find it: Press the **Main Menu** key > **File Manager**.

1 Select a folder and scroll to the file you want to copy.

2 Press the **Options** key > **Send to** > **Memory Card**.

Note: The **Send to** option does not appear if the highlighted file is copyright-protected. The **Memory Card** option does not appear if your phone does not find a memory card installed.

Tip: Did your phone not find the memory card you installed? Try turning your phone off, then on again. Then, try to copy the file again.

connect the memory card to a computer

You can connect your phone to a computer to transfer files to and from the memory card.

Note: When your phone is connected to a computer, you can access the memory card only through the computer.

On your phone:

Press the **Main Menu** key >  **Settings** > **Connections** > **USB Setting** > **Memory Card**. The **Memory Card** option might already be selected.

This directs the USB connection to your memory card. Attach the Motorola Original USB cable to the accessory port on your phone and to an available USB port on your computer. Then follow these steps:



- 3** To store the desired files onto the memory card, drag and drop them onto the removable disk drive icon.
- 4** When you finish, remove the phone with memory card safely from your computer:
If you are using a PC, right-click the “Safely Remove Hardware” icon in the system tray at the bottom of your computer screen. Then select “USB Mass Storage Device”.

On your computer:

- 1** Find where your phone’s memory card displays as a “Removable Disk” icon. On a PC this is the “My Computer” window. On a Mac it’s on the desktop.
- 2** Double-click the “Removable Disk” icon to access the files on your phone’s memory card.

If you are using a Mac, select and drag the “Removable Disk” icon to the “Trash.”

file formats that work on your phone*

Before you copy files to your phone, make sure the files are in a format that your phone recognizes:

*Features and specifications are subject to change without prior notice. Please refer to website for details and updates.

voice commands

You can use voice commands to make calls, open phone applications, and perform basic phone functions.

Note: Not all phone languages support voice recognition and voice commands.

voice dial a call

You can dial an entry in your contacts list by speaking the entry's name, or dial any phone number by speaking its digits.

Tip: Speak numbers at a normal speed and volume, pronouncing each digit distinctly. Avoid pausing between digits.

audio	AAC (up to 192 Kbps), AAC+ (16 to 128 Kbps), MP3 (up to 320 Kbps, WAV (no limit), WMA v9 L2, v3, v7, v8 (up to 160 Kbps), Real Audio G2, 8 (up to 96 Kbps), Real Audio 10 (up to 192 Kbps)
photo	.jpg (up to 640 x 480), .png, .bmp, .gif, .wbmp, .ems (up to 320 x 240)
video	MPEG4 + AAC: video up to 296 Kbps, 320 x 240, 15 fps., 44 kHz, stereo audio in .mp4, 3gp, .pvs, .pvp, .pvx file formats. H.263 + AAC: video up to 296 Kbps, 320 x 240, 15 fps., 44 kHz, stereo audio in .mp4, 3gp, .pvs, .pvp, .pvx file formats. Real Audio + video: video up to 296 Kbps, 320 x 240, 15 fps., 44 kHz, stereo audio in .rm, .rmvb file formats.

1 Press and release  on the right side of your phone.

Your phone prompts you to say a command or name.

2 Say the name of an entry in your contacts list. Your phone confirms the name and makes the call.


or

Say “Dial Number.” Your phone prompts you to speak the digits in the phone number, confirms the number, and makes the call.


Notes:

- If your phone recognizes the name or number, it shows it in the display and repeats it back to you. Say “Yes” to call, or say “No” and say another name or number.

- If your phone doesn’t recognize the name or number, it doesn’t make the call.

If your phone shows a list of similar names or numbers, you can select a name or number manually by scrolling to it and pressing the *navigation key in *.

voice activate phone functions

You can use voice commands to open some applications (for example, “Open Camera”) or perform many basic phone functions (for example, “Check Battery”). Press and release  to see a complete list of voice commands.

To perform a voice command:

- 1** Press and release  on the right side of your phone. Your phone prompts you to say a command or name.

- 2 Say the command. If your phone recognizes the command, it performs the command.

talking phone

You can set your phone to recite incoming caller ID information, read the names of menu features or entries on your contacts list, read messages you receive, and provide audio feedback for other phone functions.

 
Find it: Press the **Main Menu** key > **Settings** > **Phone Settings** > **Talking Phone**

Shortcut: Press and release **[OK]** on the right side of your phone, then say "Talking Phone."


photos

take a photo

Press the **Main Menu** key **[Camera]** > **Multimedia** > **Camera** to see the camera viewfinder.

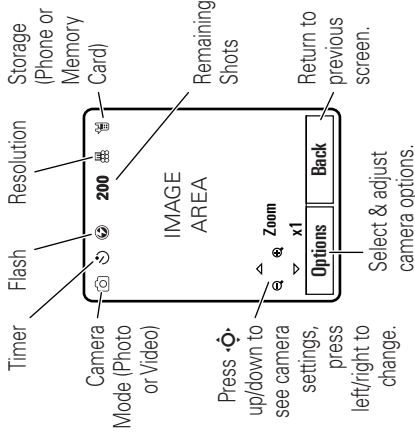

Tip: To take photos in low-light settings, press the **Options** key > **Flash *** > *flash option* to use the built-in flash.

- 1 Point the camera lens at the photo subject.
 - 2 Press the *navigation key* in  to take a photo.
 - 3 Press the **Send** key to send the photo in a multimedia message.
- or**
- Press the **Options** key to select another option: **Save Only**, **Discard**, **Send to**, **Apply to**, or **Edit**.

To see a picture you saved, press the **Main Menu** key > **File Manager** > **Pictures**.

Note: You can't assign a photo to a phonebook entry stored on the SIM card.

camera settings


When the camera viewfinder is active, press the **Options** key to select or adjust camera options:

options	
Capture	Take a photo.
Go to My Media	See, edit, and delete stored pictures and photos.
Video Mode	Switch to the video camera.
Flash *	Activate a flash option to take photos in low-light settings.
Auto- Timer	Set a timer for the camera to take a photo.
Multi- Shot	Set the camera to take multiple photos in sequence.
Camera Settings	Change camera options such as picture quality.

video clips

record a video clip

 Press the **Main Menu** key > **Multimedia** > **Video Camera** to see the video camera viewfinder.

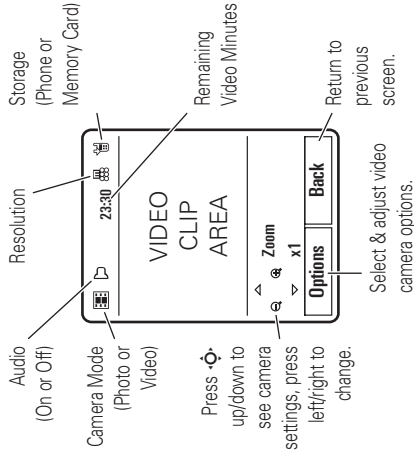

Note: You can zoom only before you start recording.

Tip: If you want to send your video in an MMS message, the video length must be set to **MMS Short** or **MMS Long**. To set length, press the **Options** key > **Camera Settings** > **Video Settings** > **Video Length**.

- 1** Point the camera lens at the video subject.
- 2** Press the *navigation key* in \blacklozenge to begin video recording.
- 3** Press the **Stop** key to stop video recording.
- 4** Press the **Send** key to send the video clip in a multimedia message.

or

Press the **Options** key to select another option: **Save Only**, **Discard**, **Send to**, or **Play**.

video settings

When the video camera viewfinder is active, press the **Options** key to select or adjust video camera options:

options	
Capture	Begin video recording.
Go to My Media	See, edit, and delete stored video clips.
Picture Mode	Switch to the photo camera.
Audio On/Off	Turn audio recording on/off.
Camera Settings	Adjust video camera and video clip settings, set video clip resolution, quality, and length.

play a video clip

Find it: Press the **Main Menu** key > **Multimedia** > **Media Finder** > **Videos** > *video clip*

 
The display shows the video clip in the playback screen.

Press **◂** up to pause/play, press down to stop.

Press **◂** left/right to skip to previous/next video clip.

Timer shows the % played.

Return to previous screen.

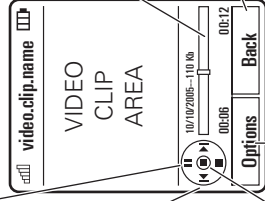

Press **◂** to show actual size or full screen.

Select & adjust video camera options.

Bluetooth™ wireless



Your phone supports Bluetooth wireless connections. You can connect your phone with a Bluetooth headset or car kit to make handsfree calls. You can connect your phone with a phone or computer that supports Bluetooth connections to exchange files.

Note: The use of wireless phones while driving may cause distraction. Discontinue a call if you can't concentrate on driving. Additionally, the use of wireless devices and their accessories may be prohibited or restricted in certain areas. Always obey the laws and regulations on the use of these products.

For maximum Bluetooth security, you should always connect Bluetooth devices in a safe, private environment.


turn Bluetooth power on or off

Find it: Press the **Main Menu** key >  **Settings** > **Connections** > **Bluetooth**, press the **Options** key > **Manage** > **Setup Bluetooth** > **Bluetooth Power** > **On**

Note: To extend battery life, use this procedure to set Bluetooth power to **Off** when not in use. Your phone will not connect to another device until you set Bluetooth power back to **On** and connect your phone to the device again.

use a headset or handsfree car kit

Before you try to connect your phone to a handsfree device, make sure the device is **on** and **ready** in *pairing* or *bonding* mode (see the user's guide for the device). You can connect your phone with only one device at a time.

Find it: Press the **Main Menu** key >  **Settings**
> **Connections** > **Bluetooth**, press the **Options** key
> **Search For Devices** > **Headset**

Your phone lists the devices it finds within range.

- 1 Scroll to a device in the list.
- 2 Press the **Options** key > **Manage**
> **Bond with Device** to connect to the device.
Your phone automatically uses **0000** as the passkey to bond with the device. If **0000** does not work, your phone prompts you to enter the device's passkey.

When your phone is connected, the Bluetooth indicator  shows in the display.

Shortcut: When Bluetooth power is on, your phone can automatically connect to a handsfree device you have used before. Just

turn on the device and move it near the phone.

copy files to another device

You can copy a photo, picture, video clip, sound file, phonebook entry, calendar event, or bookmark to another phone or computer that supports Bluetooth connections.


Note: You can't copy some copyrighted objects.

Before you try to copy a file to another device, make sure the receiving device is **on** and **ready** in discoverable mode.

- 1 On your phone, scroll to the object that you want to copy to the other device.
- 2 Press the **Options** key, then select:
 - **Send to** > **Bluetooth** for a photo, picture, video clip, or sound file.

- **Send Contact via** > **Bluetooth** for a phonebook entry.
- **Share Event via** > **Bluetooth** for a calendar event.
- **Send To** > **Bluetooth** for a bookmark.

3 Select a recognized device name, or **[Search for Device]** to search for an unrecognized device where you want to copy the object.


Note: Once you connect your phone to a Bluetooth device, that device can start a similar Bluetooth connection with your phone. Your display shows the Bluetooth indicator  when there is a Bluetooth connection.

receive files from another device

Before you try to receive a file from another device, make sure your phone's

Bluetooth power is **on** (see page 41). For a list of file formats that work on your phone, see page 34.

1 Place your phone near the device, and send the file from the device.

If your phone and the sending device don't recognize each other, place your phone in discoverable mode so the sending device can locate it. Press the **Main Menu** key >  **Settings** > **Connections** > **Bluetooth**, press the **Options** key > **Find My Device On 3 minutes**

2 Press the **Accept** key to accept a file from another device. Your phone notifies you when file transfer is complete, and saves the file.

send a photo to a printer

You can send a photo to a printer that supports Bluetooth connections.

Note: You can print 4 x 6 or 8.5 x 11 size pages. To print another size, copy the object to a linked computer and print it from there.



- 1 On your phone, take a new photo or scroll to a stored photo that you want to print, then press the **Options** key > **Send** > **Printer**.



 
Note: If you see **Service Not Supported** when you try to print, select **Send** > **Bluetooth** instead. Always use this option to print 4x6 photos.

- 2 Select a recognized printer name, or [**Search for Device**] to search for an unrecognized printer where you want to send the object.
- 3 If available, modify print options.

advanced Bluetooth features

A device is *recognized* after you connect to it once (see page 41).

features
connect to recognized device Press the Main Menu key >  Settings > Connections > Bluetooth , press  left or right to select the My Devices list, > <i>device name</i>
drop connection with device Scroll to the device name and press the Option key > Manage > Disconnect Device .
switch to headset or car kit during call Press the Options key > Use Bluetooth

features	
edit properties of recognized device	
Scroll to the device name, press the Options key > Manage > Edit Device .	
set Bluetooth options	
Press the Main Menu key >  Settings > Connections > Bluetooth , press the Options key > Manage > Setup Bluetooth	

- **Tethered Sync** (Bluetooth™ wireless connection or USB cable connection to a PC using the Motorola mobile PhoneTools software accessory product).

MOTOSYNC with SyncML

Use MOTOSYNC with SyncML to synchronize your contacts list, phone calendar, and tasks with a SyncML-compliant server.



synchronize phone information

You can use different methods to synchronize information between your phone and a server or external device:

- **MOTOSYNC with SyncML** (over-the-air connection with a SyncML server).

Find it: Press the **Main Menu** key >  **Office Tools** > **MOTOSYNC** > **SyncML**

If no SyncML profile is stored on your phone, the phone prompts you to create a profile. Contact your synchronization service provider and phone network service provider to obtain the information you need to set up a profile.

Note: If your phone cannot connect to the server, verify that your phone's network


service provider has data service activated on your account (additional fees may apply for this service).

tethered sync

You can connect your phone and PC using a Bluetooth™ wireless connection (see page 41) or a Motorola Original USB cable connected to your phone and PC.



™

Before you use a USB cable to sync your phone, set **Modem** as your USB default connection: Press the **Main Menu** key >  **Settings** > **Connections** > **USB Setting** > **Modem**.

Once your phone is connected to your PC, select the “Sync” option from the Motorola mobile PhoneTools software running on the PC. **Do not** manually open **MOTOSYNC** on your phone.

Note: To synchronize or transfer data between your phone and PC, you must install the Motorola mobile PhoneTools software

included with the Motorola Original data kit. See the mobile PhoneTools user’s guide for more information. Motorola mobile PhoneTools software is designed to synchronize with basic features of many popular Personal Information Management (PIM) software and hardware products.

™



 
basics

See page 1 for a basic phone diagram.

Tip: Want some help? Press the **Main Menu** key > **Settings** > **Help**. Use the icons in **Help** to find information about phone features.

display

The *home screen* appears when you turn on the phone.

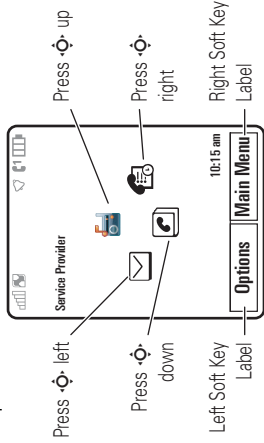

Note: Your home screen might look different, depending on your service provider.

To dial a number from the home screen, press number keys and **☎**.

 
Press the **Main Menu** key to open the main menu. *Soft key/labels* show the current soft key functions. For soft key locations, see page 1.




Press the **Options** key in the home screen to take a picture, create a text message, change the alert profile, or customize the appearance of the home screen.

Press **•◃** up, down, left, or right in the home screen to open basic features. You can show or hide icons for these features in the home screen, and change the icons that are shown

(for more information about changing icons in the home screen, see page 76).

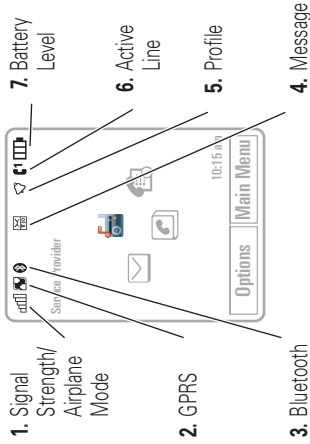Status indicators can show at the top of the home screen:



indicator  shows. The roam indicator ( or ) shows when your phone is seeking or using a network outside your home network.

- 2 GPRS Indicator** – Shows when your phone is using a high-speed *General Packet Radio Service* (GPRS) network connection. Indicators can include:
 -  = GPRS connection
 -  = GPRS data transfer
 -  = GPRS secure data transfer


- 1 Signal Strength/Airplane Mode Indicator** – Vertical bars show the strength of the network connection. You can't make or receive calls when the no signal indicator  or airplane mode


- 3 Bluetooth™ Indicator** – Shows when your phone is connected to another device in a Bluetooth connection.





4 Message Indicator – Shows when you receive a new text or voicemail message.


5 Profile Indicator – Shows the profile setting.

 = normal


 = sleeping

 = vibrate

 = active

 = silent

 = car


 = meeting





6 Active Line Indicator – Shows  to indicate an active call, or  to indicate when call forwarding is on.

Indicators for dual-line-enabled SIM cards can include:

 = line 1 active

 = line 2 active

 = line 1 call forward on

 
 = line 2 call forward on

7 Battery Level Indicator – Vertical bars show the battery charge level. Recharge the battery when your phone shows **Low Battery**.

text entry

Some features let you enter text. You can use several different text entry modes.

Press **[#]** to select a text entry mode.

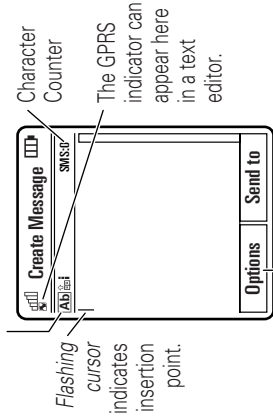

Press the **Options** key to change text entry options.

text entry modes (press **[#]**)

[Ab] "word" mode (see page 51)

Ab "abc" mode (see page 52)

123 numeric mode (see page 53)

:@ symbol mode (see page 53)

To change your text entry mode options, press the **Main Menu** key > **Settings** > **Phone Settings** > **Text Entry**.

Change text case (◊♦): Press **[O]** in a text entry screen to change text case to all capital letters (*****), next letter capitalized (**◊**), or next letter lowercase (no symbol). Your phone capitalizes the first letter of each sentence, unless you press **[O]** to choose next letter lowercase.

Set text prediction and completion (☰i):

Your phone can learn the words you enter, to improve text prediction and completion. In a

text entry display, press the **Options** key
> **Text Entry** > **Set Text Prediction** > **Learn My Words**. If **Learn My Words** is active, you can also activate **Offer Completion** so that your phone guesses the rest of a word when you enter the first three letters. Your phone shows **☐** when **Learn My Words** is active and **☐i** when **Offer Completion** is also active.

Enter punctuation: Press **[]** to enter punctuation or other characters.

Edit or delete text: To edit text, press **⬅** to position the cursor to the right of text you want to edit. Press the **clear key** **⌫** to delete the character to the left of the cursor. Hold the **clear key** **⌫** to delete the word to the left of the cursor.

word mode

Press **[#]** in a text entry screen to switch to “word” predictive text entry mode. Your phone shows **[Ab]** in the display.

Word mode lets you enter words using one keypress per letter. The phone combines your keypresses into common words, and predicts each word as you enter it.

 
For example, if you press **[7]** **[6]** **[4]**, your display shows:

Press **[*]** to enter **Prog &** a space.

Press **[↶]** up or down to see other words.

Press **[↷]** to select one.

You can turn text completion on (**[mi]**) or off (**[mp]**).

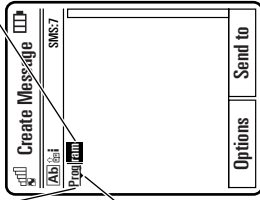


Press **[↶]** to delete character to left of cursor.

abc mode

Press **[#]** in a text entry screen to switch to "abc" text entry mode. Your phone shows **Ab** in the display.

To enter text, press a keypad key repeatedly to cycle through the letters and number on the key. Repeat this step to enter each letter.

 For example, if you press **[7]** one time, your display shows:

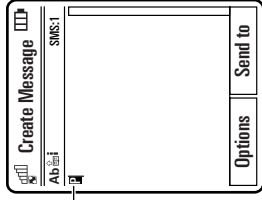

Character displays at insertion point.

After two seconds, character is accepted and cursor moves to next position.

Press **[↷]** to move the flashing cursor.

Press **[↷]** to move the flashing cursor.

numeric mode

Press **#** in a text entry screen until you see **123**. Press the number keys to enter the numbers you want.

Tip: Just need one number? To enter a number quickly, press and hold a number key until the number appears.

symbol mode

Press **#** in a text entry screen until you see **:@**. The display shows the symbol associated with each keypad key. Press **◊** up or down to see different symbols, or scroll to one you want. To insert a symbol, press its key, or scroll to it and press the *navigation key* in **◊**.

volume

Press the volume keys to:

- turn off an incoming call alert
- change the speaker volume when playing a song or video clip
- change the earpiece volume during a call
- change the ring profile from the home screen



handsfree speaker

You can use your phone's handsfree speaker to make calls without holding the phone to your ear.

During a call, press the **Options** key > **Speaker On** to turn the handsfree speaker on. Your display shows the speakerphone indicator until you turn it off (press the **Options** key > **Speaker Off**) or end the call.

codes & passwords

Your phone's four-digit **unlock code** is originally set to **1234**. The six-digit **security code** is originally set to **000000**. If your service provider didn't change these codes, you should change them:

Find it: Press the **Main Menu** key >  **Settings** > **Security** > **Change Passwords**

You can also change your **SIM PIN** or call barring passwords.

If you forget your unlock code: At the **Please Verify the Unlock Code** prompt, try entering 1234 or the last four digits of your phone

number. If that doesn't work, press  and enter your six-digit security code instead.

If you forget other codes: If you forget your security code, SIM PIN code, PIN2 code, or call barring password, contact your service provider.

lock & unlock phone

You can lock your phone to keep others from using it. To lock or unlock your phone, you need the four-digit unlock code.

 
To **manually lock** your phone: Press the **Main Menu** key >  **Settings** > **Security** > **Phone Lock** > **Lock Now**.

To **automatically lock** your phone whenever you turn it off: Press the **Main Menu** key >  **Settings** > **Security** > **Phone Lock** > **Lock at Power On** > **On**.

Note: You can make emergency calls on a locked phone (for more information, see page 63). A locked phone still rings or vibrates for incoming calls or messages, **but you need to unlock it to answer.**

lock & unlock keypad

You can lock your keypad to prevent accidental key presses. Slide the keypad lock switch up to lock it, or down to unlock.



Note: When your keypad is locked, you can only make emergency calls, or respond to notifications for incoming calls, alarms, and connection requests from other Bluetooth devices.

customize

profiles

You can quickly change your phone's alert profile to match your activity, environment, or personal requirements. Each profile uses a different set of sounds or vibrations for incoming calls and other events. The profile indicator shows at the top of the home screen:



To change your profile, press the volume keys in the home screen.


Airplane Mode turns off your phone's calling features in locations where wireless phone use is prohibited. You can use the phone's music player and other non-calling features in airplane mode.

change alerts in a profile

You can change the alerts that a profile uses to notify you of incoming calls and other events.

Note: You can't set an alert for the **Silent** profile, or change some settings for some profiles.

Find it: Press the **Main Menu** key > **Settings** > **Profiles**, scroll to the profile, press the **Options** key > **Edit**


1 Scroll to the profile setting you want to change, then press the *navigation key* in .

2 Select the setting value you want.

3 Press the **Save** key to save your profile changes.

create a new profile

You can create a new ring style profile to set alerts for incoming calls and other events.

Find it: Press the **Main Menu** key >  **Settings** > **Profiles**, press the **Options** key > **Create New Profile**

time & date

Your phone needs to know the current time and date for the **Calendar**.

Find it: Press the **Main Menu** key >  **Settings** > **Phone Settings** > **Time & Date**

To **synchronize** the time and date with the network, > **Auto-Update Local Time*** > **On**.

To **manually** set the time and date, turn off **Auto-Update Local Time***, then > **Time** and **Date**.

To change your **time zone**, > **Time Zone**, then select a city in your time zone.

* Indicates network or subscription-dependent features


themes

You can use Themes to personalize the look and sound of your phone. A theme is a package of images and sound files associated with available alert and image settings on your phone. Most themes contain a wallpaper and screensaver images and ringtones.

A *phone theme* is a group of images and sound files that you can apply to








your phone. Most themes include a wallpaper image, screen saver image, and ring tones.

To **apply** a theme: Press the **Main Menu** key >  **Settings** > **Themes** > *theme*.

modify a theme

You can change the images and sounds that a theme applies to your phone.

Find it: Press the **Main Menu** key >  **Settings** > **Themes**, scroll to the theme, press the **Options** key > **Edit**

- 1 Press  or right to select the  **sounds** menu or  **images** menu.
- 2 Press  or down to scroll to the setting you want to change, then press the *navigation key* in .
- 3 Scroll to the image or sound file you want, then select it.
- 4 Press the **Save** key to save your theme changes.


The **Wallpaper** appears as a background image in your home screen.


The **Screen Saver** shows in the display when no activity is detected for a specified time.

To **reset** a theme's default settings: Press the **Main Menu** key >  **Settings** > **Themes**, scroll to the theme, press the **Options** key > **Manage** > **Restore to default**.

create a new theme

You can create a new theme that uses the images and sounds you specify.

Find it: Press the **Main Menu** key >  **Settings** > **Themes**, press the **Options** key > **Create New** or **Create a copy**.

To **delete** a theme you created: Press the **Main Menu** key >  **Settings** > **Themes**, scroll to the theme, press the **Options** key > **Manage** > **Delete**.


display appearance

To set your display **brightness**: Press the **Main Menu** key >  **Settings** > **Phone Settings** > **Display Settings** > **Brightness**.

To save battery life, the **backlight** can turn off when you're not using your phone. The backlight turns back on when you press any key. To set how long your phone waits before the backlight turns off:

Press the **Main Menu** key >  **Settings** > **Phone Settings** > **Display Settings** > **Backlight Timeout**.

To save battery life, the **display** can turn off when you're not using your phone. The display turns back on when you press any key. To set how long your phone waits before the display turns off:


Press the **Main Menu** key >  **Settings** > **Phone Settings** > **Display Settings** > **Display Timeout**.

To select the delay interval (period of inactivity) before the **screen saver** shows in the display:

Press the **Main Menu** key >  **Settings** > **Phone Settings** > **Display Settings** > **Screensaver Timeout**.

Tip: This feature helps save your screen, but not your battery. To extend battery life, turn off the screen saver.

answer options

You can set your phone to answer incoming calls when you press any key (not just ):

Find it: Press the **Main Menu** key >  **Settings** > **Call Settings** > **In-Call Setup** > **Answer Options** > **Any Key Answer**

calls

To make and answer calls, see page 23.

turn off a call alert


 



Press the volume keys to turn off a call alert before answering the call.

recent calls

Your phone keeps lists of incoming and outgoing calls, even for calls that didn't connect. The most recent calls are listed first. The oldest calls are deleted as new calls are added.

Shortcut: Press  from the home screen to see the **Dialled Calls** list, and press  to switch to **Missed Calls**, **Answered Calls**, and **Recent Calls**.

Find it: Press the **Main Menu** key >  **Recent Calls**

- 1 Press the **Options** key > **Filter by** to select a call list: **All Calls**, **Dialled Calls**, **Missed Calls**, or **Answered Calls**.
- 2 Scroll to a call. Icons indicate if the call was incoming  or outgoing , and if it connected .
 - To call the number, press .
 - To see call details (like time and date), press the *navigation key in* .
 - Press the **Options** key to select or adjust recent calls options:


options	
Filter by	Select a call list.

options	
Call	Call the number.
Send Message	Open a new message with the number in the To field.
Save To Contacts	Create a new contact for the number, or update the number for an existing contact.
Delete	Delete the number from the call list.
Select Multiple	Select multiple numbers to delete or send a message.
Hide ID/Show ID	Hide or show your caller ID for the next call.

To select or adjust call times and costs, see page 77.


redial

- 1 Press  from the home screen to see the **Dialled Calls** list.
- 2 Scroll to the number you want to call, then press .

If you hear a **busy signal** and you see **Call Failed**, press  or the **Retry** key to redial the number. When the call goes through, your display shows **Connected** and connects the call.

return a call

Your phone keeps a record of your unanswered calls, and shows **X Missed Calls**, where **X** is the number of missed calls.

- 1 Press  from the home screen to see the **Dialled Calls** calls list.


- 2 Press the **Options** key > **Filter by** > **Missed Calls**.
- 3 Scroll to the call you want to return, then press .

Notepad

You can use your phone's **Notepad** to store shopping lists, task lists, or other brief text:

Find it: Press the **Main Menu** key >  **Office Tools** > **Notepad**

- 1 Select **Create New Note** (if you already have notes saved, press the **Options** key > **Create New Note**).
- 2 Press keypad keys to enter the note text (for more information about text entry, see page 50).

If you want a flag to appear next to the note, scroll to **Flag Note** and press *navigation key in *.

- 3 Press the **Save** key to save the note.


hold or mute a call

To put all active calls on hold, press the **Options** key > **Hold**.

To put all active calls on mute, press the **Options** key > **Mute**.

call waiting

When you're on a call, you'll hear an alert if you receive a second call.

Press  to answer the new call.

- To switch between calls, press the **Options** key > **Switch calls**.
- To connect the two calls, press the **Options** key > **Link calls**.



- To end the call on hold, press the **Options** key > **End Call On Hold**.

To turn the call waiting feature on or off:

Find it: Press the **Main Menu** key > **Settings** > **Call Settings** > **In-Call Setup** > **Call Waiting**

caller ID

Calling line identification (caller ID) shows the phone number for an incoming call in your displays.

Your phone shows the caller's name and picture when they're stored in your contacts list, or **Incoming Call** when caller ID information isn't available.

To show or hide **your phone number** for the next outgoing call, enter digits in the display, then press the **Options** key > **Hide ID** or **Show ID**. To show or hide your phone number for all calls,

press the **Main Menu** key > **Settings** > **Call Settings** > **In-Call Setup** > **My Caller ID** > **All Calls**.


Tip: You can identify callers without even looking. To give one of your contacts a special ring, see page 69.

emergency calls


Your service provider programs one or more emergency phone numbers, such as 999 or 112, that you can call under any circumstances, even when your phone is locked or the SIM card is not inserted.

Note: Emergency numbers vary by country. Your phone's preprogrammed emergency number(s) may not work in all locations, and sometimes an emergency call cannot be placed due to network, environmental, or interference issues.

1 Press the keypad keys to dial the emergency number.

2 Press  to call the emergency number.

international calls


If your phone service includes international dialling, press and hold  to insert your local international access code (indicated by +). Then, press the keypad keys to dial the country code and phone number.

speed dial


Your phone can store nine phone numbers that you can call with a single keypress.

To call a speed dial number, press and hold the single-digit speed dial number for one second.

voicemail

Your network stores the voicemail messages you receive. To listen to your messages, call your voicemail number. 

Note: Your service provider may include additional information about using this feature.

When you **receive** a voicemail message, your phone shows the new message indicator  and **New Voicemail**. Press the **Call** key to listen to the message.





To **check** voicemail messages:





Find it: Press the **Main Menu** key > **Messages** > **Call Voicemail**

Your phone may prompt you to store your voicemail phone number. If you don't know your voicemail number, contact your service provider

other features

advanced calling

features	
conference call During a call: Dial next number, press  , press the Options key > Link Calls .	
transfer a call During a call: Press the Options key > Transfer , dial transfer number, press  .	

features	
call forwarding Set up or cancel call forwarding: Press the Main Menu key >  Settings > Call Settings > Call Forward	
call barring Restrict outgoing or incoming calls: Press the Main Menu key >  Settings > Call Settings > Call Barring	

features

change phone line

If you have a dual-line-enabled SIM card, you can change your line to make and receive calls from your other phone number.

Press the **Main Menu** key >  **Settings** > **Call Settings** > **In-Call Setup** > **Active Line**

The active line indicator shows the active phone line (see illustration on page 49).



features

fixed dial

When you turn on fixed dialling, you can call only numbers stored in the fixed dial list.

Turn fixed dialling on or off:

Press the **Main Menu** key >  **Settings** > **Call Settings** > **Fixed Dialling**

Use the fixed dial list:

Press the **Main Menu** key >  **Office Tools** > **Dialling Services** > **Fixed Dial**



service dial

Dial service phone numbers:

Press the **Main Menu** key >  **Office Tools** > **Dialling Services** > **Service Dial**



features

quick dial*




Dial preprogrammed phone numbers:

Press the **Main Menu** key >  **Office Tools**
> **Dialling Services** > **Quick Dial**

DTMF tones

Activate DTMF tones:

Press the **Main Menu** key >  **Settings**
> **Call Settings** > **In-Call Setup** > **DTMF**

Send DTMF tones during a call:

Press number keys.

*Indicates network or subscription-dependent features

contacts

 

For basic contact list features, see page 23.

features





add new contact






Press the **Main Menu** key >  **Contacts**, press the **Options** key > **Create New** > **Phone Contact** or **SIM Card Contact**


 
For a **Phone Contact**: Press  left or right for contact details , picture ID , alerts , or notes .





Press  up or down to scroll to information you want to change, then press the *navigation key in * to select it.



Shortcut: Enter a phone number in the home display and press the **Save** key. This saves the phone number in your standard storage location (see **set contact storage location** after this feature).




<p>features</p>	<p>set contact storage location</p> <p>You can store contacts in your phone memory, SIM card memory, or both. Contacts stored in the SIM card can contain only a name and phone number. To set your standard storage location:</p> <p>Press the Main Menu key >  Contacts, press the Options key > Manage Contacts > Contacts Settings > Default Save Location</p> <p>call contact</p> <p>Press the Main Menu key >  Contacts, scroll to the contact, press  to call.</p> <p>Note: If a contact has multiple phone numbers, press  left or right to select the number you want to call.</p>
------------------------	---



<p>features</p>	<p>send message to contact</p> <p>Press the Main Menu key >  Contacts, scroll to the contact, press the Options key > Send Message</p>	<p>add additional phone number or email address to contact</p> <p>Press the Main Menu key >  Contacts, scroll to the contact, press the Options key > Edit Contact, press  left or right to select the details menu F.</p> <p>Press  up or down to scroll to an empty Number or Email field, then press the <i>navigation key in </i> to select it.</p> <p>Note: This option isn't available for contacts stored on the SIM card.</p>
------------------------	--	---

features
<p>set picture ID for contact</p> <p>Assign a photo or picture to show in the display when you receive a call from a contact:</p> <p>Press the Main Menu key >  Contacts > <i>entry</i>, press the Options key > Edit Contact, press ·Q· left or right to select the picture ID menu  > <i>picture icon</i></p> <p>Note: This option isn't available for contacts stored on the SIM card.</p>




features	
<p>set alert(s) for contact</p> <p>Assign a distinctive call alert (ringer ID) or message alert for a contact:</p> <p>Press the Main Menu key >  Contacts, scroll to the contact, press the Options key > Edit Contact, press ·Q· left or right to select the alerts menu  > Call Alert or Message Alert.</p> <p>Note: This option isn't available for contacts stored on the SIM card.</p>	<p>assign contact to category</p> <p>Press the Main Menu key >  Contacts, scroll to the contact, press the Options key > Edit Contact, press ·Q· left or right to select details  > Category.</p> <p>Note: This option isn't available for contacts stored on the SIM card.</p>

features
set category view Press the Main Menu key >  Contacts , press the Options key > Filter By . You can show contacts in a predefined category (Family, Friends, Work), or contacts in a category you create (select Create Category).
set alert(s) or picture ID for category Assign a distinctive call alert (ringer ID), message alert, or picture ID for contacts in a specified category: Press the Main Menu key >  Contacts , press the Options key > Manage Contacts > Edit Categories .

features
create group mailing list Assign contacts to a group message list or email list: Press the Main Menu key >  Contacts , press the Options key > Create New > Message List or Email List .
set contact list view Show contacts with picture ID photos, or as a text list: Press the Main Menu key >  Contacts , press the Options key > Manage Contacts > Contacts Settings > Default View > Thumbnail or List
set contact list sort order Press the Main Menu key >  Contacts , press the Options key > Manage Contacts > Contacts Settings > Default Sort Order > First Name or Last Name




<p>features</p>	<p>copy all contacts to SIM card</p> <p>Copy all contacts from phone memory to the SIM card:</p> <p>Press the Main Menu key >  Contacts, press the Options key > Manage Contacts > Copy All To SIM Card.</p>
<p>synchronize contacts</p> <p>Synchronize contacts over-the-air direct to a SyncML server using MOTOSYNC:</p> <p>Press the Main Menu key >  Contacts, press the Options key > Manage Contacts > Synchronize.</p>	



<p>features</p>	<p>send contact to another device</p> <p>Send a contact to another phone or computer that supports Bluetooth™ connections:</p> <p>Press the Main Menu key >  Contacts, scroll to the contact, press the Options key > Send Contact Via > Bluetooth</p> <p>For more information, see page 42.</p>
<p>delete contact</p> <p>Press the Main Menu key >  Contacts, scroll to the contact, press the Options key > Delete Contact</p>	<p>delete multiple contacts</p> <p>Press the Main Menu key >  Contacts, press the Options key > Select Multiple.</p> <p>Select the contacts you want to delete, then press the Options key > Delete.</p>

messages

For instructions on entering text, see page 50.

features
delete all contacts Press the Main Menu key >  Contacts , press the Options key > Manage Contacts > Delete All Contacts .
import vCard Import contact information from a vCard file stored on your phone. Press the Main Menu key >  Contacts , press the Options key > Manage Contacts > Import vCard .
store owner's information Store information about yourself on your phone. Press the Main Menu key >  Contacts , press the Options key > Manage Contacts > Owner's Information .

features

send text message



Press the **Main Menu** key >  **Messages** > **Create Message**




Your phone sends an SMS text message by default, unless you insert multimedia content or perform a function reserved for multimedia messages.









send quick note



Send a pre-written quick note.

Press the **Main Menu** key >  **Messages** > **Templates** > **Text Templates** > *quick note*, press the **Options** key > **Send**.

features	
send email	
Press the Main Menu key > Messages > Email	
use a multimedia template	
Open a multimedia template with preloaded media: Press the Main Menu key > Messages > Templates > Multimedia Templates	
read new message or email	
When your display shows New Message , press the Read key.	

features	
read old messages	
Press the Main Menu key > Messages > Inbox .	
Icons next to each message show if it is unread  , read  , urgent  , locked  , or has an attachment  .	
Press the Options key to perform various operations on a message.	
read old email	
Press the Main Menu key > Messages > Email .	
Press the Options key to perform various operations on a message.	
store message objects	
Go to a multimedia message page, then press the Options key > Store .	




<p>features</p>	<p>browser messages</p> <p>Read messages receive by your micro-browser:</p> <p>When your display shows New Message, press the Read key.</p> <p>To activate browser messages and adjust browser message settings:</p> <p>Press the Main Menu key > Messages, press the Options key > Settings > Browser Messages.</p>
------------------------	---




<p>features</p>	<p>info services</p> <p>Read subscription-based information services messages:</p> <p>When your display shows New Message, press the Read key.</p> <p>To activate information services and adjust info services settings:</p> <p>Press the Main Menu key > Messages, press the Options key > Settings > Info Services.</p>
<p>set up email accounts</p> <p>You can set up and use multiple email accounts on your phone:</p> <p>Press the Main Menu key > Messages > Email, press the Options key > Add Account.</p> <p>Note: Your display shows a separate folder for each email account.</p>	




personalize

features	
language	
Set menu language: Press the Main Menu key >  Settings > Phone Settings > Language	
ring volume	
Press the Main Menu key >  Settings > Profiles , scroll to the current selected profile, press the Options key > Edit > Alert Volume	
media playback volume	
Press the Main Menu key >  Settings > Profiles , scroll to the selected profile, press the Options key > Edit > Playback Volume	

features	
reminders	
Set the reminder alert for event notifications: Press the Main Menu key >  Settings > Profiles , scroll to the selected profile, press the Options key > Edit > Reminder Alert	
clock view	
Show an analog or digital clock in the home screen, or turn off the clock: From the home screen, press the Options key > Customise Home > Clock Style	
date view	
Show or turn off the date in the home screen: From the home screen, press the Options key > Customise Home > Date	

features	
menu view	<p>Show the main menu as a grid of graphic icons or as a text-based list:</p> <p>Press the Main Menu key, press the Options key > View by # > Grid or List</p>
main menu	<p>Reorder your phone's main menu:</p> <p>Press the Main Menu key, press the Options key > Reorder</p>
show/hide feature icons	<p>Show or hide feature icons in the home screen:</p> <p>From the home screen, press the Options key > Customise Home > Shortcut Keys > Show Icons</p> <p>Note: You can still select feature icons when they are hidden from view.</p>

features	
change feature icons	<p>Change feature icons in the home screen:</p> <p>From the home screen, press the Options key > Customise Home > Shortcut Keys > <i>feature icon location</i></p>
reset settings	<p>Reset all default settings except unlock code, security code, and lifetime timer:</p> <p>Press the Main Menu key, >  Settings > Phone Settings > Reset > Reset All Settings</p>


features

delete data

Caution: This option erases all **information you have entered** (including phonebook and calendar entries) **and content you have downloaded** (including photos and sounds) stored in your phone's memory. After you erase the information, you can't recover it.

This option does **not** delete SIM card information:

Press the **Main Menu** key, >  **Settings**
> **Phone Settings** > **Reset** > **Delete All Data**


you end the call by pressing . This time includes busy signals and ringing.

The amount of network connection time you track on your resettable timer may not equal the amount of time for which you are billed by your service provider. For billing information, contact your service provider.

features

call times


Show call timers:

Press the **Main Menu** key >  **Recent Calls**,
press the **Options** key > **Call Times**









in-call timer

Show time or cost information during a call:







Press the **Main Menu** key >  **Settings**
> **Call Settings** > **In-Call Setup** > **In-Call Timer**

call times & costs

Network connection time is the elapsed time from the moment you connect to your service provider's network to the moment

features	
call cost	
Show call cost trackers: Press the Main Menu key >  Recent Calls , press the Options key > Call Costs	
credit info (prepay option)*	
Show credit information: Press the Main Menu key >  Recent Calls , press the Options key > Call Costs > Credit Info	
credit available (advice of charge option)*	
Show credit available: Press the Main Menu key >  Recent Calls , press the Options key > Call Costs > Credit Available	

*Indicates network or subscription-dependent features

features	
call cost setup	
Set a credit limit: Press the Main Menu key >  Recent Calls , press the Options key > Call Costs > Call Cost Setup	
data times	
Show data call timers: Press the Main Menu key >  Recent Calls , press the Options key > Data Times	
data volumes	
Show data volume meters: Press the Main Menu key >  Recent Calls , press the Options key > Data Volumes	

handsfree

Note: The use of wireless phones while driving may cause distraction. Discontinue a call if you can't concentrate on driving. Additionally, the use of wireless devices and their accessories may be prohibited or restricted in certain areas. Always obey the laws and regulations on the use of these products.

features

speakerphone

Activate a connected external speakerphone during a call:

Press the **Speaker** key (if available), or press the **Options** key > **Speaker On**.

features

auto answer (car kit or headset)

Automatically answer calls when connected to a car kit or headset:



Press the **Main Menu** key > **Settings** > **Phone Settings** > **Headset Settings** > **Auto Answer**

voice dial (headset)

Enable voice dial with headset send/end key:

Press the **Main Menu** key > **Settings** > **Phone Settings** > **Headset Settings** > **Voice Dial**

data & fax calls

features
send data or fax Connect your phone to the device, then place the call through the device application.
receive data or fax Connect your phone to the device, then answer the call through the device application.
create new data connection Press the Main Menu key >  Settings > Connections > Data Connections > Add a new connection
edit data connection Press the Main Menu key >  Settings > Connections > Data Connections > Edit a Connection

features

delete data connection

Press the **Main Menu** key >  **Settings** > **Connections** > **Data Connections** > **Remove a Connection**



network

features




network settings



See network information and adjust network settings:


Press the **Main Menu** key >  **Settings** > **Network** > **Current Network**







personal organizer





features
set alarm Press the Main Menu key >  Office Tools > Alarm Clock
turn off alarm When the display shows an alarm: To turn off the alarm, press the Dismiss key or  .To set a delay, press the Snooze key.
add new calendar event Press the Main Menu key >  Office Tools > Calendar , press the Options key > Create New Event

features
calendar event reminder When the display shows an event reminder: To see reminder details, select Open Event . To close the reminder, press the Dismiss key.
send calendar event to another device Send a calendar event to another phone or computer that supports Bluetooth™ connections: Press the Main Menu key >  Office Tools > Calendar , scroll to the day, press the <i>navigation key</i> in  , scroll to the event, press the Options key > Share Event Via Bluetooth . For more information, see page 42.



features	<p>manage downloaded files</p> <p>Manage files that you've downloaded onto your phone from the micro-browser or over a Bluetooth™ connection:</p> <p>manage the multimedia files and application files</p> <p>Press the Main Menu key >  Multimedia > Download Manager</p>	<p>manage files</p> <p>Manage multimedia files and applications stored on your phone and on your removable memory cards:</p> <p>Press the Main Menu key > File Manager</p>
-----------------	--	--

features	<p>world clock</p> <p>Show time and date information for multiple cities around the world:</p> <p>Press the Main Menu key >  Office Tools > World Clock.</p>	<p>task list</p> <p>Create a checklist of tasks you need to perform:</p> <p>Press the Main Menu key >  Office Tools > Task List.</p>
-----------------	---	---

features	<p>create voice record</p> <p>Press the Main Menu key >  Multimedia > Voice Recorder, press the <i>navigation key in</i>  to start recording, press the Stop key to stop recording.</p> <p>Press the Save key to save the voice record.</p> <p>Press the Options key to perform various operations on the voice record.</p> <p>Note: Recording of phone calls is subject to varying State and Federal laws regarding privacy and recording of phone conversations. Always obey the laws and regulations on the use of this feature.</p>
-----------------	---






features	<p>play voice record</p> <p>Play back a voice record:</p> <p>Press the Main Menu key >  Multimedia > Media Finder > Voice Note > <i>Press in</i>  to <i>start playing</i></p> <p>calculator</p> <p>Press the Main Menu key >  Office Tools > Calculator</p> <p>currency converter</p> <p>Press the Main Menu key >  Office Tools > Calculator. Press the Options key</p> <p>> Set Exchange Rate, enter the exchange rate, and press the Set key. Now, enter the amount, press the Options key > Convert Currency.</p>
-----------------	---







security

features
SIM PIN Caution: If you enter an incorrect PIN code three times before the correct code, your SIM card is disabled and your display shows SIM Blocked . Lock or unlock the SIM card: Press the Main Menu key >  Settings > Security > SIM Lock
lock application Press the Main Menu key >  Settings > Security > Application Lock

fun & games

features
manage pictures Press the Main Menu key > File Manager > Pictures Press the Options key > Manage to rename a photo, picture, or animation.
manage video clips Press the Main Menu key > File Manager > Videos Press the Options key > Manage to rename a video clip.

features	
manage music and sounds	
Manage ring tones and music that you have downloaded:	
Press the Main Menu key > File Manager > Music and Sounds	
Press the Options key > Manage to rename a ring tone or music file.	
play music	
Press the Main Menu key >  Multimedia > Media Finder > Music and Sounds > <i>song name</i>	
create playlist	
Create a playlist of songs to play:	
Press the Main Menu key >  Multimedia > Media Finder > Music and Sounds > <i>song name</i> , press the Options key > Apply > Playlist	

features	
start micro-browser	
Press the Main Menu key >  Web Access > Browser	
download objects from Web page	
Download objects (such as picture or sound files) from a Web page:	
Scroll to the file, press the <i>navigation key</i> in  , press the Store key.	
download game or application	
Download a Java™ game or application with the micro-browser:	
Press the Main Menu key >  Web Access > Browser > <i>download page</i> , scroll to the application, press the Select key, press the Download key	

features

start game or application

Start a Java™ game or application:

Press the **Main Menu** key >  **Games**, scroll to the game or application, press the *navigation key in* .



MyMobileSoft.com

Introduction


MyMobileSoft.com¹ provides download of both free and paid software for your Motorola handset. Depends on each model, you may download games, ring tones, screen savers, wall papers, e-books, financial and others software from MyMobileSoft.com.

1. All software and applications contained on MyMobileSoft.com are third party products and provided as is. Motorola or its subsidiaries make no representations or warranties, expressly or impliedly. By way of example but not of limitation, Motorola or its subsidiaries make no representations or warranties of merchantability or fitness for a particular purpose, or that the use of the software and applications will not infringe any intellectual property rights. Motorola or its subsidiaries shall not be liable for any damages of any kind arising out of or relating to the use or inability to use the software and applications and services thereof. Amendment and availability of these software and applications are subject to change without any prior notice.

For more information, please visit the internet website:

www.mymobilesoft.com

Access to MyMobileSoft.com²

1 Press  > **Web Access** > **My Bookmarks**

2 Select **MotoMusic**

or


Select **MyMobileSoft Download Fun**

or

Select **MyMobileSoft Mobile Portal**

OR

User can also enter the following URLs* to access website

Press  > **Web Access** > **Go to page**

- MotoMusic
(<http://www.MotoMusic.com.hk>)

- MyMobileSoft Download Fun
(<http://hk.mymobilesoft.com>)

- MyMobileSoft Mobile Portal
(<http://mobile.mymobilesoft.com>)

This link guides you to the service of MyMobileSoft.com, which provides software and applications for your newly bought Motorola Mobile Phone.

*The URLs are subject to change without prior notice. Please refer to website www.mymobilesoft.com

2. You need to subscribe WAP service from your local operators, please make sure that you set up your handset correctly with appropriate parameters provided by your local operators.

www.mymobilesoft.com
Unlimited surprises waiting for
you to download

other features

Specific Absorption Rate Data

This model meets international guidelines for exposure to radio waves.

Your mobile device is a radio transmitter and receiver. It is designed not to exceed the limits for exposure to radio waves recommended by international guidelines. These guidelines were developed by the independent scientific organization ICNIRP and include safety margins designed to assure the protection of all persons, regardless of age and health.

The guidelines use a unit of measurement known as the Specific Absorption Rate, or SAR. The ICNIRP SAR limit for mobiles devices used by the general public is 2 W/kg and the highest SAR value for this device when tested at the ear was 0.99 W/kg.¹ As mobile devices offer a range of functions, they can be used in other positions, such as on the body as described in this user guide.² In this case, the highest tested SAR value is 0.60 W/kg.¹

As SAR is measured utilizing the device's highest transmitting power, the actual SAR of this device while operating is typically below that indicated above. This is due to automatic changes to the power level of the device to ensure it only uses the minimum level required to reach the network.

While there may be differences between the SAR levels of various phones and at various positions, they all meet the governmental

requirements for safe exposure. Please note that improvements to this product model could cause differences in the SAR value for later products; in all cases, products are designed to be within the guidelines.

The World Health Organization has stated that present scientific information does not indicate the need for any special precautions for the use of mobile devices. They note that if you want to reduce your exposure then you can do so by limiting the length of calls or using a "hands-free" device to keep the mobile phone away from the head and body.

Additional Information can be found on the websites of the World Health Organization (<http://www.who.int/emf>) or Motorola, Inc. (<http://www.motorola.com/rfhealth>).

1. The tests are carried out in accordance with international guidelines for testing. The limit incorporates a substantial margin for safety to give additional protection for the public and to account for any variations in measurements. Additional related information includes the Motorola testing protocol, assessment procedure, and measurement uncertainty range for this product.
2. Please see the *Safety and General Information* section about body worn operation.

Information from the World Health Organization

Present scientific information does not indicate the need for any special precautions for the use of mobile phones. If you are concerned, you may want to limit your own or your children's RF exposure by limiting the length of calls or by using handsfree devices to keep mobile phones away from your head and body.

Source: WHO Fact Sheet 193

Further information: <http://www.who.int./peh-emf>

GNU General Public License

For instructions on how to obtain a copy of any source code being made publicly available by Motorola related to software used in this Motorola mobile device, which may be subject to GNU's General Public License, please send an email to ezxgp1@motorola.com.

index

A

abc mode 52
accessories 19, 41, 79
active line indicator 49
active line, change 66
airplane mode 31
airplane mode indicator 48
alarm clock 81
alert
 set 56, 57
 turn off 53, 60
animation 85
answer a call 23, 59
audio file formats 34
audio player 25

B

backlight 59
battery 20, 21
battery charge indicator light
 21
battery indicator 49
battery life, extend 22, 41,
 59
Bluetooth indicator 42, 48
Bluetooth wireless 31, 41,
 71, 82
bonding. See Bluetooth
 wireless
brightness 59
browser messages 74

C

calculator 84
calendar 81
call
 answer 23, 59
 end 23
 make 23, 24
 call alert 69
 call barring 54, 65
 call forward indicator 49
 call forwarding 65
 call timers 78, 79
 call waiting 62
 caller ID 61, 63, 69
 camera 37, 39
 car kit 79
 center select key 1

- clear key 51
- clock 57, 75
- codes 54
- conference call 65
- contacts
 - add an entry 23, 67
 - dial an entry 24
 - picture ID 63
 - storing on SIM 68
- costs, track 78, 79
- credit information 78

D

- data call 79, 80
- data connection 80
- date 57, 75
- delete data 77
- delete memory cards 77
- delete text 51
- dial a phone number 23, 66, 67

- dialled calls 60
- digit dial (voice) 35
- digital audio 25
- display 2, 47, 59, 75
- download manager 82
- download media objects 73, 86
- DTMF tones 67

E

- earpiece volume 53
- email 73, 74
- email address 67
- emergency number 63
- end a call 23
- end key 1, 23
- Enter Unlock Code message 54

F

- fax call 80

- feature icons 76
- file formats 34
- file manager 82
- fixed dial 66
- flip 23
- FM Radio 30
- formats, file 34
- forward calls 65

G

- GPRS indicator 48
- group mailing list 70

H

- handsfree speaker 53
- headset 79
- headset jack 1
- headset requirements 26
- help 47
- hold a call 62
- home screen 2, 47, 75, 76

I
in-call indicator 49
Incoming Call message 63
information services 74
international access code 64

L
language 75
linking. See Bluetooth
wireless

lock

application 84
keypad 55
phone 54
SIM card 84
Low Battery message 49

M

Main Menu key 19, 47
make a call 23

media playback 75
memory card 1, 32
menu 2, 76
menu icons 47, 76
message
reading 73
sending 72
message alert 69
message indicator 49
message reminders 75
micro-browser 74
Missed Calls message 61
MOTOSYNC 45
MP3 sound files 25
multimedia message 73
music 85, 86
mute a call 62

N

name dial 35
navigation key 1, 19

network settings 81
notepad 62
numeric entry mode 53

O

optional accessory 19
optional feature 19

P

pairing. See Bluetooth
wireless
passwords. See codes
personalize 75
phone number
storing 23, 67
your number 24, 66
photo 37, 85
photo file formats 34
picture 85
picture ID 63, 69
PIN code 23, 54, 84

PIN2 code 54
power key 1, 23
predictive text entry 51
printing 44
profile indicator 49
profiles 56

Q

quick dial 67

R

received calls 60
recent calls 60
redial 61
reminders 75
reset settings 76
return a call 61
ring tone 85, 86
ringer ID 63, 69
ringer volume 53, 75

S

safety information 9
screen saver 57, 59
security code 54
send key 1, 23
service dial 66
signal strength indicator 48
SIM Blocked message 23,
84
SIM card 19, 23, 54, 66, 84
skin 57

smart key 1, 76

soft keys 1, 47, 76

speakerphone 79

speed dial 64

store phone numbers 67

store your phone number 24

symbol entry mode 53

synchronize information 45

T

task list 83
text edit 51
text entry 50
text entry mode 52
text messaging 72
theme 57
time 57
timers 78, 79
transfer a call 65
turn on/off 23

U

unlock

application 84

keypad 55

phone 23, 54

SIM card 84

unlock code 54

V

- video clip 39, 85
- video file formats 34
- voice commands 35
- voice dial 80
- voice key 1
- voice recognition 35
- voice record 83, 84
- voicemail 64
- voicemail message indicator
64
- volume 53, 75
- volume keys 1, 53

W

- wallpaper 57
- word text entry mode 51
- world clock 83

Y

- your phone number 24