



# LG Rhythm™

## Quick Start Guide



Playing Music and  
Changing EQ Settings



Transferring  
Music



Transmitting Music  
to an FM Radio



Bluetooth®  
Pairing





Taking a Picture/  
Recording a Video

# Getting to Know Your Phone




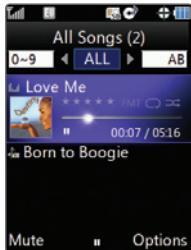 
# Playing Music and Changing EQ Settings

Keep your music with you 24/7. Complete with a customizable equalizer, Rhythm gives you great audio and quick access to your tunes.

1. With the slide closed and the phone unlocked, insert a microSD card\* containing music into your phone.
2. Press and hold  on the right side of the phone.
3. Touch  to view the music player.
4. Touch the **Right Soft Key** for **Options**.
5. Scroll with the **External Control Wheel** to highlight **Equalizer (6)**, and then touch the **Center Touch LCD** for **OK**.
6. Choose from equalizer settings such as **Natural Sound**, **Flat**, **Live**, **Virtual Bass**, **Comfort**, and **Clear**.


\*microSD card sold separately.


**Note:** You can play music in the background while performing other tasks on Rhythm. Once you have exited the music player with Background Music enabled, touch  to return to the player.



# Transferring Music

 It's easy to take your favorite songs on the go with Rhythm. Transfer music from your PC to your phone in a flash.\*

1. With the slide closed and the phone unlocked, insert a microSD card\* into your phone.
2. Touch the **Center Touch LCD** to enter the main menu, and then select **Settings (9) > Memory (9) > Card Memory (3)**.
3. Touch the **Right Soft Key** for **Format**, and then select **Yes (1)**.
4. Touch .
5. Connect a USB cable\* between Rhythm and your PC.
6. Touch the **Center Touch LCD** to select **USB Mass Storage (2)**.
7. The PC will recognize the phone as a **Removable Disk** and a screen will appear. Drag and drop music files on your PC into the **My\_Music** folder.
8. When done, disconnect the phone.

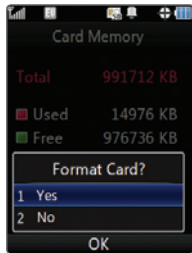

\*microSD card and USB cable required. Sold separately.



# Transmitting Music to an FM Radio

  Want to play your tunes for everyone to hear? Rhythm's cool FM transmitter lets you broadcast your music to an FM receiver (such as your car stereo) up to 10 feet away.

1. With the slide closed and the phone unlocked, insert a microSD card\* containing music into your phone.
2. Press and hold **▶||** on the right side of the phone.
3. Touch **🎵** to view the music player.
4. Touch the **Right Soft Key** for **Options**.
5. Scroll with the **External Control Wheel** to highlight **Music Transmitter (7)**, and then touch the **Center Touch LCD** for **OK**.
6. Select **On (1)**. If needed, you can also change the channel of the FM transmitter from this menu.

*\*microSD card required. Sold separately.*

**Note:** For best audio results, try to find an unused FM channel on the radio with no commercial channels on either side of it.

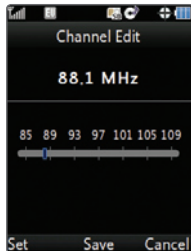
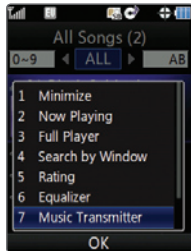


# Bluetooth® Pairing

Forget having a tangled mess of cables and cords. With Bluetooth technology on Rhythm, you can connect wirelessly to headsets, speakers, computers, and more.



  
1. Set your Bluetooth accessory into pairing mode.\*
2. With the slide open and the phone unlocked, touch the **Center Touch LCD** to enter the main menu.
3. Select **Settings (9)** > **Bluetooth (6)** > **Paired Devices (1)**.
4. Touch the **Left Soft Key** for **Search**. If Bluetooth is off, you'll be prompted to turn it on.
5. Select **New Search (1)**.
6. Once your Bluetooth device has been found, highlight it and touch the **Center Touch LCD** for **Pair**.
7. Enter the passcode\* (typically "0000" – 4 zeroes), and then touch the **Center Touch LCD** for **OK**.
8. Select **Yes (1)** to connect with the device.

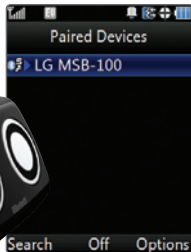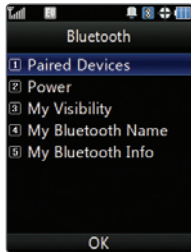
*\*Refer to your Bluetooth accessory's user manual for information about initiating pairing mode and the passcode.*



## Taking a Picture/Recording a Video

 Thanks to Rhythm's integrated 1.3 megapixel camera/camcorder, you can take pictures and record videos with ease. You'll never miss out on the action with Rhythm in your pocket.

1. With the slide closed and the phone unlocked, press and *hold*  on the right side of the phone to activate the camera viewfinder. Press  and select **Record Video (2)** to activate the camcorder.
2. Rotate the phone horizontally.
3. Press the **Right Soft Key** for **Options** to access customizable features.
4. Press  to take the picture or start/stop recording.
5. Touch the **Center Touch LCD** to send the photo/video to someone.

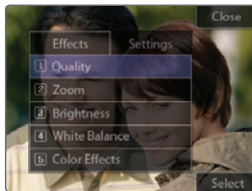

## Optional Accessories

Maximize your phone with these cutting-edge accessories at [LGmobilephones.com/Rhythm](http://LGmobilephones.com/Rhythm).



Bluetooth Headset  
(HBM-760)



Bluetooth Headset  
(HBM-770)



Bluetooth Stereo Speakers



Bluetooth Solar Car Kit



Portable Stereo Speakers



Vehicle Power Charger

©2008 LG Electronics, Inc. All rights reserved. LG is a registered trademark of LG Electronics, Inc. All other marks are proprietary to their respective owners. All phone images are simulated. microSD™ is a trademark of SanDisk. The Bluetooth® trademark and logos are owned by the Bluetooth SIG, Inc. and any use of such marks by LG Electronics is under license.



**Mixed Sources**

Product group from well-managed forests, controlled sources and recycled wood or fiber

[www.fsc.org](http://www.fsc.org) Cert no. XXX-XXX-XXX  
© 1996 Forest Stewardship Council

