

VX6100



Perfection Redefined.

VX6100



CAMERA FEATURES

USING THE CAMERA

Taking and Sending a Photo

You can save up to 60 photos, regardless of resolution, in the gallery.

1. Press the **Camera Key**. Press left or right on the Navigation Key to zoom.
2. Press **OK** to take the picture.
3. When finished, press **Left Soft Key** for **Save** to keep the photo in the gallery, or press **OK** to send.
4. Press **Left Soft Key** for **Contacts** to enter a recipient from the **Contacts (1)**, **PIX place (2)** or **Recent Call (3)** menu, or use the key pad to enter a new e-mail address or phone number. Up to 10 recipients can be added.
5. Scroll down using the Navigation Key to enter the **Subject**, **Text** and **Sound** you wish to add to the message and press **Left Soft Key** for **Send**.

Taking a Photo with the Handset Closed

The VX6100 by LG enables you to access the camera feature with the flip closed.

1. Press the **Camera Key** on the right side of the phone for 3 seconds.
2. Use the external LCD as a viewfinder and press the **Camera Key** to take the photo.
3. When finished, the photo is automatically saved to the gallery.

Setting the Self Timer

1. Press the **Camera Key**.
2. Press **Right Soft Key** for **Options**.
3. Select **Self Timer (1)**.
4. Use the Navigation Key to select from **5 sec** or **10 sec** and press **OK**.
5. Press **Left Soft Key** for **Start**.

Changing the Resolution

1. Press the **Camera Key**.
2. Press **Right Soft Key** for **Options**.
3. Select **Resolution (2)**.
4. Use the Navigation Key to select from **Hi(640x480)**, **Med(320x240)** or **Lo(160x120)** and press **OK**.

Changing the Brightness

1. Press the **Camera Key**.
2. Press **Right Soft Key** for **Options**.
3. Select **Brightness (3)**.
4. Use the Navigation Key to change the brightness and press **OK** for **Done**.

 
 
 
Using the Flash

1. Press the **Camera Key**.
2. Press **Right Soft Key** for **Options**.
3. Select **Flash (9)**.
4. Use the Navigation Key to select **On** and press **OK**.


Shortcut: Press the flash button on the left side of the phone after step 1 to turn the flash on or off.

Sending a Photo from the Gallery

1. Press the **Camera Key**.
2. Press **Left Soft Key** for **Gallery**.
3. Use the Navigation Key to select a photo and press **Right Soft Key** for **Options**.
4. Select **Send (1)**.
5. Press **Left Soft Key** for **Contacts** to enter a recipient from the **Contacts (1)**, **PIX place (2)** or **Recent Call (3)** menu, or use the key pad to enter a new e-mail address or phone number. Up to 10 recipients can be added.
6. Scroll down using the Navigation Key to enter the **Subject**, **Text** and **Sound** you wish to add to the message and press **Left Soft Key** for **Send**.

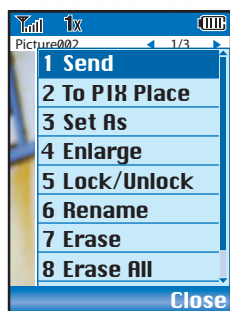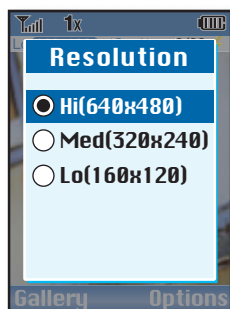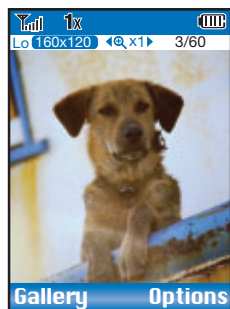

VOICE COMMAND FEATURES

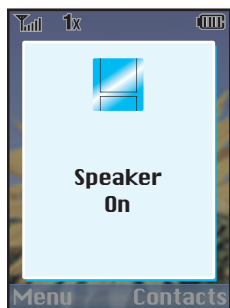 

The VX6100 by LG is enabled with speaker-independent voice recognition. This technology makes it possible for any user to dial a number by speaking the name of a contact entered in the phone book or by speaking the digits of a phone number. Voice command also provides quick and easy access to other essential features and when coupled with speaker phone and driving mode, offers true hands-free usage without additional equipment.

Activating Speaker Phone


1. From main screen, press the **speaker phone** icon (up) on the Navigation Key, "**Speaker On**" will appear on the screen. To deactivate, press the key again and "**Speaker Off**" will appear on the screen.

VOICE SETTINGS

Commands Prompt

Allows you to select how voice recognition is activated.

1. From the **Settings (9)** menu, select **Voice Services (7)**.
2. Select **Commands Prompt (1)**.
3. Use the Navigation Key to select from **Flip Open** or **Side Key Only** and press **OK**.

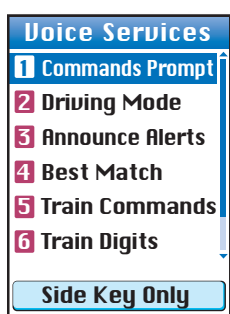


CONNECTIVITY FEATURES

DOWNLOADING GET IT NOW® CONTENT

The new VX6100 by LG can store downloaded content from Get It Now®, a technology and service that allows you to download and use applications, games, ringtones and more on your phone.

Downloading New Content From Get It Now®

 1. From main screen, press the **Get It Now®** icon (right) on the Navigation Key.
2. Press **OK** and select the shopping cart icon.
3. Select a category from the **Get It Now®** catalog and press **OK**.

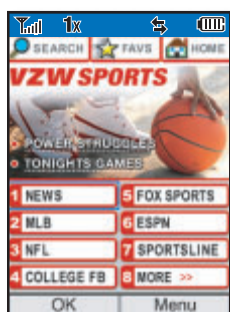

ACCESSING THE WEB

 
1. From the main screen, press the **Web** icon (left) on the Navigation Key.
2. Once the web browser is launched you will see the Home Page.
3. You can end a browser session by pressing **END** at any time.

MESSAGING

Allows you to send a text message with or without graphics and sounds to an e-mail address or phone number.


Sending a SMS or EMS Message

1. From the **Messages (4)** menu, select **New TXT Msg (2)**.
2. Press **Left Soft Key** for **Contacts** to enter a recipient from the **Contacts (1)** or **Recent Call (2)** menu, or use the key pad to enter a new e-mail address or phone number. Up to 10 recipients can be added.
3. Select **Message** and press **OK**.
4. Enter the message (up to 160 characters) using the keypad.
5. To add an attachment, press **Right Soft Key** for **Options** and select from **Insert Quick-Text (1)**, **Insert Object (2)**, **Format Text (3)**, **Save Quick-Text (4)** or **Insert Signature (5)** and press **OK**.
6. Press **Left Soft Key** for **Send**.

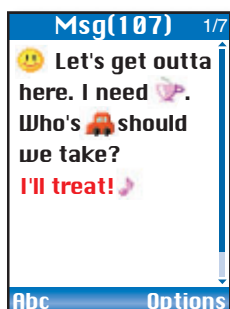

Shortcut: From main screen, press the **Messaging** icon (down) on the Navigation Key to quickly access the Messages menu.

 CUSTOMIZABLE FEATURES

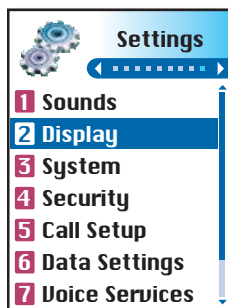


Changing the Wallpaper Image

1. From the **Settings (9)** menu, select **Display (2)**.
2. Select **Screens (3)**.
3. Select **Wallpaper (1)**.
4. Press left or right on the Navigation Key to select the desired image from **Default, Images, Message Pictures** or **Gallery** and press **OK**.

Changing the Call Ringer

 1. From the **Settings (9)** menu, select **Sounds (1)**.
2. Select **Ringers (1)**.
3. Select either **Caller ID (1)**, **No Caller ID (2)** or **Restricted Calls (3)**.
4. Choose from the list of available default ringers and press **OK**.

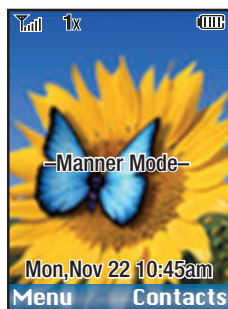

OTHER NOTABLE SETTINGS

Manner Mode

Use Manner Mode in a public place to disable the ringer and activate Vibrate Mode.

1. From the main screen, activate Manner Mode by pressing the **Manner Mode Key** (for 3 seconds) - the phone will vibrate when activated.
2. When set, “**-Manner Mode- Activated**” will appear on the screen.
3. To release Manner Mode, press the key until “**-Normal Mode- Activated**” is displayed.

PERSONAL INFORMATION TOOLS

THE SCHEDULER

 
The Tools menu allows you to view the calendar, schedule an event, program your handset's alarm clock and view and compose memos on the notepad.

Scheduling an Event

1. From the **Tools (8)** menu, select **Schedule (2)**.
2. Highlight the event date using your Navigation Key and press **Left Soft Key** for **Add**.
3. You may set the appropriate start and end times, contents, voice memo, recurrence (if any), alarm & ringer by scrolling to the corresponding field and entering the desired information and pressing **OK**.
4. Press **Left Soft Key** for **Save**.

Making a Call From Recent Calls

1. Press the **SEND Key** to view your most recent 30 dialed, received, and missed calls.
2. Place a call by selecting the desired entry and press **SEND** to connect.

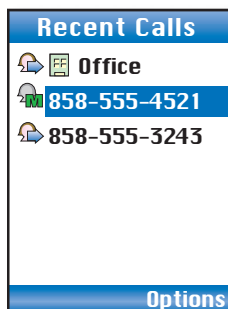


CONTACTS

The internal phone book is capable of storing up to 499 contacts with up to 5 numbers and 3 e-mail addresses per entry.

Adding a New Contact Entry

 1. From the **Contacts (2)** menu, select **New Number (2)**.
2. Enter the telephone number and press **OK**.
3. Select a label (**Home, Home2, Office, Office2, Mobile, Mobile2, Pager, Fax, Fax2** or **None**) and press **OK**.
4. Enter a name for the entry and press **OK**.
5. Add more phone numbers, e-mail addresses or photo caller-ID, or press **Left Soft Key** for **Done**.

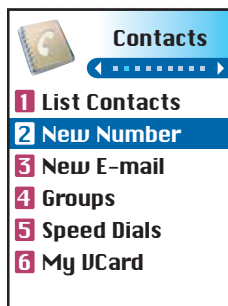



Camera (1)

1. Take PIX
2. Gallery
3. PIX Place



Contacts (2)

1. List Contacts
2. New Number
3. New E-mail
4. Groups
5. Speed Dials
6. My VCard



Recent Calls (3)

1. Dialed Calls
2. Received Calls
3. Missed Calls
4. Erase Calls
 1. Dialed Calls
 2. Received Calls
 3. Missed Calls
 4. All Calls
5. Call Timer
 1. Last Call
 2. Home Calls
 3. Roam Calls
 4. All Calls

6. KB Counter



Messages (4)

1. Voice Mail
2. New TXT Msg
3. New PIX Msg
4. Inbox
5. Outbox
6. Saved
7. Msg Settings

1. Auto Save
2. Auto Erase
3. TXT-Auto View
4. PIX-Auto Receive
5. TXT-Callback #
6. Voice Mail #
7. Entry Mode
8. Quick-Text
9. TXT-Auto Play
0. TXT-Signature

8. Erase All

1. Inbox
2. Outbox
3. Saved
4. All



Get It Now (5)

1. Get It Now
2. Get Information



Mobile Web (6)

1. Start Browser
2. Web Messages
3. Web Alerts
 1. Mute
 2. 2 Beeps
 3. 4 Beeps



Media (7)

1. Images
2. Sounds
3. Message Objects



Tools (8)

1. Voice Commands
2. Schedule
3. Alarm Clock

1. Alarm 1
2. Alarm 2
3. Alarm 3
4. Quick Alarm

4. Voice Memo

5. Notepad

6. EZ Tip Calc

7. Calculator

8. World Clock



Settings (9)

1. Sounds

1. Ringers
2. DTMF Length
3. Volume
4. Message Alerts
5. Service Alerts
6. Power On/Off Tone

2. Display

1. Banner
2. Backlight
3. Screens
4. Menu Style
5. Clocks
6. Theme Colors
7. Contrast-Front
8. Fonts
9. Language

3. System

1. Select System
2. Set NAM
3. Auto NAM
4. Serving System

4. Security

1. Lock Phone
2. Restrict Calls

3. Emergency #s
4. Change Lock
5. Erase Contacts
6. Reset Default

5. Call Setup

1. Auto Retry
2. Answer Call
3. Auto Answer
4. One-Touch Dial
5. Voice Privacy
6. Auto Volume
7. TTY Mode

6. Data Settings

1. Data/Fax
2. PC Connection

7. Voice Services

1. Commands Prompt
2. Driving Mode
3. Announce Alerts
4. Best Match
5. Train Commands
6. Train Digits
7. Help

8. Location

1. Location On
2. E911 Only

9. Phone Info

1. My Phone Number
2. S/W Version
3. Icon Glossary
4. Shortcut Help

