



Quick Start Guide



TOUCH SCREEN MULTIMEDIA PHONE with QWERTY KEYBOARD

Getting to Know Your Phone



Touch Soft Keys:



Message Phone Menu Contacts

Steps in this guide are shown using the touch screen. Refer to the User Guide for more details.

QWERTY Keyboard





*Customizable

Using the Touch Screen

Touch Protection

The touch screen is automatically locked when the phone is closed or after the phone is inactive for 14 seconds (default).

Unlocking the Touch Screen


- Tap the **Unlock icon** .
- or –
- Slide the **Unlock Key**  on the left side of the phone down.



Using the Touch Screen


- Use the tip of your finger to touch the center of a touch key.
- It's not necessary to press hard. A light tap will do.
- Press and *drag* your finger **up** or **down** to scroll.
- A beep will sound when you've reached the top or bottom of a menu.
- Press the **Power/End Key** at any time to return to the idle screen.

 
Touch Screen Settings

- Tap the **Menu icon** , **Settings & Tools**, and then scroll down to **Touch Settings (8)** to adjust the touch screen's auto-lock feature, vibration, sound, and calibration.
- If the touch screen is not responding as you expect, calibrate the screen for increased accuracy.


Making & Answering a Call

Calling Someone in Your Contacts List

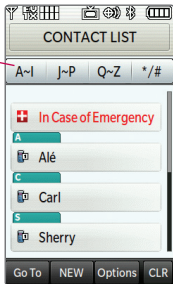

1. Unlock the phone.
2. Tap the **Contacts icon** , use the Quick Jump Bar (if needed), and then choose a contact.
3. Tap the phone number you want to dial.




Dialing a Call

 
1. Unlock the phone.
2. Tap the **Phone icon** , and then use the virtual keypad to enter a phone number.
3. Tap **Call** or press the **Send Key**.

Checking Voicemail

1. Unlock the phone.
2. Tap the **Phone icon** , then tap and hold **1** .
3. When prompted, enter your password.

Answering Calls

Press the **Send Key** or tap the **Unlock icon**  followed by **Answer**.

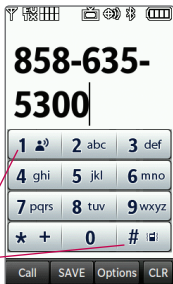




Note: If the phone is ringing or vibrating, press the **Volume Keys** to quiet the phone.

Voicemail


Vibrate Mode


Subscribing & Watching TV

 1. Unlock the phone. Tap the center of the touch screen to access the **Shortcut Menu** and then tap **Mobile TV** .
2. Rotate the phone clockwise.
3. An introductory video clip will play (for the first time).
4. Tap **Subscribe Now**. Review the base package and tap **Continue**.
5. Read the Terms and Conditions and tap **Agree**. Confirm your selection and tap **Submit**.
6. From the V CAST screen, tap the **Program Guide icon**  in the top left corner. Tap the name of the show you want to watch.

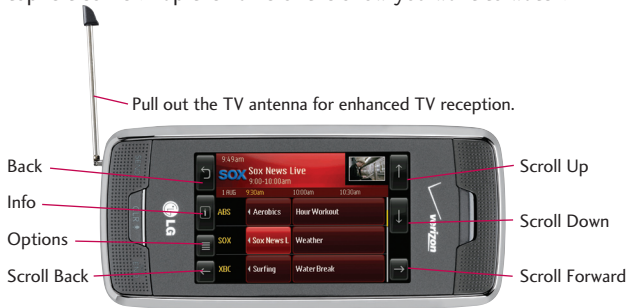

Browsing the Net

 1. Unlock the phone.
2. Tap the center of the touch screen to access the **Shortcut Menu**.
3. Tap **Browser** .
4. Rotate the phone clockwise.
5. Choose a category or tap **WWW** to go to a specific web site. Tap the **Touch Here** field and enter the URL using the virtual keyboard.
6. On a web page, drag **up** or **down** to scroll, or tap on a section of the thumbnail for a quick jump.

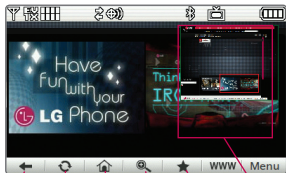


Back Refresh Home Zoom Favorites Thumbnail

 
To activate the thumbnail feature:

Tap **Menu > Settings (9) > Display (2) > Thumbnail (1) > On or Auto.**

Note: The browser supports full-screen mode, sending URLs via text messages, an auto-complete feature, and Spanish input for text and browser searches (other than URLs).


Getting Music


1. Unlock the phone.
2. Tap the center of the touch screen to access the **Shortcut Menu**.
3. Tap **My Music** .
4. Rotate the phone clockwise.
5. Tap **Shop** to access V CAST Music with Rhapsody.[®]
6. Select a song from one of the categories. To purchase it, tap **Buy**.
7. Tap **Buy This Song** to confirm your purchase.
8. Tap **Download Now** to download the song. You can save songs to the phone or an optional microSD card. Downloaded songs can be accessed through **My Music**.

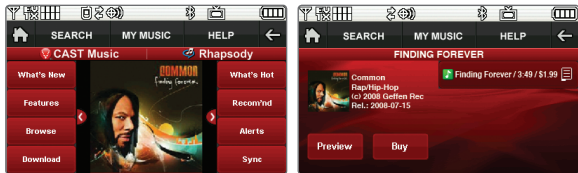


Note: Refer to the User Guide or Quick Reference Guide for instructions on how to sync music from your PC to the phone.

Playing Music

 1. Unlock the phone.
2. Tap the center of the touch screen to access the **Shortcut Menu**.
3. Tap **My Music** .
4. Rotate the phone clockwise.
5. Select a song from one of the categories to play.
6. Use the **Volume Keys** to adjust the volume when a song is playing.
7. Press the **Power/End Key** to exit the music player.

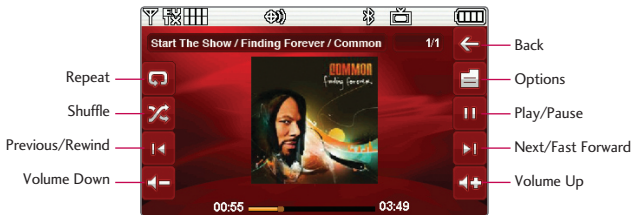


Note: When the flip is closed, if you answer a call while playing music, browsing the net, watching TV/video, or using VZ NavigatorSM and then end the call by pressing the **End Key**, the touch screen will lock. You can unlock the phone by sliding the **Unlock Key**  down.


Taking a Picture/Recording a Video

1. Unlock the phone.
2. To activate camera mode: Press the **📷 Key** located on the left side of the phone.
To activate video mode: Press and *hold* the **📷 Key**.
3. Rotate the phone clockwise.
4. Use the **Volume Keys** to zoom.* Tap **Options** to adjust other camera/video options.
5. Press the **📷 Key** to take a photo or record a video.
6. You can save, send, or erase the photo/video.

 **Camera setting of 1600x1200 pixels does not support zoom function.*

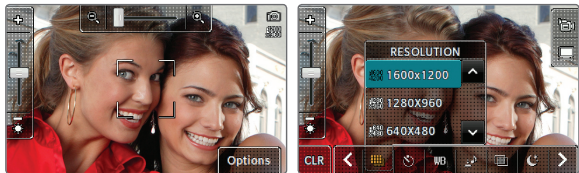


Bluetooth® Pairing

1. Set your Bluetooth accessory into pairing mode.*
2. Unlock the phone.
3. Tap the center of the touch screen to access the **Shortcut Menu**.
4. Tap **Bluetooth** .
5. Tap **Add New Device (1)**.
6. If Bluetooth is off, you will be prompted to turn it on by tapping **Yes**.
7. Tap **OK** and the phone will begin searching for the accessory. Once it is found, tap the accessory's name to pair.*
8. Tap **Yes** to connect with the device.

**Refer to the user manual of your Bluetooth accessory to activate pairing mode and for the passcode if asked (typically "0000" – 4 zeroes). If the accessory supports the headset/hands-free profile, your phone will automatically pair for you without having to input the passcode.*

 Note: Bluetooth accessories sold separately.

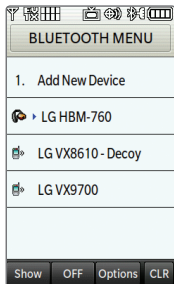

Optional Accessories

Accessories for convenience and fashion are available at www.VerizonWireless.com.



Bluetooth Headset
(HBM-760)



Bluetooth Stereo Headset
(HBS-200)



Bluetooth Stereo Speakers



Extended Battery
(1,500 mAh)



Car Mount



©2008 LG Electronics, Inc. All rights reserved. All other trademarks are property of their respective owners. All phone images are simulated. microSD™ is a trademark of SanDisk. The Bluetooth® trademark and logos are owned by the Bluetooth SIG, Inc. and any use of such marks by LG Electronics is under license.



Mixed Sources

Product group well managed for social, environmental and related purposes.
www.fsc.org Cert. no. XXX-XXX-XXX
© 1996 Forest Stewardship Council