



motorola W510

Getting to Know Your Phone



MOTOROLA and the Stylized M Logo are registered in the US Patent and Trademark Office. All other product or service names are the property of their respective owners.
The Bluetooth trademarks are owned by their proprietor and used by Motorola, Inc. under license.
© Motorola, Inc. 2007

Note: Your phone may not appear exactly as shown, however, all key locations, sequences, and functions remain the same.

Certain mobile phone features are dependent on the capabilities and settings of your service provider's network. Additionally, certain features may not be activated by your service provider, and/or the provider's network settings may limit the feature's functionality. Always contact your service provider about feature availability and functionality. All features, functionality, and other product specifications, as well as the information contained in this tutorial, are based on the latest available information and are believed to be accurate at the time of publication. Motorola reserves the right to change or modify any information or specifications without notice or obligation.



motorola W510


Take and Send a Picture

- 1 Press **Multimedia** > **Camera** to see the viewfinder.



- 2 Before you take a picture, press **Up** or **Down** to view camera settings. Press **Left** or **Right** to change settings.

Tip: To set a timer for the camera to take a picture, press **Options** > **AutoTimed Capture** > *detail*.

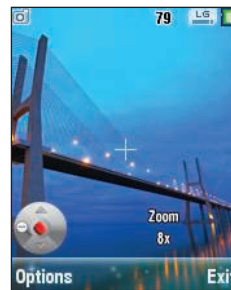


- 3 Point the camera at the picture subject and press **Shutter**.




- 4 To send the picture, press **Send** > **Send in Message**.

Enter text if desired, and press **Send To**.

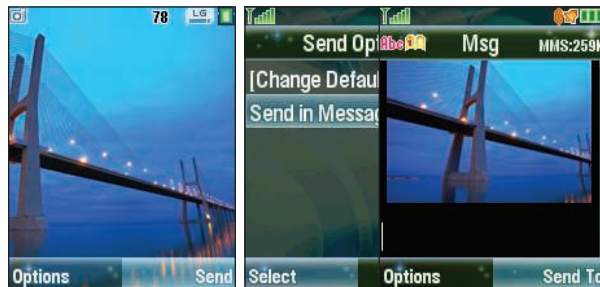

- 5 Scroll to contact and press **Shutter** to select them, then press **Send**.

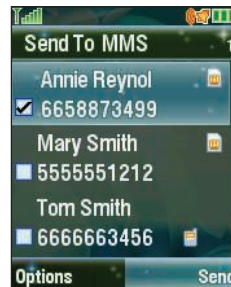




Play Music

- 1 Your phone can play and store MP3 and AAC song files. You can use a memory card to store more songs (optional).

Press **Games & Apps** > **Digital Audio Player**.

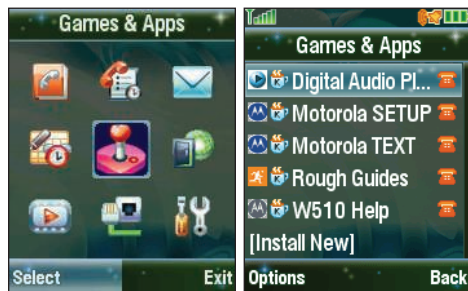


- 2 Select folder where songs are located.

Tip: Every song on your phone appears in **Songs**. Songs may not appear in all folders.



- 3 To shuffle your songs, press **Options**. Highlight **Shuffle**, and scroll right to turn to **ON**.

 When you are finished, press **Back**.

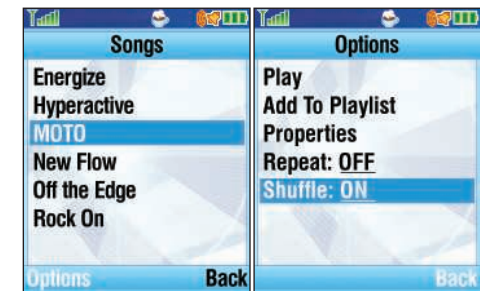

- 4 To play or pause songs, press . To play previous or next song, press left or right.

Tip: To stop the music, press and **Back**.



- 5 If you receive a call while music is playing, the music pauses until the call is over.

Tip: At the end of a call, you can choose to Suspend, Resume or End the music.



motorola W510

Pair with Stereo Headphones

- 1 On your headphones, press and hold the **Call** button for about 5 seconds until the indicator light turns on and remains steadily lit.



- 2 On your phone, press **Connection** > **Bluetooth Link** > **Add Audio Device**.




- 3 If prompted to turn on Bluetooth, press **Yes**.

- 4 Select the headphones.
When prompted to bond, press **Yes**.



- 5 Enter the passcode **0000**, and press **OK**.

Tip: The Bluetooth icon appears in the status bar if your phone is connected, and the Call button on your headphones will flash.

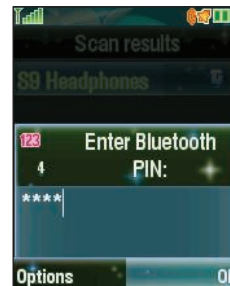

- 6 To disconnect your headphones, press **Bluetooth** > **Audio Devices** > **Drop** > **Yes**.

Tip: To delete your headphones, press **Device History** > **Options** > **Delete**, from the Bluetooth Link menu.






motorola W510


Record a Video

- 1 Press **Multimedia** > **Video Camera** to see the viewfinder.

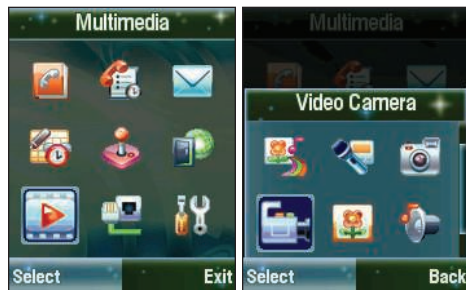


- 2 Before you record a video, press **Up** or **Down** to view video settings. Press **Left** or **Right** to change settings.

 Tip: To save the video to your memory card (optional), press **Options** > **Switch Storage Device** > **Memory Card**.

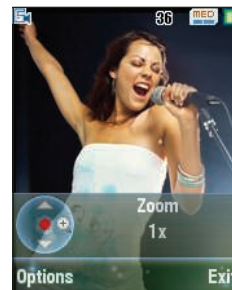


- 3 Point the camera at the video subject and press **Start**.

To stop recording, press **Stop**.

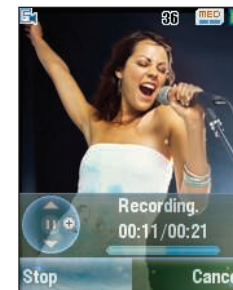

- 4 To save the video, press **Options** > **Store Only**.

Tip: To play a video after it has been stored, press **Multimedia** > **Videos** > *video name*.

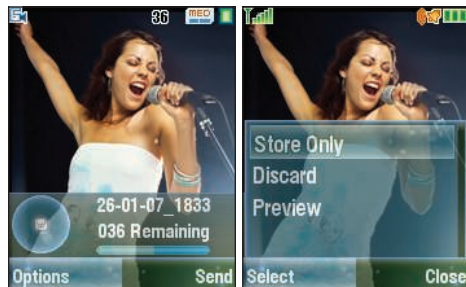



motorola W510

Transfer Files Using a USB Cable


- 1 Your phone has a mini-USB port so you can connect it to a computer to transfer music, pictures and videos between your phone's memory card (optional) and your computer.

Press **Connection > USB Settings**.




- 2 Scroll right to set **Default Connection to Memory Card**.

Connect the USB cable.

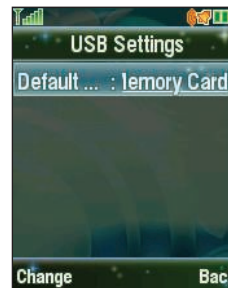


- 3 Double click on the **Removable Disk** icon. This is your phone's memory card.

 PC—it's in the My Computer window.
Mac—it's on the desktop.

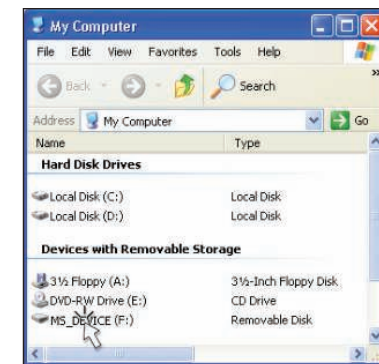

 - 4 Drag and drop files from your computer to your phone.

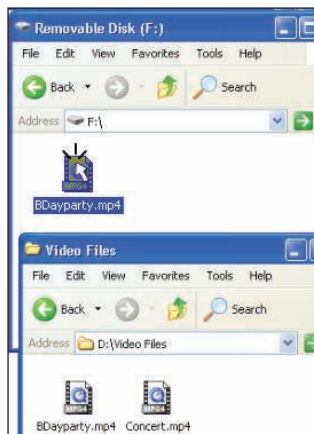


- 5 Remove the phone safely from your computer:


PC—use the **Safely Remove Hardware** icon at the bottom right.

Mac—drag the **Removable Disk** icon to the Trash.

Disconnect the USB cable.

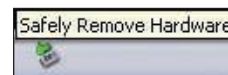

- 6 On your phone, scroll right to set **Default Connection to Data Connection**.

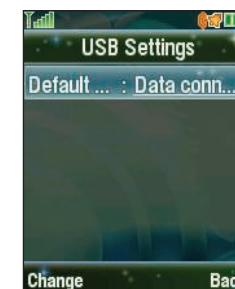



Enter Contacts

- 1 Press **Phonebook** > **Options** > **Create New** > **Phone Contact**.

Tip: If you select **SIM Contact** to add a contact to your SIM card, you can only store a name and number for that person.



- 2 Press and enter the **First Name** of the contact, then press **OK**.

Enter information in other areas of the phonebook in the same way.




- 3 Scroll right to set the number type.


Repeat for Email and Postal Address type.

- 4 To add more numbers, press **Options** > **Add Number**.

Note: You can have multiple numbers and email addresses for the same person.

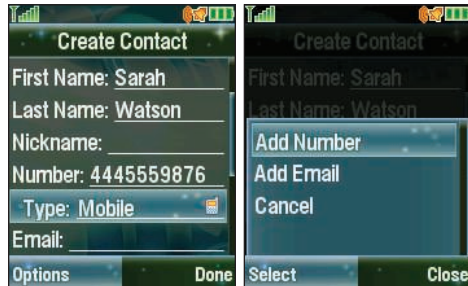

- 5 When you are finished, press **Done**.

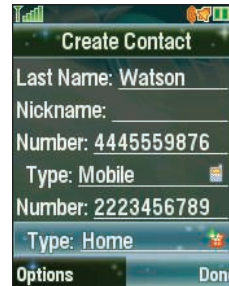




Edit Contacts

1 Press **Phonebook**.



2 To copy a contact from your phone to your SIM card, press **Options** > **Copy to SIM card**.

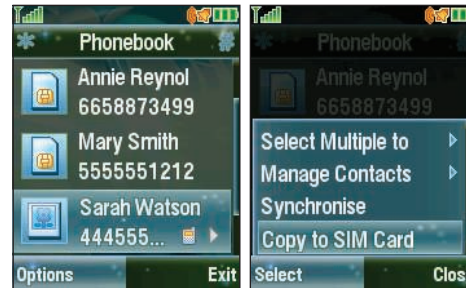

3 To edit contact details, press **Options** > **Edit Contact**.

Tip: To delete a contact, press **Options** > **Delete Contact**.



4 Scroll to the field you want to change, and press . Make the change and press **OK**.

Tip: To delete a digit, place the cursor to the right of the digit to be deleted and press . To delete an entire number, place the cursor to the right of the number, and press and hold .



5 When you are finished, press **Done**.






Send and Receive Files with Bluetooth®

- 1 You can send or receive a media file, phonebook entry, datebook event or Web shortcut to or from another phone or computer that supports Bluetooth connections.

Note: The receiving device must be disconnected from any other Bluetooth device, and in discoverable mode, in order to receive objects.


To send a picture to another device, press **Multimedia** > **Pictures**.

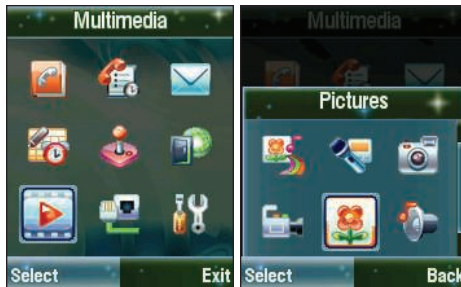


- 2 Press **Options** > **Manage** > **Move** or **Copy**.
Press **Bluetooth** > **Look for Devices**.



- 3 Select the device.
If prompted to bond, press **Yes**.
If prompted, enter the passcode **0000** and press **OK**.

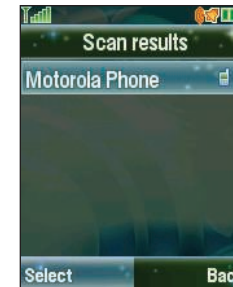


- 4 To receive a picture from another device, press **Connection** > **Bluetooth Link** > **Find Me**.

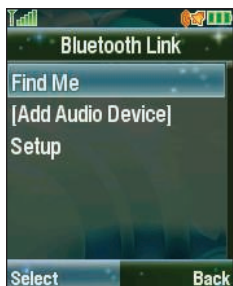

- 5 When prompted, press **Grant** to enable connection to the sending device.
When prompted, press **Accept** to receive the picture.



- 6 To store the picture, press **Store** > **Store Only**.
Enter text to name the picture if desired, then press **OK**.
Tip: To discard the picture, press **Options** > **Discard**.

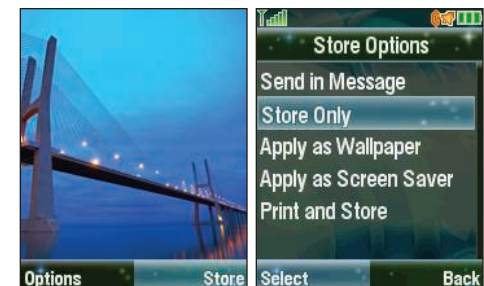



Customise Home Keys

- 1 You can create shortcuts to menu items that you use frequently, and show or hide the menu icons in the home screen.

Press **Settings** > **Personalise** > **Home screen** > **Home Keys**.

Tip: You can change your phone's wallpaper or screen saver by pressing **Wallpaper** or **Screen Saver** in the Personalise Menu.




- 2 To create a shortcut for any of the Home Keys, scroll to the appropriate key and press **Change**.

Scroll to the shortcut feature, and press **Select**.

Note: You can create shortcuts for the navigation keys and for the left or right soft key, in the home screen.



- 3 To hide the menu icons in the home screen, highlight **Icons** and press right to set to **Hide**.

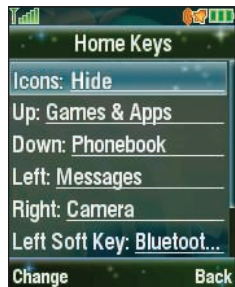

- 4 To create a shortcut for the Smart Key (on the side of your phone), scroll to **Smart Key** and press **Change**.

Scroll to the shortcut feature, and press **Select**.





Manage Multimedia

- 1 You can store music and other multimedia on a memory card (optional) or on your phone. Icons indicate the storage location:

- memory card
- phone

To view pictures stored on your memory card, press **Multimedia** > **Pictures** > **Options** > **View Storage Devices** > **Memory Card**.



- 2 To change the storage location of a picture, highlight the picture and press **Options** > **Manage** > **Move** > *storage location*.

Tip: To delete a picture, press **Options** > **Manage** > **Delete**.



- 3 To see how much space is on the memory card, press **Settings** > **Phone Status** > **Storage Devices** > **Memory Card**.





Browser Setup

- 1 Your phone is WAP-compatible! WAP is the technology that enables you to view internet information on the screen of your mobile phone.

To use WAP, you must ensure that data/internet access has been enabled on your account.


You must also ensure that the correct settings have been selected on your phone.

Press on your phone.

If your phone connects, you are ready to start browsing.

- 2 If your phone does not connect, you need to establish the settings.


Press **WebAccess** > **Web Sessions** > *carrier settings*.

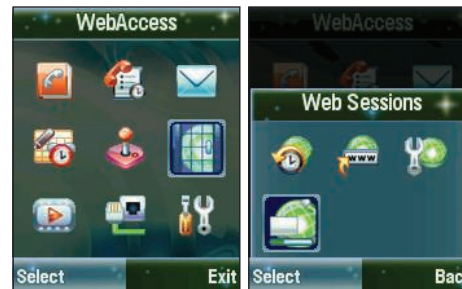

- 3 If your phone still does not connect to the Browser, you need to obtain the correct settings.


Press **Games & Apps** > **Motorola SETUP** > **Options** > **Start**.

When prompted to setup your phone, press **Yes**.

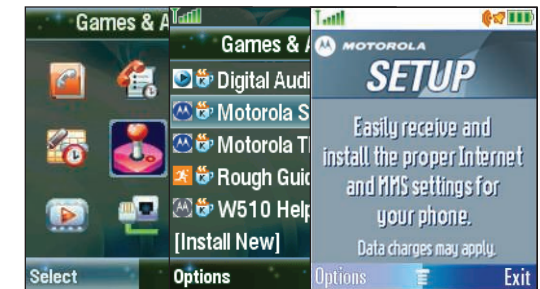


- 4 Highlight your operator, and press **Enter**. Then highlight your payment plan, and press **Enter**.

 When prompted, press **Exit**.

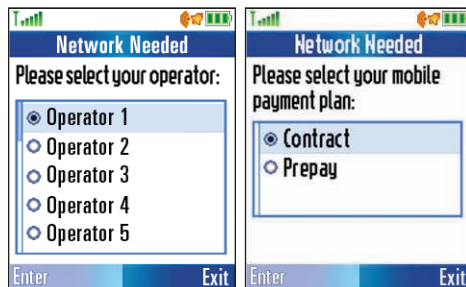

- 5 The settings will be sent to you via SMS.

To install the settings, press **Options** > **Install**.

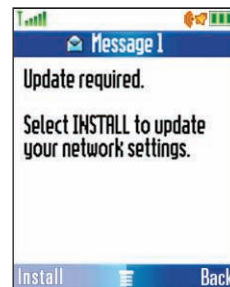

- 6 If your phone does not have the Motosetup feature, you can

Telephone your carrier, or

Obtain the settings via the carrier internet site, or

Look on the Hellomoto website for your operator settings