# SouthernLINC

i876 Phone

User's Guide

**Dummy Page - To be discarded before printing** 

# IMPORTANT NOTICE: PLEASE READ PRIOR TO USING YOUR PHONE

The SIM card provided in this kit is intended for use with the phone provided in this package.

Loss of certain features will result when using a SIM card from one of the following models: *i*30*sx*, *i*35*s*, *i*50*sx*, *i*55*sr*, *i*58*s*, *i*60*c*, *i*80*s*, *i*85*s*, *i*88*s*, *i*90*c*, *i*95*cl* series, and the *i*2000 series.

For more information on SIM card compatibility, go to www.motorola.com/iden.

Defects or damage to your Motorola phone that result from the use of non-Motorola branded or certified Accessories, including but not limited to replacement housings and or other peripheral accessories, are excluded from warranty coverage. Please refer to the text of Motorola's Limited One Year warranty located in this user's guide for complete details.

### DECLARATION OF CONFORMITY

Per FCC CFR 47 Part 2 Section 2.1077(a)



Responsible Party Name: Motorola, Inc. Address: 8000 West Sunrise Boulevard

Plantation, FL 33322 USA

Phone Number: 1 (800) 453-0920 Hereby declares that the product:

Product Name: i876

Model Number: H92XAH6RR4AN

Conforms to the following regulations:

FCC Part 15, subpart B, section 15.107(a),

15.107(d) and section 15.109(a)

Class B Digital Device

As a personal computer peripheral, this device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause

harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

**Note:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.


If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- · Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.


# HELLOMOTO

accessories

Introducing your new Motorola i876 wireless phone. Here's a quick anatomy lesson.

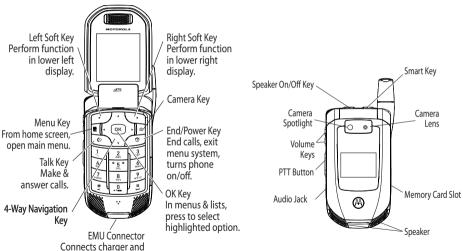

# check it out

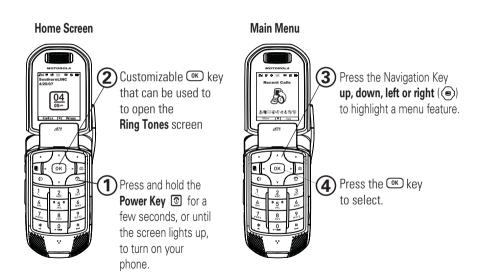

Motorola, Inc. Consumer Advocacy Office 1307 East Algonquin Road Schaumburg, IL 60196

www.hellomoto.com

1-800-331-6456 (United States) 1-888-390-6456 (TTY/TDD United States for hearing impaired) 1-800-461-4575 (Canada)

Product Support: www.motorola.com/iden

Certain mobile phone features are dependent on the capabilities and settings of your service provider's network. Additionally, certain features may not be activated by your service provider, and/or the provider's network settings may limit the feature's functionality. Always contact your service provider about feature availability and functionality. All features, functionality, and other product specifications, as well as the information contained in this user's guide are based upon the latest available information and are believed to be accurate at the time of printing. Motorola reserves the right to change or modify any information or specifications without notice or obligation.

This device supports Bluetooth 1.2 + EDR and A2DP Stereo profiles. In order for Bluetooth devices to communicate with one another, they must utilize the same Bluetooth profile. To determine the profiles supported by other Motorola devices, visit www.hellomoto.com/bluetooth. For other devices, contact their respective manufacturer.

Certain Bluetooth features including those listed may not be supported by all compatible Bluetooth-enabled devices, and/or the

functionality of such features may be limited in certain devices, or by certain wireless carriers. Contact your wireless carrier about feature availability and functionality.

#### OPEN SOURCE SOFTWARE INFORMATION

You may choose to obtain a copy of any source code being made publicly available by Motorola directly from the Motorola website opensource motorola.com.

Additionally, for instructions on how to obtain a copy of any source code being made publicly available by Motorola related to software used in this Motorola mobile device, please send your request in writing to:

MOTOROLA, INC. OSS Management 600 North US Hwy 45 Libertyville, IL 60048 USA

Motorola has created the www.opensource.motorola.com to serve as a portal for interaction with the software community-at-large.

To see additional information regarding licenses, acknowledgments and required copyright notices for open source packages used in this Motorola mobile device, follow these instructions:

From the phone Main Menu, select **Games and Apps.** > **OpenSourceNotices**.

MOTOROLA and the Stylized M Logo are registered in the US Patent & Trademark Office. All other product or service names are the property of their respective owners. Java and all other Javabased marks are trademarks or registered trademarks of Sun Microsystems, Inc. in the U.S. and other countries.

© Motorola, Inc., 2007.

Manual Number: NNTN7285A

Software Version: AP DB2.00.56 / BPDB3.00.55

CP Version: 42.01.01 CSD Version: C02.06.11 USR Version: UB2A.02.05

# contents

check it out	call a stored phone number or LINC ID 20 your phone number and LINC ID 20 text messages 21 manage memory 24 use your phone as USB mass storage device 25 using your handset as a modem	display main menu text entry . navigation k handsfree s transmitters use GPS wi map softwa features for hearing imp features for vision impair turn off a carecent calls
	one touch PTT 47 Bluetooth <sup>®</sup> 48 clock screen saver 53	turn off a carecent calls redialcaller ID

_ /
54
55
55
58
58
58
58
60
62
63
63
63
64
64

call forward voice name emergency calls international calls speed dial voicemail customize. volume. ring tones wallpaper datebook hide or show location information. other features advanced calling alarm clock contacts	65 TTY 66 security 67 Safety and Go 67 Information 67 Service & Rep 69 Specific Abso 69 Rate Data 71 Warranty for 71 States and Ca 72 Hearing Aid 73 Information F 74 the World He 75 Organization	www	mart Practices hile Driving dex	
contacts	Patent and Ti Tinformation . Reference . Privacy and Data Security	rademark 101		

# menu map

#### main menu



#### Push To Talk

- Call Alert
- LINC Manager
- LINC Options



### Mv Info

- Mv Name
- Line 1
- Line 2 LINC ID
- Group ID
- Carrier IP
- IP1 Address IP2 Address
- Profiles
- - [New Profile]
    - Standard
    - Car Meeting
    - Office
  - Outdoors Headset
- Alarm Clock Plus
- Bluetooth
  - Audio Devices
  - · Pair to Devices
  - · Device History Setup
  - Find Me

- GPS
  - Position
  - Privacy
- Interface Datebook
- [New Event]
- Call Timers
  - Last Call
  - Phone Reset
  - Phone Lifetime
  - Prvt/Grp Reset
  - Prvt/Grp Lifetime
- Kbvtes Reset Memo



#### Multimedia

- Downloads
- Media Center Camera
- Music Player
- · Ring Tones VoiceRecord
- - · Browser App



(see next page)



#### Games and Apps

- Buy More
- Alarm Clock Plus
- Music Player
- PhotoEditor OpenSourceNotices
- My Location
- iHélp
- Calculator Suite Download Apps
- City Drift
- Java System
- Memory Card
- Contacts



 INew Contact1 Recent Calls

#### Messages

- ICreate Messagel Voice Mail
- Fax Mail
- Net Alert
- Text Inhox
- Drafts
- Text Outhox
- Quick Notes

### settings menu

#### Display/Info

- Wallpaper
- Text Size Theme
- Home Icons
- Backlight
- Clock
- Menu View · Large Dialing: On/Off
- Language

#### Phone Calls

- Set Line
- Anv Kev Ans Auto Redial
- Call Waiting
- Auto Ans
- Flip Activation Minute Beep
- Call Duration
- TTY
- · Hearing Aid
- Notifications
- DTMF Dialing Call Forward

### Personalize

- Reorder Menu
- Shortcuts
- Up Kev
- Down Key Left Kev
- Right Key
- Center Kev
- Left Softkey
- Right Softkey Power Up

#### Volume

- Ringers/Alerts
- Speaker
- Earpiece
- Multimedia Keypad

#### Voice Playback

- Speak Text
- Speak Caller
- Voice Multimedia Volume

#### Memory Card

- Remove Card
- Store Media
- Format Card Help

#### Security

- Phone Lock
  - Keypad Lock
  - SIM PIN
- GPS PIN
- · Change Passwords

#### Advanced

- Alert Timeout
- Headset/Spkr Connectivity
- Reset Defaults
- · Return to Home
- Transmitters
- · Phone Only

#### Connections

 Bluetooth USB

8

### Use and Care

To care for your Motorola phone, please keep it away from:



### liquids of any kind

Don't expose your phone to water, rain, extreme humidity, sweat, or other moisture.



### dust and dirt

Don't expose your phone to dust, dirt, sand, food, or other inappropriate materials.



### extreme heat or cold

Avoid temperatures below -10°C/14°F or above 45°C/113°F.



### cleaning solutions

To clean your phone, use only a dry soft cloth. Don't use alcohol or other cleaning solutions.



#### microwaves

Don't try to dry your phone in a microwave oven.



### the ground

Don't drop your phone.

# essentials

CAUTION: Before using the phone for the first time, read the *Important Safety and Legal Information* included in the gray-edged pages at the back of this guide.

# about this guide

This guide shows how to locate a menu feature as follows:

Find it: ■ > **\*** > Phone Calls

This means that, from the home screen:

1 Press the *menu key* 1 to open the **Settings** menu.

2 Press the *navigation key* (⊕) to scroll to Phone Calls, and press the *center key* (□K) to select it.

### symbols



This means a feature is network/ subscription dependent and may not be available in all areas. Contact SouthernLINC Wireless for more information.




This means a feature requires an optional accessory.

### SIM card

### insert the SIM card

Turn off your phone and remove your battery before you install or remove a SIM card.

Carefully slide the SIM card into your phone, until it lies flat in the SIM card holder.

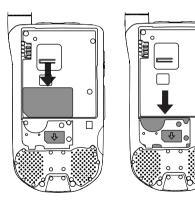

**Warning:** To avoid loss or damage, do not remove your SIM card from your phone unless absolutely necessary.

# memory card

Your i876 comes with a memory card, memory card adapter, and memory card reader.

A memory card is a removable flash memory card that you can use to store pictures, videos, and audio files. The memory card can be inserted in your phone or connected to your computer using the memory card reader.


Many types of pictures, videos, and audio files stored on the memory card can be viewed or played using your phone's media center. Music files can be played using the music player.

You can connect your phone using a Motorola data cable directly to your computer, access the memory card loaded in the phone to save or delete music, images, videos, or audio files.

Find it: ■ > 🏶 > Connections > USB

### insert the memory card

1 Slide open the memory card slot cover.

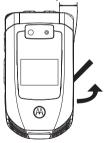

2 Slide in the memory card until it clicks into place.



**Note:** The first time you insert a memory card in your phone, you will see the following options: [Do Nothing], Go To Music Player, Go To Camera, and Go To Media Center. Select the option of your choice and continue

**Warning:** Do not remove the memory card before selecting the **Remove Card** option under **Settings**. Removing the memory card before selecting the **Remove Card** option could result in loss of data.

# battery

### Battery Use & Battery Safety

 Motorola recommends you always use Motorola-branded batteries and chargers. The warranty does not cover damage caused by non-Motorola batteries and/or chargers.

**Caution:** Use of an unqualified battery or charger may present a risk of fire, explosion, leakage, or other hazard. Improper battery use, or use of a damaged battery, may result in a fire, explosion, or other hazard.

- Battery usage by children should be supervised.
- Important: Motorola mobile devices are designed to work best with qualified batteries. If you see a message on your display such as Invalid

# **Battery** or **Unable to Charge**, take the following steps:

- Remove the battery and inspect it to confirm that it bears a Motorola "Original Equipment" hologram;
- If there is no hologram, the battery is not a qualified battery;
- If there is a hologram, replace the battery and retry charging it;
- If the message remains, contact a Motorola Authorized Service Center.
- New batteries or batteries stored for a long time may take more time to charge.
- Charging precautions: When charging your battery, keep it near room temperature. Never expose batteries to temperatures below 0°C (32°F) or above 45°C (113°F) when charging. Always take your mobile

- device with you when you leave your vehicle
- When storing your battery, keep it in a cool, dry place.
- It is normal over time for battery life to decrease, and for the battery to exhibit shorter runtime between charges or require more frequent or longer charging times.
- Avoid damage to battery and mobile device. Do not disassemble, open, crush, bend, deform, puncture, shred, or submerge the battery or mobile device. Avoid dropping the battery or mobile device, especially on a hard surface. If your battery or mobile device has been subjected to such damage, take it to a Motorola Authorized Service Center before using. Do not attempt to dry it with an

- appliance or heat source, such as a hair dryer or microwave oven.
- Use care when handling a charged battery particularly when placing it inside a pocket, purse, or other container with metal objects. Contact with metal objects (e.g., jewelry, keys, beaded chains) could complete an electrical circuit (short circuit), causing the battery to become very hot, which could cause damage or injury.

Promptly dispose of used batteries in accordance with local regulations. Contact your local recycling center for proper battery disposal.




**Warning:** Never dispose of batteries in a fire because they may explode.

### battery installation

1 Slide the release button back until it releases the battery door.




2 Remove the battery door.

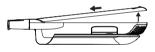

**3** Push the battery down until it snaps in place.



4 Replace the battery door and press it gently until you hear a click.

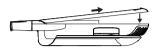

### battery charging

New batteries are not fully charged.

### charge using the charger

1 Pull out the connector cover, and insert the charger into mini USB connector on your phone as shown



2 Plug the other end of the charger into the appropriate electrical outlet.

When you charge the battery, the battery level indicator at the upper right of the screen shows charging progress. At least one segment of the indicator must be visible to ensure full phone functionality while charging.

### charge from your computer

图) You can partially charge your phone's battery by connecting a Motorola-approved USB cable from your phone's mini-USB port to a high power USB connector on a computer (not a low-power one, such as the USB connector on your keyboard or buspowered USB hub). Typically, USB highpower connectors are located directly on your computer.

**Note:** The phone will be charged at a slower rate than it is charged with the rapid charger.

Your computer must be turned on, and you must have correct software drivers installed on your computer. If the phone is off when

the USB cable is connected between the computer and the phone, the phone will power up in charging mode. This mode allows the phone to charge fastest and guickest.


**Note:** If the battery is very low, the phone will not turn On, but will continue to charge at a low rate. The phone will power up in charging mode when the battery has been charged to approximately 5% of its capacity. For faster charging under a very low battery condition, it is recommended to use the rapid charger supplied with the phone.

If the phone is turned on while charging from a computer, it will not fully charge the battery. In this case, the battery charge will be maintained approximately between 80% and 95% of the battery's capacity. Cables and software drivers are available in Motorola Original<sup>™</sup> data kits, sold separately.

**Tip:** Motorola batteries have circuitry that protects the battery from damage from overcharging. Of course, unplugging the charger from the wall will avoid current drain.

### turn it on & off

To turn on your phone, press and hold for a few seconds or until the display turns on. If prompted, enter your four-digit unlock code.

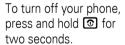

**Note:** If you press the for more than four seconds, the handset will power "On" in "Transmitters Off." See "transmitters" on page 58.



# enable security

You must enable security the first time you power on you phone or within 10 days of first activation of your phone.

- 1 Press and hold to power on your phone.
- 2 Press under 0k.
- Your are prompted to enable security. Press under Yes. A series of screens followed by the default home page displays.
- 4 Press to return to the home screen.

# make a phone call

Enter a phone number and press to make a call or use a voice command. See "place a call using voice command" on page 66.

**Tip:** For best performance avoid touching the antenna with your fingers during the call.

To hang up press or close the flip.

# answer a phone call

When your phone rings and/or vibrates, you have the following options:

- 1 If you want to answer the call on speaker phone, press the speaker key with the flip closed. To hang up press the smart key .
- 2 If you want to answer the call using the handset, just open the flip and press ①. To hang up press ② or close the flip.

**Note:** You must have the **Flip Activation** feature On. See "advanced calling" on page 73.

**3** If you are using a Bluetooth headset, you can press the answer key on your

Bluetooth headset. To hang up press the same key on your Bluetooth.

# make a InstantLINC Mobile to Mobile call

With InstantLINC Mobile to Mobile calls, you use your phone as a long-range, digital 2-way radio using one-to-one InstantLINC Mobile to Mobile calls or one-to-many Talkgroup calls.

Your LINC ID is the number at which you receive one-to-one InstantLINC Mobile to Mobile calls.

Talkgroup numbers are numbers through which you receive one-to-many group calls.

- 1 To make an InstantLINC Mobile to Mobile call, enter the LINC ID you want to call.
- 2 Press and hold the PTT button. Begin talking after your phone emits a chirping sound.

3 Release the PTT button to listen.

To end the call press ①, or press ① under **Exit**.

# answer an InstantLINC Mobile to Mobile call

- 1 When your phone emits a chirping sound or vibrates to indicate you are receiving an InstantLINC Mobile to Mobile call, wait for the caller to finish speaking.
- 2 Press and hold the PTT button and begin talking after your phone emits a chirping sound.
- 3 Release the PTT button to listen.
  - To end the call press ①, or press ① under **Exit**.

# store a phone number or LINC ID

You can store a phone number or an InstantLINC Mobile to Mobile in **Contacts**:

- 1 Enter a name for the new entry. Each entry's name can contain 20 characters.
- 2 Select a specific Ring Tone/Picture.
- 3 Select a type for the entry (Mobile, Work1, Work2, Home, Fax, Pager, IP or Other). To store a LINC ID, choose LINC ID.
- 4 Enter the number for the entry and press under **Save** when done.

**Tip:** Before saving the entry, you can save more information. You can store an Email address, IP addresses, and more.

After you have saved the number, the new Contacts entry is displayed.

19

# call a stored phone number or LINC ID

**Shortcut:** From the home screen press • under Contcs

or

Find it: 🔳 > 🚺

Scroll to the **Contacts** entry.

**Tip:** You can set up you handset for two different search options by pressing <a> ></a> Search Option. If you select Full Name Search, a new window will appear to allow you to type the name of the contact you are looking for. If you select First Letter Search, your handset will find the nearest match to the letter you enter.

If the Contacts entry contains more than one number, scroll left or right until the type of the number you want to call is

displayed (Mobile, LINC ID. Work 1, Work 2, Home, etc.).

If you chose a phone number, press [6] to call the entry.

or

If you chose a LINC ID or Talkgroup ID, press and hold the PTT button to call the number

**Tip:** If the Contacts entry you scrolled to contains a LINC ID, you can make an InstantLINC Mobile to Mobile call to that LINC. ID by pressing and holding the PTT button, even if the LINC ID is not the type of number displayed.

# your phone number and LINC ID

Find it: **I** > **A** > My Info.

**Tip:** Want to see your phone number or LINC ID while you're on a call? Press > My Info.

# text messages

Your phone sends text messages using Mobile Originated Short Messaging Services (MOSMS) and receives text messages from other phones that are using MOSMS.

### set it up

Before you begin using text messaging, you may need to set up your signature, service center number, and expiration information.

Shortcut: From the home screen press 
under Msgs > Text Inbox > ■ > Text Msg Setup.

or

Find it:  $\blacksquare > \bigcirc >$  > Text Inbox >  $\blacksquare >$  Text Msg Setup.

The following options become available:

### option

### **Signature**

Enter your signature (up to 11 characters long).

### **Delivery Rpt:**

Set this option to **On** if you want your phone to show you when the message has been delivered.

### Srvc Cntr No:

Enter the phone number of your service center. If you do not know this number, contact SouthernLINC Wireless.

### option

### **Expire After**

This is the amount of time messages you send are saved at the service center if they cannot be delivered. After this period, they are discarded.

Scroll to select the number of days you want your messages to be saved.

### Auto Clean Up

Set this option to **0n** if you want your phone to delete sent messages.

If you set **Auto Clean Up** to **On**, select **Clean Up After** to set the number of days after which sent messages are deleted or the number of messages to be kept.

Press • under **Done** to save the information you entered.

### receive a text message

- 1 To view the message press under Read.
- 2 To dismiss the message notification press under **Exit**.

**Note:** If your phone is powered off when you receive a text message, your phone notifies you the next time you power it on. If you are out of your coverage area, your phone alerts you when you return to your coverage area.

**Tip:** While reading a text and numeric message that contains a phone number, you can press ① to call that number.

### read from the message center

1 From the home screen press ■ under Msgs > Text Inbox.

2 Select the message you want to read or press the number of the message you want to read. If the message fills more than one screen, scroll to read it.

**Tip:** Scrolling through one message lets you view the next message.

To reply to the message, press under Reply or to see all other choices, including forwarding and deleting the message, calling the sender, or storing the sender's number in Contacts, press

### create and send text messages

1 From the home screen press • under Msgs > [Create Message].

or

Select Text Inbox, Text Outbox, or Drafts.

2 To address the message use the keypad to enter the phone number of the person you want to send the message to and

- press lacktriangle under **Back** or press lacktriangle under **Contcs**, or press lacktriangle > **Recent Calls**. Select the number you want.
- 3 Select Msg: and enter the text of the message or to use a quick note press under Browse and scroll to the quick note you want.
- 4 Press > Set Send Method and select Text, Fax, X400, Paging, Email, ERMES, or Voice.
- If you want to send the message, press under Send or to delete the message without sending it, press under Cancel.

**Note:** If you want to request confirmation of delivery press  $\blacksquare$  > **Delivery Report** > **On**.

### use drafts

When you save a message as a draft, it is saved in the drafts folder.

**Shortcut:** From the home screen press under Msgs > Drafts.

- Select the draft you want to edit. You also have the choice to create new text messages from this menu.
- **2** To edit the fields you want to change, follow step 2 through step 5 in "create and send text messages" above.

### resend text messages

**Shortcut:** From the home screen press under Msgs > Text Outbox.

- Scroll to the message you want to resend or press the number of the message you want to resend.
- 2 Press under Resend.

### delete sent text messages

**Shortcut:** From the home screen press under Msgs > Text Outbox.

1 Scroll to the message you want to delete.

- 2 Press under Delete.
- 3 Press under Yes to confirm.

# delete all unlocked sent messages Shortcut: From the home screen press under Msqs > Text Outbox.

- 1 Press 🔳 > Delete All.
- 2 Press under Yes to confirm.

Locked messages cannot be deleted until you unlock them.

### manage memory

Your text inbox, text outbox, and drafts folder have a set amount of memory available for storing messages.

The text inbox holds 100 messages. If the text inbox is full, you cannot receive messages until you delete some.

The text outbox and drafts folder hold 100 messages each. If the text outbox and drafts folder memory is full, you cannot send messages or save drafts until you delete some.

To view the amount of memory available in your text inbox, text outbox, or drafts folder:

- 1 From the idle screen press under Msgs.
- 2 Scroll to the folder whose available memory capacity you want to view.
- **3** Press under **Memory**.

# use your phone as USB mass storage device



Find it: ■ > ♥ > Connections > USB > Memory Card Access

 Slide open the connector cover, and insert the charger into mini USB connector on your phone as shown



- 2 Connect the USB cable to the USB port of the computer.
- **3** Your memory card can now be accessed by your computer.

# using your handset as a modem



You can use your handset as a modem with a laptop, handheld device, or desktop computer. In order to use your handset as a modem, you must create either a wired or wireless connection between your handset and the other device.

To connect your handset wirelessly, you must have a Bluetooth adapter for the other device. To create a wired connection, use a USB cable.

#### connect with a USB cable

Use a USB cable to connect your handset to a laptop, handheld device, or desktop computer.

- Pull out the connector cover, and insert the data cable into mini USB connector on your phone as shown.
- 80 uin
- 2 Insert the data plug into the data port of the other device

### connect via Bluetooth

Use your handset as a modem via Bluetooth. The laptop, handheld device, or desktop computer you want to connect to must have a Bluetooth adapter installed.

Check that the adapter is properly installed, and then follow the specific instructions outlined in the device's user guide to connect the device to your handset.

When used as a modem, your handset is enabled for **Packet data**, which is used for small file transfers such as email.

**Note:** To use these services, you must install the iDEN Wireless Data Services software (available separately). For more information on setting up your computer and your i876 handset for packet and circuit data calls, contact SouthernLINC Wireless.

# main attractions

# music player

Your *i876* phone includes a music player that you can use to play music files stored in your phone's memory or on the memory card inserted in your phone.

The music player groups the music files into folders and lists. When you select a music file to play, the music player plays this file, then plays the other music files grouped with it.

The music player also plays podcasts you download to your computer and then save on your phone's memory card. You can mark highlights within a podcast file to help you find the parts you most want to listen to.

Supported music file formats include:

Format	Bit Rate	Extensions
AMR-NB	4.75 kbps – 12.20 kbps (supports all 3GPP specified rates)	.amr, .3gp, .3ga, .mp4
AMR-WB	6.6 kbps - 23.85 Kbps (supports all 3GPP specified rates)	.awb, .3ga, .3gp
AAC (MPEG4 AAC-LC)	Up to 192kbps CBR	.aac , .3gp, .m4a, .3ga, .mp4
AAC+	Up to 128 kbps (16 to 128 kbps)	.aac, .m4a, .3ga, .mp4

Format	Bit Rate	Extensions
Enhanced AAC+	Up to 128 kbps (16 to 128 kbps)	.aac, .m4a, .3ga, .mp4
MP3	Up to 320kbps	.mp3, .mpga
8-bit Linear PCM	Up to 320kbps	.waw, .au
16-bit Linear PCM	Up to 320 kbps	.waw, .au
8-bit A-law PCM	Up to 320 kbps	.waw, .au
8-bit mu- law PCM	Up to 320 kbps	.waw, .au
WMA v9 L2 (also WMA v3, v7, v8)	Up to 320 kbps	.wma

Format	Bit Rate	Extensions
Stand MIDI		.mid, .midi, .smf
XMF MIDI		.xmf, .mmf, .xmf0, .xmf1, .mxmf
iMelody	1 – 3.5 kHz Monophonic	.imy

Supported audio + video file formats include:

Format	Extension
MPEG4 + AMR-NB	.mp4, .3gp
MPEG4 + AMR-WB	.mp4, .3gp
MPEG4 + AAC / AAC+ / Enhanced AAC+	.mp4, .3gp
H.263 + AMR-NB	.3gp
H.263 + AMR-WB	.3gp
H.263 + AAC / AAC+ / Enhanced AAC+	.3gp

### play music files

Find it: 🔳 > 🧳 > Music Player.

**1** Scroll to a folder.

**Tip:** The Songs folder contains all the music files on the memory card in a single list.

2 To play the first music file in the folder, press • under Play. (If the selected folder contains subfolders, this plays the first music file in the first of the subfolders.)

Press ok to view the folder's contents. Scroll to a music file and press • under Play, or scroll to a folder and press • under Play to play the first music file in it.

Any time you are viewing a list of folders with the music player, you can scroll to a folder and press under **Play** to start playing the contents of that folder or press to view the contents of the folder.

To stop viewing a folder and return to the folder or list that contains it, press • under **Back**.

## play music while loading files

The first time the music player finds music files on your memory card, it loads and

organizes these files. This may take a long time for a large number of files.

To play music while files are loading:

### Find it: 🔳 > 🤄 > Music Player.

- 1 Scroll to **Songs** and press **OK**.
- 2 Scroll to a music file and press under Play or ○<.

The following options become available through the navigation panel:

### option

#### Pause and Resume

Press • under **Pause** or **In to pause**, and press • under **Play** or **In to resume** playing paused music files.

### Skip to Next or Previous

Press and release (a) right or left to skip to the next or previous music file. (Do not hold the left side of the navigation key.)

### option

#### **Fast Forward and Rewind**

Press and hold ignight or left for 2 seconds to fast forward or to rewind.

### Repeat and Shuffle

Repeat lets you set the music player to play one or all the music files in a list or folder repeatedly. While in the Music Player press > Setup > Repeat > All or One.

Shuffle lets you set the music player to play the music files in a list or folder in random order. While in the Music Player press  $\blacksquare$  > Setup > Shuffle > On or Off.

### work with playlists

Playlists are lists of music files you create from the files already available through the music player.

Playlists enable you to organize music files, but they do not change anything in other folders or on the memory card. Adding or deleting a file on a playlist does not copy, delete or move it

#### create a playlist

New1.

Enter a playlist name.

**Note:** If you do not assign a name, the playlist is named Playlist followed by a number. For example, the first playlist you create without naming is automatically named Playlist-1.

2 Select [Add Songs].

A list of all music files on the memory card appears.

**Tip:** For options to help you sort through this list, press 🔳.

- 3 Select each file you want on the playlist. A checkmark appears by each selected file.
  - Tip: To deselect a selected item, scroll to a selected file and press ok.
- When you are finished selecting files, press • under Done and • under Save.

The following options are available for existing playlists:

#### option

#### Edit a Playlist

You can change a playlist name, add music files, remove music files, and change the order of the music files in Music Player > Playlists > 1 > Edit Playlist. Make changes and press • under Save.

#### option

#### **Reorder Songs in a Playlist**

#### Remove Songs

You can remove some or all songs while creating or editing a playlist.

Before you have saved a new playlist or while editing a playlist, scroll to the song you want to remove and press > Remove Song and press OK, or you can select Remove All Songs; press • under Yes to confirm and under Save.

#### option

#### **Reorder Playlists**

You can change the order of the playlists in the Playlists folder. Press > Edit playlist > Reorder Playlists. Scroll to the playlist you want to move and press under Grab; then scroll to the place where you want the playlist to appear and press under Insert.

#### Delete a Playlist

While in the Music Player select Playlists. Scroll to the playlist you want to delete and press

Delete Playlist. Press under Yes to confirm.

#### **Delete all Playlists**

While in the Music Player select Playlists. Press > Delete All Playlists and press • under Yes to confirm.

**Note:** This deletes all playlists except the Favorites playlist.

# use the favorites playlist

The **Favorites** playlist is a permanent playlist. You can **Add To Favorites**, remove and change the order of the music files, but you cannot rename or delete music files.

Find it:  $\blacksquare > \{ \} >$  Music Player > Songs.

Select the song you want to add to your favorites and press 

> Add To Favorites.

# work with podcasts

Find it: 🔳 > 🤻 > Music Player > Podcasts.

**Note:** The Podcasts folder is empty until you download podcasts from your computer.

- Scroll to view individual podcast episodes or folders containing multiple episodes of the same program.
- 2 Press or to view the podcast episodes within a folder or the details screen of an individual podcast episode.

You can pause, resume, fast-forward, and rewind just as with any other music file.

Some functions differ when playing a podcast:

- Pressing 
   when you have scrolled to
  a podcast displays a screen showing
  podcast details, but does not play the
  podcast. To play the podcast, press
  under Play. After you begin playing the
  podcast, pressing 
   pauses and
  resumes the podcast.
- If the podcast you are playing contains highlights, pressing and releasing the
   right or left skips to the next or previous highlight within the podcast, or to the beginning or end of the podcast.

#### highlights

Highlights are portions of a podcast that are marked to help you find them more easily.

Some podcasts you download may already have highlights marked. You can use the music player to add and delete highlight markers. Press and release (don't hold) the entire right or left to find them.

You can play all the highlights in a podcast and skip everything that is not marked as a highlight using **Highlights Only**.

#### add a highlight marker

- While playing a podcast press > Add Highlights.
- 2 Press under **0n** to mark the beginning.
- 3 Go to the point in the podcast that you want to mark as the end of the highlight and press under Off.
- 4 Press under Back.

**Tip:** Highlight markers can be deleted by pressing  **> Clear** or pressing  **> Edit** 

**Highlights** > **I** > **Clear All Highlights** from the Podcasts menu.

# audio and visual options

You can customize the sound of the music player by setting the equalizer while music is playing.

To set the equalizer press  $\blacksquare$  > Setup > Equalizer.

You can also customize the look of the music player screen by choosing a theme or by viewing visuals while listening to a music file.

To choose a theme press  $\blacksquare$  > **Setup** > **Themes.** 

# background music

Your *i876* phone has the capability to play music in the background while you are accessing other features like **Settings**, **Media Center**, **Bluetooth**, **GPS**, **Contacts**, **Datebook**, **Memo**, **Recent Calls**, and others.

You can also enjoy listening to your favorite background music while browsing the web, reading news or checking the weather.

# play music in the background Find it: > > Music Player > Songs.

- 1 Select a music file and press ox to play the song.
- 2 Press 🔳 > Hide Player.

The music player continues playing and the handset returns to the home screen. To jump back to the music player, press • under Player.

#### camera

The 1.3 MP camera with a digital, external viewfinder in your *i876* phone takes pictures and records videos. You can save these pictures and videos in your phone's memory or to a memory card inserted in your phone's

memory card slot, depending on the storage preference you chose. You can access these saved pictures and videos through the media center.

You can send the pictures you take either in InstantLINC Mobile to Mobile calls or with Bluetooth. You can also assign them to Contacts entries, or set them as your phone's wallpaper.

#### access the camera

There are many ways to access the camera. The simplest way is to press **a**.

To take pictures aim the camera lens on the flip and press • under **Capture** or press •.

**Note:** If you insert a memory card into the phone now, you are prompted to save the picture you have just captured to the memory card. Choosing to save the picture to the memory card does not change your storage preferences after the picture is saved.

To save the picture, press .

To discard the picture without saving it, press under **Discard** 

From the camera viewfinder, you can press to enter **Menu Options**.

The following options become available:

#### option

#### **Record Video**

Recording a video is similar to taking a picture. If you store videos in phone memory, you can record videos up to 60 seconds long. If you record video onto the memory card, the video length is limited by how much memory is available on the card or two (2) hours.

#### Zoom

Set the zoom to 1x, 2x, or 4x. You can also set zoom from the viewfinder by pressing and down.

#### option

#### Spotlight

Turn on the spotlight On before taking a picture in low light conditions. You can set it up to be **Session On, Only Once** or **Off**.

#### **Self Timer**

Delay capturing the picture for a selected number of seconds. The values are: Off (default), 10 seconds, 15 seconds, 20 seconds.

To turn off the timer before the picture is captured, press • under Cancel.

#### Picture Quality

Adjust the picture quality to Normal or Fine.

#### Picture Size

Set up the picture size to Max, Xlarge, Large, Medium, Small, Wallpaper1, or Wallpaper2. You can also set picture size from the viewfinder by pressing (a) left and right.

# digital viewfinder

The external digital viewfinder allows you to take self-portraits with convenience and accuracy compared to a mirror.

To take self-portraits press (a), close the flip and press the speaker phone (4) key.



To exit the self-portrait camera mode, press the smart • key.

# photo editor

Your i876 comes with a photo editing Java application that allows you to edit your pictures with crop, resize, flip and color adjustment tools. You can also add graphics and text to your pictures.

Find it: 🔳 > 🧗 > Media Center.

- 1 Select the picture you want to edit.
- 2 Press 🔳 > Edit.

Find it: 🔳 > 🕹 > PhotoEditor.

# change storage preference

You can choose whether media items are saved to your phone's memory or to the memory card. From the camera viewfinder press 

> Memory Card > Store Media.

1 Select On Phone or Prefer On Card.

The location that you choose becomes the **Store Media** option in **Settings**.

### access the media center

You can access the media center from the camera at any time, except when you are

using the Camera Setup menu or viewing the memory screen.

Press 🔳 > Media Center.

The media center contains all your pictures, music and video files located on your phone's memory or your removable memory card. Use the 🔀 or the ## to filter your results.

#### customize the camera

The Camera Setup menu lets you customize the camera as follows:

#### option

#### Ask for Name

If this option is **0n**, you are prompted to enter a name for each picture before saving. Otherwise, pictures are automatically saved with the date and a number as their names

#### option

#### Shutter Sound

Set the default sound for the Shutter Sound.

#### **Default Size**

Sets the default value for the **Picture Size** option.

#### **Default Quality**

Sets the default value for the **Picture Quality** option.

# LINC features

Your phone can send and receive the following items through LINC ID Mobile to Mobile calls with other phones that have this capability:

- Short text messages<sup>1</sup>
- 1. Additional charges may apply.

- Pictures<sup>1</sup>
- Datebook events
- My Info
- Contact information
- Location information<sup>1</sup>

You can choose to send messages, pictures, events, My Info, contacts or location information to the LINC ID you are engaged in an InstantLINC Mobile to Mobile call with, LINC IDs on the Recent Calls list, and LINC IDs stored in Contacts.

When you make or receive an InstantLINC Mobile to Mobile call, your phone automatically determines whether the phone you are engaged in an InstantLINC Mobile to Mobile call with is able to receive each of these items. Your phone saves this information for as long as the LINC ID is on your Recent Calls list or is saved in your Contacts. Your phone updates the saved information

each time you make or receive a call to or from that LINC ID.

You can turn your phone's ability to send and receive messages, pictures, events or location information On and Off.

# send messages

**Note:** This feature requires a subscription. Please contacts your sales representative or SouthernLINC Wireless at 1-800-406-0151.

The LINC Messages feature lets you send short text messages through an InstantLINC Mobile to Mobile calls.

When you send a message, it appears on the display of the phone you are engaged in the an InstantLINC Mobile to Mobile call with.

#### 40 main attractions

# begin a message and choose a recipient

You can begin a message during an InstantLINC Mobile to Mobile call, from the Contacts list, the Recent Calls list, or from the LINC Manager.

# begin a message during an InstantLINC Mobile to Mobile call

While in an InstantLINC Mobile to Mobile call, press > LINC Features > LINC Message.

**Note:** The first time you send a message, **Messaging Fees May Apply. Continue?** appears and you are prompted to respond. Press • under **Yes** to acknowledge the message.

# begin a message during an InstantLINC Mobile to Mobile call:

While in an InstantLINC Mobile to Mobile call, press > LINC Features > LINC Message.

#### begin a message from the Contacts or the Recent Calls list

- 1 From the **Contacts** or the **Recent Calls** list, select the entry containing the LINC ID you want to send the message to.
- 2 Press **1** > LINC Features > LINC Message.

# begin a message from the LINC Manager

The **LINC Manager** lets you select the LINC ID you want to send the message to from **Contacts** or the **Recent Calls** list.

Find it:  $\blacksquare$  >  $\blacksquare$  > LINC Manager > LINC Message.

Then select **A Contact** or **A Recent Call** to see a list of entries from the **Contacts** or the **Recent Calls** list that can receive messages.

### create messages

After you have begun a message and chosen a recipient, a screen appears that lets you

create the text of the message you want to send. Your message may be up to 400 characters long.

You can choose from a list of ready-made words or short phrases called Quick Notes. You can use a Quick Note as it is or edit it before you send it. Editing a Quick Note changes the Quick Note for this message only and will not change the Quick Note on the list.

# send a completed message

After you have completed your message, press the PTT button to send it.

### receive messages

When you receive a message, a message notification appears on the display.

To view the message: Press • under Read.

To dismiss the message press • under Dismiss

### reply to a message

- 1 View the message.
- Press under Reply.
- 3 Create the message and press the PTT button to send it.

# send pictures

**Note:** This feature requires a subscription. Please contacts your sales representative or SouthernLINC Wireless at 1-800-406-0151.

You can send pictures stored in **Media Center** through InstantLINC Mobile to Mobile calls. The picture you send appears on the recipient's display.

If the recipient accepts the picture, their phone saves the picture. The picture then appears in that phone's recent call list.

The first time you send a stored picture after turning the phone on, Picture Fees May Apply.

Continue? appears and you are prompted to respond. Press • under Yes to acknowledge the message.

**Note:** You cannot make or receive InstantLINC Mobile to Mobile calls while transmitting or receiving a picture.

# send a picture during a call

- 1 While in an InstantLINC Mobile to Mobile call, press under Picture or press > LINC Features > LINC Picture.
  - A list of pictures that can be included in an InstantLINC Mobile to Mobile call appears.
- 2 Select the picture you want to send.
- **3** Press the PTT button to send the picture.
- **4** Wait while the picture is transmitted. The InstantLINC Mobile to Mobile call is

- temporarily interrupted while a picture is transmitted.
- 5 When prompted, press the PTT button to resume the InstantLINC Mobile to Mobile call.

# start a call by sending a picture

# 

- 1 Scroll left or right to Media: Pictures
- **2** Select the picture you want to send.
- **3** Press **■** > **Send Via...** > **LINC Picture**.
- 4 Select A Contact or A Recent Call
  - A list of contacts that have LINC IDs and are able to receive pictures appears.
- **5** Select the name of the person you want to send the picture to.
- **6** Press the PTT button to send the picture.

7 When prompted, press the PTT button to resume the InstantLINC Mobile to Mobile call.

#### from the LINC Manager:

- 1 Select A Contact or A Recent Call
  - A list of contacts that have LINC IDs and are able to receive pictures appears.
- 2 Select the name of the person you want to send the picture to.
- 3 Select Browse Picture or Capture Picture.
- **4** Press the PTT button to send the picture.
- 5 Once picture has been sent, when prompted press the PTT button to resume the call.

### receive a picture

When someone sends you a picture, your phone emits a tone or vibrates and a message appears asking if you want to accept the picture.

Pictures you receive are saved to your phone's memory or a memory card. They are accessible through the media center.

When you see a message asking if you want to accept the picture, press **Yes** to accept or **No** to decline.

**Tip:** If you want to stop the transmission before it is finished, press **3**.

**Note:** The first time you accept a stored picture after turning the phone on, **Picture Fees May Apply. Continue?** appears and you are prompted to respond. Press • under **Yes** to accept the picture.

# clear a picture from the display

If you want to clear a picture from your phone's display while still on a call, press Sclear Screen.

The picture will not appear on the display again the next time you receive a call from person who sent it. This does not delete the picture from the media center.

# send My Info

While in an InstantLINC Mobile to Mobile call press > LINC View My Info, and push the PTT button to send.

or

2 From the home screen press > > > My Info > D > LINC View My Info and push the PTT button to send.

#### set my info sending option

You can control what portion of the information in **My Info** is sent and whether it is sent automatically in every call or only when you choose to send it.

- 1 Select or remove the fields you want to send.
- 2 Press under Done.

The information your phone sends always includes My Name and LINC ID. You may also send Line 1, Line 2, and Carrier IP, depending on your sending options.

#### automatic sending

To control whether you send your information automatically:

- 1 Select On or Off
- When you make an InstantLINC Mobile to Mobile call in which your information is sent automatically, the name you entered in the My Name field of My Info appears on the display of the recipient's phone, even if your name and LINC ID are not stored in the recipient's Contacts.

#### send contact information

- While in an InstantLINC Mobile to Mobile call, press > LINC Features.
- 2 Select LINC Contact and select the contact information you want to send.
- 3 Push the PTT button to send.
  or
- 1 From the home screen press > « > LINC Manager > LINC Contact.

- 2 Enter the LINC ID number of the person you want to send the Contact information to or press under **Browse**.
- 3 Select from Recent Calls, Contacts, or Memo.
- **4** Select the contact information you want to send and push the PTT button.

# send your location

You can transfer your approximate location information through InstantLINC Mobile to Mobile calls to other enabled phones. Using the integrated GPS feature the following location information can be shared:

- Time Stamped Latitude/Longitude
- Relative Location or Direction and distance from the sender in Miles or Kilometers

Find it: 🔳 > 🐗 > LINC Manager > LINC Location.

1 Select A Contact or A Recent Call.

A list of contacts that have LINC IDs and are able to receive pictures appears.

- 2 Select the name of the person you want to send your location to.
- 3 Press the PTT button to send your location.

**Note:** The location information can be stored in the recipient's recent call list.

#### turn LINC features on and off

You can turn your phone's ability to send and receive messages, pictures, Datebook events, and locations on and off.

You cannot turn your phone's ability to send and receive My Info and contact information on and off.

1 Check or uncheck messages, pictures events, and/or location.

# one touch PTT

Find it: > < > LINC Options > One Touch PTT.

One Touch PTT sets your phone to do any of the following each time you press the PTT button from the home screen:

#### option

Off

Nothing happens when you press the PTT button from the home screen.

#### Last Call

Call the most recent LINC ID on the recent calls list.

#### option

#### Assigned Number

Call a LINC ID you assign. Enter the number using your keypad, or press • under Search. Select Contacts. Recent Calls. or Memo.

**Note:** If you are entering a Talkgroup number, enter # before the number.

#### LINC Manager

Go to LINC Manager.

#### LINC Message

Go to the first screen to send a message. See "send messages" on page 40.

#### **LINC Picture**

Go to the first screen to send pictures. See "send pictures" on page 42.

#### LINC Event

Go to the first screen to send a Datebook Event.

#### option

#### LINC My Info

Go to the first screen to send My Info. See "send My Info" on page 45.

#### **LINC Contact**

Go to the first screen to send a contact. See "send contact information" on page 46.

#### **LINC Location**

Go to the first screen to send your location. See "send your location" on page 46.

# Bluetooth®

Your i876 supports the use of wireless Bluetooth stereo headsets. The audio from the **Music Player** is routed to the stereo headset. Additionally the handset can be used to stream stereo audio to a home entertainment system.

All stereo audio includes ring tones, music and Java sound.

Find it: 🔳 > 🕙 > Bluetooth.

The Bluetooth connection menu contains an option to search for **Audio Devices** including stereo Bluetooth devices.

#### turn Bluetooth On or Off

You can turn your phone's Bluetooth feature on or off. While Bluetooth power is on, your phone can communicate with other devices.

Find it: > Setup > Power.

- 1 Select **On** to power Bluetooth On.
- 2 Select Name if you wish to assign a name to your handset.
- 3 Select Find Me Duration to determine the amount of time in which your handset can be found by other Bluetooth devices.

**Tip:** You can turn off Bluetooth if you want to prolong battery life or if you enter an area where Bluetooth is prohibited.

#### make a Bluetooth connection

connect your i876 with a Bluetooth headset

Find it: > Bluetooth > Audio Devices > [Look for Devices].

- 1 Follow the instructions on your Bluetooth headset to set it up to be found.
- 2 Once your Bluetooth headset is set to be found press ☒ on your handset. Your phone will scan the Bluetooth headset until it finds it. Press ☒ when you see the name of the Bluetooth headset on your screen.
- **3** Your i876 requires that you create a bond in order to connect with a Bluetooth

headset. Press • under Yes when you are prompted to bond with the headset.

4 Enter the Bluetooth pass key.

Some Bluetooth devices ship with Bluetooth PINs. Please refer to your Bluetooth device's user guide to locate this information.

If a device ships without a Bluetooth PIN, then you can enter any PIN for that device. To establish a connection to that device, enter the same PIN for both your phone and the device. For example, if you enter 1234 as the device's PIN, then enter 1234 as your phone's PIN.

5 Press • under 0k.

**Note:** The i876 offers bluetooth auto pair feature with auto pair compatible Motorola devices. When bonded via bluetooth with a certain device, the pin will not be required

# connect your i876 with another Bluetooth device

Find it: 🔳 > 🎒 > Bluetooth > Pair To Devices.

- 1 Select the device you want from the list of found devices on your screen.
- **2** Create a bond if you are prompted to do so.

**Tip:** If you have previously connected to a device, the device will be stored on your phone so you can connect with it easily.

# use Bluetooth during a call

You can connect with available Bluetooth devices during a call.

**Note:** If the **Audio Devices** list contains only one device, then your phone will automatically try to connect to that device.

1 While in a call, press **1** > **Use Bluetooth.** 

- 2 Press under Yes to power On Bluetooth.
- 3 Select the audio device you want to connect to from the list of Handsfree Devices.

#### send information via Bluetooth

You can use your i876 phone to send Contacts entries, Datebook events, or audio files, pictures, and videos in the media center to another Bluetooth device.

The receiving device must be within 32 feet (10 meters) of your phone in order to connect with yours.

**Note:** Files sent or received may be up to 1 MB, depending on the limits set by SouthernLINC Wireless.



#### send Contacts

**Shortcut:** From the home screen press • under Contes

- 1 Select the contact you want to send.
- 2 Press **> Send Via... > Bluetooth**.
- 3 Press under Yes to power On Bluetooth.
- **4** Select the device you want to transfer the contact information to.

or

Search for the device by selecting [Look for Devices].

5 If prompted, bond with the device.
Your phone connects with the devices and transfers the contact

#### send a Datebook event

Find it: 🔳 > 🕙 > Datebook

- Select the datebook event you want to send.
- 2 Press **> Send Via... > Bluetooth**.

If the event you select repeats, then you will be prompted to choose whether to send the selected instance of the event or all instances of the event.

To send only the selected instance of the event, select **This Event Only**.

or

To send all instances of the event, select **Repeat Events**.

- 3 Press under Yes to power On Bluetooth.
- **4** Select the device you want to transfer the contact information to.

or

Search for the device by selecting [Look for Devices].

**5** If prompted, bond with the device.

Your phone connects with the device and sends the datebook event.

# send audio files, pictures, and videos

**Note:** Note: You can only send audio files, pictures, and videos if they are not forward locked and if their DRM settings do not prevent you from sending.

#### Find it: ■ > **₹** > Media Center

- 1 Select the audio file, picture, or video you want to send.
- 2 Press **> Send Via... > Bluetooth**.
- 3 Select the device you want to transfer the contact information to.

or

Search for the device by selecting [Look for Devices].

4 If prompted, bond with the device.

Your phone connects with the device and sends the datebook event.

#### clock screen saver

Your i876 comes with a clock screen saver that shows the time and day of the month through the external display when this one is in power save mode.

When a key is pressed the screen saver is removed and the display lights up.

You can choose from five different clock styles:












# basics

See page 1 for a basic phone diagram.

# display

The *home screen* shows when you turn on the phone. To dial a number from the home screen, press number keys and .


Note: Your home screen may look different.

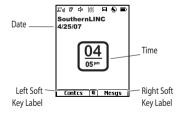

Soft key labels show the current soft key functions. For soft key locations, see page 1.

#### status indicators

Status indicators are shown at the top of the home screen:

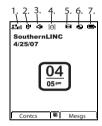

Signal Strength Indicator – Vertical bars show the strength of the network connection. You can't make or receive calls when ▼ or ▼ o shows.

- 2 Active Phone Line 1 indicates phone line 1 is ready to make calls; 2 indicates phone line 2 is ready to make calls.
- 3 Speaker Off Sounds associated with InstantLINC Mobile to Mobile calls and Talkgroup calls are set to come through the speaker rather than through the earpiece.
- **4 Ringer Off** Your phone is set to not ring.
- **Message Indicator** Shows when you receive a text message.
- 6 Packet Data Your handset is ready to transfer packet data or is transferring packet data.
- 7 Battery Charge Indicator A fuller battery indicates a greater charge. Recharge the battery when your phone shows Low Battery.

### main menu

All your phone's features can be accessed through the main menu. You can set the main menu to appear as **List View**, **Icon View**, or as **Tab View**.

Find it: 🔳 > 💖 > Display/Info > Menu View.

# text entry

Some features let you enter text.

Your phone provides convenient ways to enter words, letters, punctuation, and numbers whenever you are prompted to enter text (for example, when adding a Contacts entry or when using Text Messaging).

#### change the character entry method

- 1 When you see a screen where you can enter text, press 1 to change the character input mode.
- **2** Select one of the following options:

entry methods	
Alpha	Press a key several times for different characters.
Word	Enter words using a predictive text entering system that lets you enter a word with fewer keypresses.
Symbols	Enter symbols.
Numeric	Enter numbers by pressing the numbers on the keypad.

**Tip:** When entering text, press  $\boxtimes$  to change letter capitalization (Abc > ABC > abc).

#### word mode

Word English Text Input lets you enter text into your phone by pressing keys just once per letter.

Word English Text Input analyzes the letters you enter using an intuitive word database and creates a suitable word. (The word may change as you type.)

# enter a word using Word Character Input

- 1 Select the Word character input mode.
- 2 Press the corresponding keys once per letter to enter a word (for example, to enter the word Bill, press ② ④ ⑤ ⑤). (If you make a mistake, press ※ to erase a single character. Press and hold ※ to delete an entire entry.)
- To accept a word and insert a space, press #.

To accept a word completion (such as Billion when you entered Bill), press right.

# alpha mode

To enter characters by tapping the keypad:

- 1 Select the Alpha mode.
- 2 Press the corresponding keys repeatedly until the desired letter appears. (For example, to enter the word Bill, press 2 twice, 4 three times, 5 three times, and 5 three times again. If you make a mistake, press Delete to erase a single character. Press and hold Delete to erase an entire word.)

By default, the first letter of an entry is capitalized and the following letters are lowercased. After a character is entered, the cursor automatically advances to the next space after two seconds or when you enter a character on a different key.

#### Characters scroll in the following order:

characters	
	Space.1?!,@&:;"-()'¿;% f \$¥
2	ABC2ÁÃÂÀÇ
3	DEF3ÉÊÈ
4	GHI4ÍÌ
3	JKL5
6	MNO6ÓÕÔÒ
7	PQRS7ß
8	TUV8ÚÜÛÙ
9	WXYZ9
0	+-0 */\[]=><#§
#	Space
*	Back

# navigation key

Press the navigation key 
up, down, left, or right to scroll to items in the display. When you scroll to something, press .



# handsfree speaker

You can use your phone's handsfree speaker to make calls without holding the phone to your ear.

During a call (with the flip open), press under **Speaker** to turn the handsfree speaker On.

The handsfree speaker stays on until you press • under **Speaker** or close the flip.

**Note:** The handsfree speaker won't work when your phone is connected to a handsfree car kit or headset.

# transmitters

**Note:** Consult airline staff about the use of the *Transmitters* feature during flight. Turn off your phone whenever instructed to do so by airline staff.

Transmitters turns off your phone's calling features in situations where wireless phone use is prohibited, but you can use the phone's other non-calling features when Transmitters turned Off

Find it: 🔳 > 💖 > Advanced > Transmitters > Off.

# use GPS with map software

Your phone is enabled with a highly-capable GPS receiver that can send location information to a USB port on a PC, laptop, or PDA.

**Note:** No serial port connectivity is provided by your phone. Applications on the host device which are expecting to receive the GPS location information via a serial port must instead use a Virtual Serial Comm Port.

The data sent to the host device is formatted as prescribed in the National Marine Electronics Association 0183 V3.0 (NMEA-0183) standard. As such it supports the following sentences: GGA, GLL, GSA, GSV, RMC, and VTG.

This handset is not a full NMEA-0183 compliant device supporting electrical RS-422/RS-232 connectivity as dictated by the NMEA-0183 standard. Consequently it's unsuitable for conventional marine NMEA-0183 equipment use. Its intended use is for normal "terrestrial" mobile users who want to enable their USB hosting computing devices such as a PC, laptop or PDA with the phone's highly-capable GPS functionality.

#### get connected



- Slide open the phone's bottom connector and insert a mini-USB cable into the phone's bottom connector.
- Insert the other end of the mini-USB cable into a vacant USB receptacle of your host device. A virtual USB Comm Port will be created on your host device upon successful enumeration of the phone as a USB Communications Device Class device.
- 3 Ensure no application in your host device is using the created COMM port. You may need to ensure that the created virtual COMM port settings are set as follows:

• Bits per second: 4800

• Data bits: 8

• Parity: None

Stop bits: 1

- Flow control: None.
- 4 Start the GPS application on your host device. Set the GPS application to start accepting NMEA-0183 formatted data from the created Virtual COMM port.
- 5 Set your phone to start sending NMEA-0183 formatted location information.

Find it:  $\blacksquare$  >  $\P$  > GPS > Interface > NMEA OUT > USB.

Your phone is now actively sending location NMEA-0183 formatted GPS data to your USB host device.

To stop your phone from sending location data:

**Note:** Each time you power your phone Off, NMEA OUT is automatically set to Off and

you need to manually restart it using the menu selections above.

Your USB host device will generally provide charging power (5V, up to 500mA) to your phone via the mini-USB cable therefore no other charging power to it will normally be required. However some laptops may require that you provide external AC/DC power to the laptop in order for it to provide full 500mA charging current capability to the phone.


# features for the hearing impaired

# using your phone with a hearing aid

For best results use the following optimization procedures and handset setting. They generally apply as well for users with cochlear implants:

# optimize your handset position and orientation


While in a phone call slide your phone up and down, then left and right until best microphone coupling is obtained. You also may need to adjust your hearing aid (HA) volume setting.

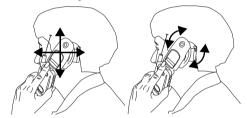

If your HA has a telecoil, activate its switch, then also rotate the handset as illustrated to align the telecoils.

**Note:** Some automatically switched hearing aids may need an auxiliary switching magnet.

If you are unsure whether your HA is telecoil equipped or needs an auxiliary magnet, please refer to your HA user guide or contact a hearing aid professional or supplier.

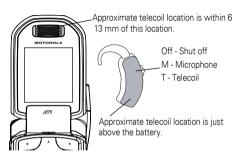

# optimize your handset antenna position

Your phone's rating for HA compatibility is determined with the antenna extended if it has an extendable antenna. However, acceptable use might occur with the antenna retracted. Test your handset in both antenna

positions when the handset is in the optimum orientation.

choose your hearing aid setting

Find it: 
Settings > Phone Calls > Hearing Aid.

- 1 Set this option to **Microphone**. Microphone coupling is now optimized. -or-
- 2 Set this option to Telecoil. Handset meets US federal requirements for telecoil coupling sound. -or-
- **3** Set this option to **Off** (factory default). This is the setting for non HA users.

# features for the vision impaired

# high contrast theme

Your i876 comes with a standard high contrast theme that provides black and white

text with reverse text highlighting and very large icons for easy visualization of selection.

Find it:  $\blacksquare$  >  $\P$  > Display/Info > Theme > High Contrast.

# calls

To make and answer calls, see page 17.

# turn off a call alert

You can press the volume keys to turn off a call alert before answering the call.

# recent calls

The recent calls list contains information associated with calls you have made and received and call alerts you have received.

When you send or receive InstantLINC Mobile to Mobile calls, the **Recent Call** list contains the following items with those calls:

- contact information received
- My Info received

- short text messages received
- pictures sent or received
- Datebook events received
- location information received

The recent calls list displays up to 20 of the most recent calls and call alerts.

- 1 Press 🔳 > Recent Calls.
- **2** Scroll through the list.

# store an item to contacts from recent calls

Phone calls, InstantLINC Mobile to Mobile calls, My Info, Contacts entries and location information received from other phones can

be stored to the Contacts list from the recent calls list.

#### Find it: 🔳 > Recent Calls.

- 1 Scroll to or select the item you want to store.
- 2 Press under Save to store the information as a new entry in the Contacts list.

or

- 3 If Save is not one of your options, press > Update Contacts. And select the contact you want to update.
- 4 Press under Save to save your changes.

# redial

To redial your last outgoing phone call, press and hold **②**.

### caller ID

**Note:** This feature requires a subscription. Please contacts your sales representative or SouthernLINC Wireless at 1-800-406-0151.

Caller ID allows people to identify a caller before answering the phone by displaying the number of the incoming call. If you do not want your number displayed when you make a call, just follow these easy steps.

To block your phone number from being displayed for a specific outgoing call:

- **1** Press **★ 6 7**.
- **2** Enter the number you want to call.
- 3 Press 💽.

To permanently block your number, call SouthernLINC Wireless at 1-800-406-0151.

# call forward

or

Call forwarding sends calls to the phone numbers you specify. You can forward all calls to one number or forward missed calls to different numbers depending on the reason you missed the call. You can forward phone lines 1 and 2 independently.

# Find it: 🔳 > 💝 > Phone Calls > Call Forward.

- 1 To forward all calls select All Calls and select To to enter the phone number you want all your calls forwarded to.
- You can specify a forwarding number for each type of missed call by selecting Detailed and choosing the following options: If Busy: When your handset is on a call or transferring data.

**If No Answer**: When you do not answer on the first 4 rings.

**If Unreachable**: When your handset is out of coverage or powered off.

### voice name

You can place calls by speaking commands to your phone if you have previously assigned a voice name to your contacts.

#### assign voice names to contacts

- 1 Press under Contcs and select [New Contact].
- 2 Assing a name, phone number and select [Options].
- 3 Select **Voice Name** and follow the prompts to record the voice name.
- 4 Press under Back and under Save.

#### place a call using voice command

1 With the flip closed or open, press the speaker key 40 until you are prompted to say the voice name.

The handset will automatically place the call.

# emergency calls

SouthernLINC Wireless programs one or more emergency phone numbers that you can call under any circumstances, even when your phone is locked or the SIM card is not inserted.

**Note:** Emergency numbers vary by country. Your phone's preprogrammed emergency number(s) may not work in all locations, and sometimes an emergency call cannot be placed due to network, environmental, or interference issues.

Your phone supports emergency calling. Emergency phone calls can be made even when your SIM card is blocked or not in your phone.

Dial 911 or your local emergency number to be connected to an emergency response center. If you are on an active call, you must end it before making an emergency call.

When you make an emergency call, your phone's GPS Enabled feature can help emergency service personnel find you, if you are in a location where your phone's GPS antenna has established a clear view of the open sky and your local emergency response center has the equipment to process location information. Because of the limitations of this feature, always provide your best knowledge of your location to the emergency response center when you make an emergency call.

**Note:** Emergency calls cannot be placed while the keypad is locked.

**Note:** If you have not registered on the network, emergency calls cannot be placed while your SIM card is in your phone.

# international calls

**Note:** This feature requires a subscription. Please contacts your sales representative or SouthernLINC Wireless at 1-800-406-0151.

# speed dial

Each phone number stored in Contacts is assigned a Speed Dial number, which you can use to call that number.

- 1 From the home screen, use the keypad to enter the Speed Dial number assigned to the phone number you want to call.
- 2 Press #.
- 3 Press 💽.

#### turbo dial

The first nine entries in your contacts are set for turbo dial. They can be called by pressing and holding the speed dial number (1 through 9).

# voicemail

**Note:** To receive voice mail messages, you must first set up a voice mail account with SouthernLINC Wireless.



# receiving a message

When you receive a voice mail message, **New VoiceMail Message** appears on the display.

To call SouthernLINC Wireless's voice mail system and listen to the message:

To check voicemail messages:

Press the soft key under Call.

To dismiss the message notification:

If the flip is closed, press the smart key • on the top.


If the flip is open, press  $\bigcirc$ K, Back, or close the flip.


If the caller leaves a message, this icon  $\[ g \]$  appears on the display, reminding you that you have a new message.

# customize

#### volume

Press the volume keys to:

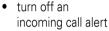

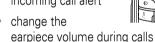

 change the ringer volume from the home screen

**Tip:** Sometimes silence really is golden. That's why you can quickly set your ringer to **Vibrate All** by holding the down volume key in the home screen.

# ring tones

To set the ring tone your phone makes when you receive phone calls, call alerts, message notifications, pictures sent in InstantLINC Mobile to Mobile calls, or Datebook reminders:

**Note:** Only ring tones stored in your phone's memory are available in the ring tones list. To assign a ring tone stored on a memory card inserted in your phone's memory card slot, you must go to the media center. Not all audio files can be assigned as ring tones.

1 Make sure Vibrate All is set to Off.

2 Scroll through the list of ring tones and select the one you want to assign. Vibrate sets your phone to vibrate instead of making a sound; Silent sets your phone to neither vibrate nor make a sound.

**Tip:** Highlighting a ring tone lets you hear it.

- **3** Select the features you want to assign the ring tone to.
- 4 When you are finished, press under **Done**.

**Note:** This icon appears on the display if you set your phone to neither vibrate nor make a sound for phone calls.

#### set your phone to vibrate

You can set your phone to vibrate instead of making a sound when you receive all phone calls, InstantLINC Mobile to Mobile calls, call alerts, messages notifications, pictures sent

in InstantLINC Mobile to Mobile calls, and Datebook reminders.

Find it:  $\blacksquare > \{ \} >$ Ring Tones > Vibrate All

Set this option to On or Locked.

Setting this option to **On** lets you turn **Vibrate All** off by pressing the up volume control. Setting this option to **Locked** requires you to press and hold the up volume control to turn **Vibrate All** off. The **Locked** option helps prevent you from accidentally turning **Vibrate All** off.

**Tip:** To set **Vibrate All** to **On** or **Locked** using the volume controls: Press the volume controls to turn down the volume as far as possible to set **Vibrate All** to **On**. Continue to hold the down volume control to set **Vibrate All** to **Locked**.

To set your phone to vibrate instead of making a sound for some features but not others:

Find it:  $\blacksquare > \{ \} >$ Ring Tones.

- 1 Make sure Vibrate All is set to Off.
- **2** Select **Vibrate** from the list of ring tones.
- **3** Select the features you want to set to make no sound.
- When you are finished, press under Done.

## wallpaper

Set a photo or picture as a wallpaper (background) image in your phone's external display, home screen or throughout all menu screens.

Find it: 🔳 > 💝 > Display/Info > Wallpaper.

#### To select a wallpaper image:

Scroll through the list of pictures and press or to select the picture of your choice. **Note:** You can set the wallpaper to change automatically after a certain period of time by turning on the **Auto Cycle** feature located in the Wallpaper menu.

#### datebook

Find it:  $\blacksquare > \boxdot >$  Datebook  $> \blacksquare >$  Setup.

You can view or change these options:

Start View — Sets Datebook to start in day view, week view, or month view when you access Datebook

**Daily Begin** — Sets the beginning of your day. This is the earliest time of day displayed in week view, if you have a 12-hour day view.

**Delete After** — Sets the amount of time Datebook waits to delete an event after it occurs.

**Time Shift** — Lets you shift the times of all Datebook events. This is useful if you are traveling to a different time zone.

**Alert Timeout** — Sets the amount of time a tone continues to sound when you receive a Datebook reminder.

**Clock** — Controls whether the time and date appear on the home screen; sets time and date format; sets year.

# hide or show location information



Your phone is equipped with a Location feature for use in connection with location-based services that may be available in the future

The Location feature allows the network to detect your position. Turning Location off will hide your location from everyone except 911.

**Note:** Turning Location on will allow the network to detect your position using GPS technology, making some applications and services easier to use. Turning Location off will disable the GPS location function for all purposes except 911, but will not hide your general location based on the cell site serving your call. No application or service may use your location without your request or permission. GPS-enhanced 911 is not available in all areas.

set your Privacy Options


Find it:  $\blacksquare > \textcircled{\P} > \mathsf{GPS} > \mathsf{Privacy}$ .

Select **Restricted** to turn your location off.

# other features

# advanced calling

#### feature call waiting To accept the second call and put the active call on hold press • under Yes To accept the second call and end the active call press তি Your phone rings with the second call for you to answer.

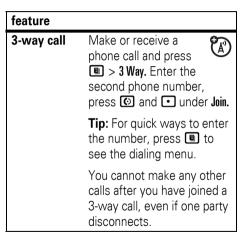

feature	
flip activation	To make your handset to answer and end calls by opening and closing the flip press  > \mathbb{\mathbb{P}} > \mathbb{Phone Calls} > \mathbb{Flip Activation}.
	Select Flip To Ans > On and Flip to End > On.
any key answer	To answer phone calls by pressing any key on the keypad press <a> &gt; <a> &gt; </a> &gt; <a> Phone Calls &gt; Any Key Ans &gt; On.</a></a>

## alarm clock

To access the alarm clock press 📵 > 🖧 > Alarm Clock Plus
To set the alarm clock press under Set. Use to set the desired time and press under Done
To access the stop watch press  > & > Alarm Clock  Plus >
Press 🖸 under <b>Start</b>
To access the quick timer press ■ > & > Alarm Clock  Plus > ■ > Quick Timer
Use (a) to set the desired time and press • under Start

#### feature do not To access Do not disturb press 🔳 > 🕹 > Alarm Clock disturb Plus > 🔳 > Do Not Disturb Press • under Yes. "Do Not Disturb" mode will allow you to turn off your phone's transmitters. When your phone is set to Do Not Disturb, no incoming phone or Instantl INC Mobile to Mobile calls will be received.

**Note:** Alarm Clock features only work when the handset is powered On.

#### contacts

feature	
edit/delete contact entry	Press • under Contacts.  Select a contact and press  > Edit. Change the desired content and press  under Save.
set ringer ID	Press • under Contacts.  Select a contact and press  > Edit > [Ring Tone/Picture].  Select desired ringer and
	press • under Back > • under Save
set picture ID	Press • under Contacts. Select a contact and press  > Edit > [Ring Tone/Picture].
	Select desired picture and press • under Back > • under Save

## datebook

feature	
create datebook events	To create a new Datebook event press  > > > Datebook > [New Event].
see datebook event	To see a calendar event press  >
event reminder	When an event reminder occurs press • under View.
	Press • under Back to close the reminder.

feature	
receive datebook events via InstantLINC	To view the information while still in the InstantLINC Mobile to Mobile call press OK.
Mobile to Mobile calls	The 5 most recent events received from a LINC ID are stored with the that LINC ID on the recent calls list.
	To store events to the Datebook press • under Save while viewing the event you want to store.

#### **GPS**

**Note:** To improve GPS performance:

- Stay in the open
- Move away from other electrical or electronic devices
- Try to remain stationary.

feature	
view approximate location	To see your approximate location press  >
	To recalculate position press <b>Refresh</b> . This may take several minutes.

feature	
set GPS privacy options	To set the level of privacy for your GPS system press  System > GPS > Privacy.
	If your GPS PIN security feature is enabled, enter your GPS PIN and select the privacy option you want.
change GPS PIN	<b>Note:</b> When you receive your phone, your GPS PIN is 0000.
	To change your GPS PIN press  > Settings > Security > Change Passwords > GPS PIN. Enter the current GPS PIN and enter the new 4- to 8-digit GPS PIN. Re-enter the new 4- to 8-digit GPS PIN to confirm.

#### handsfree

**Note:** The use of wireless phones while driving may cause distraction. Discontinue a call if you can't concentrate on driving. Additionally, the use of wireless devices and their accessories may be prohibited or restricted in certain areas. Always obey the laws and regulations on the use of these products.

feature		
speaker- phone	Activate the speakerphone while driving:	ð
	Press and hold the speakerphone key openses under Options : Speaker.	

feature	
auto	To automatically answer
answer	calls when connected to a car kit or headset press  > Phone Calls > Auto Ans. Select the amount of rings before answering.

## memory card

# feature change storage items are saved to your phone's memory or to the memory card press > Memory Card > Store Media > On Phone or Prefer On Card. Note: If the memory card is not in the phone, even if you choose Prefer On Card, the media items are saved to

your phone's memory.

#### feature manage To view your used memory, free memory, memory memory capacity, and number of files in phone memory press ■ > ₹ > Memory Usage. To free memory on your phone, delete items from the media center, voice records, or Java applications. To free memory on the memory

card's folders.

card, delete items from the

# pc applications

feature	
other PC	For a list of complete PC
applications	applications visit
	www.motorola.com/iden

# personalize

feature	
language	To set the language of your menu press
backlight time length	To select how long the display screen and keypad are backlit press

feature	
menu style	To display the main menu as tabs, graphic icons or a text-based list press     > \$\infty\$ > Display/Info > Menu View.
clock display	To display the clock on the home screen press > > Display/Info > Clock > Display > On

#### $\mathsf{TTY}$

feature	
turn On TTY feature	From the home screen press $\blacksquare$ > $\P$ > Phone Calls > TTY > Use TTY > On.
choose TTY mode	From the home screen press  > Y > Phone Calls > TTY > Type.
	Select from TTY, VCO or HCO.

feature	
change the TTY baud rate	From the home screen press  > % > Phone Calls > TTY > Baud.
	Select <b>45.45</b> or <b>50.00</b>
change TTY mode	While in the TTY call, press    > In Call Setup > TTY > Type.
during a call	Select from TTY, VCO or HCO.

# security

feature	
phone lock	To lock the phone press  > \sigma > Security > Phone Lock > Lock Now or Auto Lock.

feature	
keypad lock	To lock the keypad press    Security > Keypad  Lock > Lock Now or Auto Lock
	Shortcut: To lock the keypad press ■ > ★
enable SIM PIN	To enable SIM PIN, press  Security > SIM PIN >  On.
change SIM PIN	To change the SIM PIN, press    > Security > Change Passwords > SIM PIN.

**Note:** You can make emergency calls on a locked phone (see page 66). A locked phone still rings or vibrates for incoming calls or messages, but you need to unlock it to answer.



#### **MOTOROLA**

# Important Safety and Legal Information

# Safety and General Information

This section contains important information on the safe and efficient operation of your phone. Read this information before using your integrated multi-service portable radio.\*

# Exposure to Radio Frequency (RF) Energy

Your phone contains a transmitter and receiver. When it is ON, it receives and transmits RF energy. When you communicate with your phone, the system handling your call controls the power level at which your phone transmits.

Your Motorola phone is designed to comply with local regulatory requirements in your country concerning exposure of human beings to RF energy.

# Portable Radio Product Operation and EME Exposure

Your Motorola radio product is designed to comply with the following national and international standards and guidelines regarding exposure of human beings to radio frequency electromagnetic energy (EME):

- United States Federal Communications Commission, Code of Federal Regulations: 47 CFR part 2 sub-part J.
- American National Standards Institute (ANSI) / Institute of Electrical and Electronics Engineers (IEEE). C95. 1-1992.
- Institute of Electrical and Electronics Engineers (IEEE).
   C95. 1-2005 Edition.\*
- International Commission on Non-lonizing Radiation Protection (ICNIRP) 1998.
- Ministry of Health (Canada). Safety Code 6. Limits of Human Exposure to Radio frequency Electromagnetic Fields in the Frequency Range from 3 kHz to 300 GHz, 1999.
- Australian Communications Authority Radio communications (Electromagnetic Radiation - Human Exposure) Standard 2003.
- ANATEL, Brazil Regulatory Authority, Resolution 303 (July 2, 2002) "Regulation of the limitation of exposure to
- \* The information provided in this document supersedes the general safety information in user's guides published prior to May 1, 2006

electrical, magnetic, and electromagnetic fields in the radio frequency range between 9 kHz and 300 GHz."
"Attachment to Resolution 303 from July 2, 2002."

#### **Operational Precautions**

To assure optimal radio product performance and to be sure that human exposure to RF does not exceed the guidelines set forth in the relevant standards, always follow these instructions and precautions:

#### **Phone Operation**

When placing or receiving a phone call, hold your radio product as you would a wireline telephone. **Speak directly into the microphone**.

#### Two-way radio operation

Your radio product has been designed and tested to comply with national and international standards and guidelines regarding human exposure to RF electromagnetic energy, when operated in the two-way mode (at the face, or at the abdomen when using an audio accessory) at usage factors of up to 50% talk/50% listen.

Transmit no more than the rated duty factor of 50% of the time. To transmit (talk), push the PTT button. To receive calls, release the PTT button. Transmitting 50% of the time or less, is important because this radio generates measurable RF energy only when transmitting (in terms of measuring for standards compliance).

When using your radio product as a traditional two-way radio, hold the radio product in a vertical position with the microphone one to two inches (2.5 to 5 cm) away from the lips.



If you wear a radio product on your body when transmitting, always place the radio product in a Motorola approved clip, holder, holster, case or body harness. If you do not use a body-worn accessory supplied or approved by Motorola and are not using the radio product in the intended use positions along side the head in the phone mode or in front of the face in the two-way radio mode, or if you hang your device from a lanyard around your neck, keep the device at least 2.5 centimeters (1 inch) from your body when transmitting.

#### Approved Accessories

For a list of approved Motorola accessories call 1-800-453-0920, or visit our website at www.motorola.com/iden.

#### RF Energy Interference/Compatibility

Nearly every electronic device is subject to RF energy interference from external sources if inadequately shielded, designed or otherwise configured for RF energy compatibility. In some circumstances your handset may cause interference with other devices.

# Follow Instructions to Avoid Interference Problems

Turn OFF your radio product where posted notices instruct you to do so.

In an aircraft, turn off your radio product whenever instructed to do so by airline staff. If your radio product offers an airplane mode or similar feature, consult airline staff about using it in flight.

#### Implantable Medical Devices

If you have an implantable medical devices, such as a pacemaker or defibrillator, consult your physician before using this radio product.

Persons with implantable medical devices should observe the following precautions:

- ALWAYS keep the phone more than 20 centimeters (8 inches) from the implantable medical device when the phone is turned ON.
- DO NOT carry the phone in a breast pocket;
- Use the ear opposite the implantable medical device to minimize the potential for interference.
- Turn OFF the phone immediately if you have any reason to suspect that the interference is taking place.

Read and follow the directions from the manufacturer of your implantable medical device. If you have any questions about using

your wireless phone with your implantable medical device, consult your health care provider.

#### **Hearing Aids**

Some phones may interfere with some hearing aids. In the event of such interference, you may want to consult your hearing aid manufacturer or physician to discuss alternatives.

#### Other Medical Devices and Health Care Facilities

If you use any other personal medical devices, consult your physician or the manufacturer or your device to determine if it is adequately shielded from RF energy. Turn off your radio product when instructed to do so in hospitals or health care facilities that may be using equipment that is sensitive to external RF energy.

#### **Driving Precautions**

Check the laws and regulations on the use of radio products in the area where you drive. Always obey them.

When using your radio product while driving, please:

- Give full attention to driving and to the road. Using a phone may be distracting. Discontinue a call if you can't concentrate on driving.
- · Use hands free operation, if available.
- Pull off the road and park before making or answering a call if driving conditions so require.

• Do not place a handset in the airbag deployment area.

Responsible driving practices can be found in the "Smart Practices While Driving" section at the end of this guide and/or at the Motorola Web site: <a href="https://www.motorola.com/callsmart">www.motorola.com/callsmart</a>.

**Note:** The use of wireless phones while driving may cause distraction. Discontinue a call if you can't concentrate on driving. Additionally, the use of wireless devices and their accessories may be prohibited or restricted in certain areas. Always obey the laws and regulations on the use of these products.

#### **Operational Warnings**

Obey all posted signs when using phones in public areas.

#### Potentially Explosive Atmospheres

Areas with potentially explosive atmospheres are often but not always posted, and can include fueling areas such as below decks on boats, fuel or chemical transfer or storage facilities, or areas where the air contains chemicals or particles, such as grain, dust or metal powders.

When you are in such area, turn off your handset, and do not remove, install, or charge batteries unless it is a radio product type especially qualified for use in such areas as "Intrinsically Safe" (for example, Factory Mutual, CSA, or UL approved). In such areas, sparks can occur and cause an explosion or fire.

#### **Batteries and Chargers**

Caution: Improper treatment or use of batteries may present a danger of fire, explosion, leakage, or other hazard. For more information, see the "Battery Use and Battery Safety" section in this user's guide.

Your battery, charger, or portable radio may contain symbols, defined as follows:

Symbol	Definition
$\triangle$	Important safety information follows.
8	Do not dispose of your battery or phone in a fire.
	Your battery or phone may require recycling in accordance with local laws. Contact your local regulatory authorities for more information.
	Do not throw your battery or phone in the trash.
⊝ Li Ion BATT ⊕	Your phone contains an internal lithium ion battery.

Symbol	Definition
<b>*</b>	Do not let your battery, charger, or phone get wet.
	Listening at full volume to music or voice through a headset may damage your hearing.

#### **Choking Hazards**

Your portable radio or its accessories may include detachable parts, which may present a choking hazard to small children. Keep your device and its accessories away from small children.

#### **Glass Parts**

Some parts of your phone may be made of glass. This glass could break if the product is dropped on a hard surface or receives a substantial impact. If glass breaks, do not touch or attempt to remove. Stop using your phone until the glass is replaced by a qualified service center.

#### Seizures/Blackouts

Some people may be susceptible to epileptic seizures or blackouts when exposed to flashing lights, such as when playing video games. These may occur even if a person has never had a previous seizure or blackout.

If you have experienced seizures or blackouts, or if you have a family history of such occurrences, please consult with your physician before playing video games or enabling a flashing-lights feature (if available) on your phone.

Discontinue use and consult a physician if any of the following symptoms occur: convulsion, eye or muscle twitching, loss of awareness, involuntary movements, or disorientation. It is always a good idea to hold the screen away from your eyes, leave the lights on in the room, take a 15-minute break every hour, and stop use if you are very tired.

#### Caution About High Volume Usage



Listening at full volume to music or voice through a headset may damage your hearing.

#### Repetitive Motion

When you repetitively perform actions such as pressing keys or entering finger-written characters, you may experience occasional discomfort in your hands, arms, shoulders, neck, or other parts of your body. If you continue to have discomfort during or after such use, stop use and see a physician.

# Service & Repairs

If you have questions or need assistance, we're here to help. Go to <a href="https://www.motorola.com/iden">www.motorola.com/iden</a>, where you can select from a number of customer care options. You can also contact the

Motorola Customer Support Center at 1-800-453-0920 (United States), 1-877-483-2840 (TTY/TDD United States for hearing impaired).

# **Export Law Assurances**

This product is controlled under the export regulations of the United States of America and Canada. The Governments of the United States of America and Canada may restrict the exportation or re-exportation of this product to certain destinations. For further information contact the U.S. Department of Commerce or the Canadian Department of Foreign Affairs and International Trade.

# Specific Absorption Rate Data

ALL MODELS WITH FCC ID IHDT56HFI MEET THE GOVERNMENT'S REQUIREMENTS FOR EXPOSURE TO RADIO WAVES.

Your wireless phone is a radio transmitter and receiver. It is designed and manufactured not to exceed the emission limits for exposure to radio frequency (RF) energy set by the Federal Communications Commission of the U.S. Government. These limits are part of comprehensive guidelines and establish permitted levels of RF energy for the general population. The guidelines are based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. The standards include a substantial safety margin designed to assure the safety of all persons, regardless of age and health.

The exposure standard for wireless mobile phones employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit set by the FCC is 1.6W/kg. <sup>1</sup> Tests for SAR are conducted using standard operating positions reviewed by the FCC with the phone transmitting at its highest certified power level in all tested frequency bands. Although the SAR is determined at the highest certified power level, the actual SAR level of the phone while operating can be well below the maximum value. This is because the phone is designed to operate at multiple power levels so as to use only the power required to reach the network. In

general, the closer you are to a wireless base station antenna, the lower the power output.

Before a phone model is available for sale to the public, it must be tested and certified to the FCC that is does not exceed the limit established by the government-adopted requirement for safe exposure. The tests are performed in positions and locations (e.g., at the ear and worn on the body) as required by the FCC for each model. The highest SAR value for this model phone when tested for use at the ear is 1.31 W/kg and when tested on the body, as described in this user guide, is 1.51 W/kg during packet data transmission. (Body-worn measurements differ among phone models, depending upon available accessories and FCC requirements.)<sup>2</sup>

While there may be differences between the SAR levels of various phones and at various positions, they all meet the government requirement for safe exposure. Please note that improvements to this product model could cause differences in the SAR value for later products; in all cases, products are designed to be within the guidelines.

Additional information on Specific Absorption Rates (SAR) can be found on the Cellular Telecommunications Industry Association (CTIA) web-site at <a href="http://www.ctia.org">http://www.ctia.org</a> or the Canadian Wireless Telecommunications Association (CWTA) Web site: <a href="http://www.cvta.ca">http://www.cvta.ca</a>

- 1. In the United States and Canada, the SAR limit for mobile phones used by the public is 1.6 watts/kg (W/kg) averaged over one gram of tissue. The standard incorporates a substantial margin of safety to give additional protection for the public and to account for any variations in measurements.
- 2. The SAR information includes the Motorola testing protocol, assessment procedure, and measurement uncertainty range for this product.

# Motorola Limited Warranty for the United States and Canada

#### What Does this Warranty Cover?

Note: FOR IDEN SUBSCRIBER PRODUCTS, ACCESSORIES AND SOFTWARE PURCHASED IN THE UNITED STATES OR CANADA

#### What Does this Warranty Cover?

Subject to the exclusions contained below, Motorola, Inc. warrants its Motorola iDEN Digital Mobile and Portable Handsets ("Products"), Motorola-branded or certified accessories sold for use with these Products ("Accessories") and Motorola software contained on CD-Roms or other tangible media and sold for use with these Products ("Software") to be free from defects in materials and workmanship under normal consumer usage for the period(s) outlined below. This limited warranty is a consumer's exclusive remedy, and applies as follows to new Products, Accessories and Software purchased by

consumers in the United States or Canada, which are accompanied by this written warranty:

Products Covered	Length of Coverage	
Products as defined above.	One (1) year from the date of purchase by the first consumer purchaser of the product.	
Accessories as defined above.	One (1) year from the date of purchase by the first consumer purchaser of the product.	
Products or Accessories that are Repaired or Replaced.	The balance of the original warranty or for ninety (90) days from the date returned to the consumer, whichever is longer.	

<b>Products Covered</b>	Length of Coverage
Software as defined above. Applies only to physical defects in the media that embodies the copy of the software (e.g. CD-ROM, or floppy disk).	Ninety (90) days from the date of purchase.

#### What is not covered? (Exclusions)

**Normal Wear and Tear**. Periodic maintenance, repair and replacement of parts due to normal wear and tear are excluded from coverage.

**Ornamental Decorations**. Ornamental decorations such as emblems, graphics, rhinestones, jewels, gemstones and their settings, and other decorative elements, are excluded from coverage.

**Batteries**. Only batteries whose fully charged capacity falls below 80% of their rated capacity and batteries that leak are covered by this limited warranty.

**Abuse & Misuse**. Defects or damage that result from: (a) improper operation, storage, misuse or abuse, accident or neglect, such as physical damage (cracks, scratches, etc.) to the surface of the product resulting from misuse; (b) contact with liquid, water, rain, extreme humidity or heavy perspiration, sand, dirt or the like, extreme heat, or food; (c) use of the Products or Accessories for commercial purposes or subjecting the Product or Accessory to

abnormal usage or conditions; or (d) other acts which are not the fault of Motorola, are excluded from coverage.

**Use of Non-Motorola Products and Accessories.** Defects or damage that result from the use of Non-Motorola branded or certified Products, Accessories, Software or other peripheral equipment are excluded from coverage.

Unauthorized Service or Modification. Defects or damages resulting from service, testing, adjustment, installation, maintenance, alteration, including without limitation, software changes, or modification in any way by someone other than Motorola, or its authorized service centers, are excluded from coverage.

Altered Products. Products or Accessories with (a) serial numbers or date tags that have been removed, altered or obliterated; (b) broken seals or that show evidence of tampering; (c) mismatched board serial numbers; or (d) nonconforming or non-Motorola housings, antennas, or parts, are excluded from coverage.

**Communication Services**. Defects, damages, or the failure of Products, Accessories or Software due to any communication service or signal you may subscribe to or use with the Products, Accessories or Software is excluded from coverage.

**Software Embodied in Physical Media.** No warranty is made that the software will meet your requirements or will work in combination with any hardware or software applications provided by third parties, that the operation of the software products will be

uninterrupted or error free, or that all defects in the software products will be corrected.

**Software NOT Embodied in Physical Media**. Software that is not embodied in physical media (e.g. software that is downloaded from the internet), is provided "as is" and without warranty.

**Who is covered?** This warranty extends only to the first consumer purchaser, and is not transferable.

What will Motorola Do? Motorola, at its option, will at no charge repair, replace or refund the purchase price of any Products, Accessories or Software that does not conform to this warranty. We may use functionally equivalent

reconditioned/refurbished/pre-owned or new Products, Accessories or parts. No data, software or applications added to your Product, Accessory or Software, including but not limited to personal contacts, games and ringer tones, will be reinstalled. To avoid losing such data, software and applications please create a back up prior to requesting service.

**How to Obtain Warranty Service or Other Information?** To obtain service or information, please call:

Motorola iDEN Customer Services 1-800-453-0920 or 954-723-4910

TTY-877-483-2840

Or visit us online at http://www.motorola.com/iden/support

You will receive instructions on how to ship the Products, Accessories or Software, at your expense, to a Motorola Authorized Repair Center. To obtain service, you must include: (a) a copy of your receipt, bill of sale or other comparable proof of purchase; (b) a written description of the problem; (c) the name of your service provider, if applicable; (d) the name and location of the installation facility (if applicable) and, most importantly; (e) your address and telephone number.

What Other Limitations Are There? ANY IMPLIED WARRANTIES, INCLUDING WITHOUT LIMITATION THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, SHALL BE LIMITED TO THE DURATION OF THIS LIMITED WARRANTY, OTHERWISE THE REPAIR. REPLACEMENT, OR REFUND AS PROVIDED UNDER THIS EXPRESS. LIMITED WARRANTY IS THE EXCLUSIVE REMEDY OF THE CONSUMER AND IS PROVIDED IN LIFT OF ALL OTHER WARRANTIES, EXPRESS OF IMPLIED, IN NO EVENT SHALL MOTOROLA BE LIABLE. WHETHER IN CONTRACT OR TORT (INCLUDING NEGLIGENCE) FOR DAMAGES IN EXCESS OF THE PURCHASE PRICE OF THE PRODUCT, ACCESSORY OR SOFTWARE. OR FOR ANY INDIRECT, INCIDENTAL, SPECIAL OR CONSEQUENTIAL DAMAGES OF ANY KIND, OR LOSS OF REVENUE OR PROFITS, LOSS OF BUSINESS, LOSS OF INFORMATION OR DATA, SOFTWARE OR APPLICATIONS OR OTHER FINANCIAL LOSS ARISING OUT OF OR IN CONNECTION. WITH THE ABILITY OR INABILITY TO USE THE PRODUCTS. ACCESSORIES OR SOFTWARE TO THE FULL EXTENT THESE DAMAGES MAY BE DISCLAIMED BY LAW

Some states and jurisdictions do not allow the limitation or exclusion of incidental or consequential damages, or limitation on the length of an implied warranty, so the above limitations or

exclusions may not apply to you. This warranty gives you specific legal rights, and you may also have other rights that vary from state to state or from one jurisdiction to another.

Laws in the United States and other countries preserve for Motorola certain exclusive rights for copyrighted Motorola software such as the exclusive rights to reproduce and distribute copies of the Motorola software. Motorola software may only be copied into, used in, and redistributed with, the Products associated with such Motorola software. No other use, including without limitation disassembly of such Motorola software or exercise of the exclusive rights reserved for Motorola, is permitted.

#### Patent and Software Provisions

MOTOROLA will defend, at its own expense, any suit brought against the end user purchaser to the extent that it is based on a claim that the Product or parts infringe a United States patent, and Motorola will pay those costs and damages finally awarded against the end user purchaser in any such suit which are attributable to any such claim, but such defense and payments are conditioned on the following:

a.That MOTOROLA will be notified promptly in writing by such purchaser of any notice of such claim;

b.That MOTOROLA will have sole control of the defense of such suit and all negotiations for its settlement or compromise; and

c.Should the Product or parts become, or in MOTOROLA'S opinion be likely to become, the subject of a claim of infringement of a United States patent, that such purchaser will permit MOTOROLA, at its option and expense, either to procure for such purchaser the right to continue using the Product or parts or to replace or modify the same so that it becomes non-infringing or to grant such purchaser a credit for the Product or parts as depreciated and accept its return. The depreciation will be an equal amount per year over the lifetime of the Product or parts as established by MOTOROLA.

MOTOROLA will have no liability with respect to any claim of patent infringement which is based upon the combination of the Product or parts furnished hereunder with software, apparatus or devices not furnished by MOTOROLA, nor will MOTOROLA have any liability for the use of ancillary equipment or software not furnished by MOTOROLA which is attached to or used in connection with the Product or any parts thereof.

Laws in the United States and other countries preserve for MOTOROLA certain exclusive rights for copyrighted MOTOROLA software, such as the exclusive rights to reproduce in copies and distribute copies of such MOTOROLA software. MOTOROLA software may be used in only the Product in which the software was originally embodied and such software in such Product may not be replaced, copied, distributed, modified in any way, or used to produce any derivative thereof. No other use including, without limitation, alteration, modification, reproduction, distribution, or reverse engineering of such MOTOROLA software or exercise or rights in such MOTOROLA software is permitted. No license is

granted by implication, estoppel or otherwise under MOTOROLA patent rights or copyrights.

# **Hearing Aid Compatibility**

A number of Motorola phones have been tested for hearing aid compatibility. When some wireless phones are used with certain hearing aids, users may detect a noise which can interfere with the effectiveness of the hearing aid.

Some hearing aids are more "immune" than others to this interference noise, and phones can also vary in the amount of interference noise they may generate. ANSI standard C63.19 was developed to provide a standardized means of measuring both mobile phone and hearing aids to determine usability rating categories for both.

Ratings have been developed for mobile phones to assist hearing aid users find phones that may be compatible with their hearing aid. Not all phones have been rated for compatibility with hearing aids. Phones that have been rated have a label with the rating(s) located on the box, and at <a href="https://www.motorola.com/accessibility">www.motorola.com/accessibility</a>.

These ratings are not guarantees of compatibility. Results will vary depending on the user's hearing aid and individual type and degree of hearing loss. If a hearing aid is particularly vulnerable to interference, even a phone with a higher rating may still cause unacceptable noise levels in the hearing aid Trying out the phone with your hearing aid is the best way to evaluate it for your personal needs.

"M" Rating: Phones rated M3 or M4 meet FCC requirements for hearing aid compatibility and are likely to generate less interference to hearing aids than unrated phones. (M4 is the "better" or higher of the two ratings.) On those models with an extendable antenna, this rating is determined only with the antenna extended.

"T" Rating: Phones rated T3 or T4 meet FCC requirements and are likely to be more usable with a hearing aid's telecoil ("T Switch" or "Telephone Switch") than unrated phones. (T4 is the "better" or higher of the two ratings.) On those models with a telecoil mode setting, this rating is determined only with the phone so set. For setting instructions, see "Features for the Hearing Impaired" in the section entitled "Advanced Calling Features". Note that not all hearing aids have telecoils in them.

Hearing aids may also be measured for immunity to interference from wireless phones and may have ratings similar to wireless phones. Ask your hearing health care professional for the rating of your hearing aid. Add the rating of your hearing aid and your phone to determine the estimated usability:

- Any combined rating equal to or greater than six offers excellent use.
- Any combined rating equal to five is considered normal use.

• Any combined rating equal to four is considered usable.

Thus, if you use an M3 phone with a M3 hearing aid you will have a combined rating of six for "excellent use." This methodology applies equally for T ratings.

More information about hearing aid compatibility may be found at: <a href="https://www.fcc.gov">www.fcc.gov</a>, <a href="https://www.fda.gov">www.fda.gov</a>, and <a href="https://www.fda.gov">www.fda.gov</a>,

# Information From the World Health Organization

Present scientific information does not indicate the need for any special precautions for the use of mobile phones. If you are concerned, you may want to limit your own or your children's RF

exposure by limiting the length of calls or by using hands-free devices to keep mobile phones away from your head and body.

Source: WHO Fact Sheet 193

Further information: http://www.who.int./peh-emf

# **Product Registration**

Online Product Registration:

http://direct.motorola.com/hellomoto/

Motosupport/source/registration.asp

Product registration is an important step toward enjoying your new Motorola product. Registering helps us facilitate warranty service, and permits us to contact you should your product require an update or other service. Registration is for U.S. residents only and is not required for warranty coverage.

Please retain your original dated sales receipt for your records. For warranty service of your Motorola Personal Communications Product you will need to provide a copy of your dated sales receipt to confirm warranty status.

Thank you for choosing a Motorola product.

# Wireless: The New Recyclable

Your wireless phone can be recycled. Recycling your phone reduces the amount of waste disposed in landfills and allows recycled materials to be incorporated into new products.

The Cellular Telecommunications Industry Association (CTIA) and its members encourage consumers to recycle their phones and have taken steps to promote the collection and environmentally sound recycling of end-of-life devices.

As a phone user, you have an important role in ensuring that this device is recycled properly. When it comes time to give this phone up or trade it in for a new one, please remember that the phone, the charger, and many of its accessories can be recycled. It's easy. To learn more about CTIA's Recycling Program for Used Wireless Devices, please visit us at: http://recycling.motorola.young-america.com/index.html

## California Perchlorate Label

Some mobile phones use an internal, permanent backup battery on the printed circuit board that may contain very small amounts of perchlorate. In such cases, California law requires the following label:

"Perchlorate Material - special handling may apply. See <a href="https://www.dtsc.ca.gov/hazardouswaste/perchlorate.">www.dtsc.ca.gov/hazardouswaste/perchlorate.</a>"

There is no special handling required by consumer.

#### Patent and Trademark Information

MOTOROLA, the Stylized M Logo and all other trademarks indicated as such herein are trademarks of Motorola, Inc. ® Reg. U.S. Pat. & Tm. Off. © 2007 Motorola, Inc. All rights reserved.

Microsoft and Microsoft Internet Explorer are registered trademarks of Microsoft Corporation.

T9 is a trademark owned by Tegic Communications.

T9® Text Input Patent and Trademark Information.

This product is covered by U.S. Pat. 5,818,437, U.S. Pat. 5,953,541, U.S. Pat. 6,011,554 and other patents pending.

Java and all other Java-based marks are trademarks or registered trademarks of Sun Microsystems, Inc. in the U.S. and other countries.

All other product names or services mentioned in this manual are the property of their respective trademark owners.

#### Software Copyright Notice

The Motorola products described in this manual may include copyrighted Motorola and third party software stored in semiconductor memories or other media. Laws in the United States and other countries preserve for Motorola and third party software providers certain exclusive rights for copyrighted software, such as the exclusive rights to distribute or reproduce the copyrighted software. Accordingly, any copyrighted software contained in the Motorola products may not be modified. reverse-engineered, distributed, or reproduced in any manner to the extent allowed by law. Furthermore, the purchase of the Motorola products shall not be deemed to grant either directly or by implication, estoppel, or otherwise, any license under the copyrights, patents, or patent applications of Motorola or any third party software provider, except for the normal, non-exclusive. royalty-free license to use that arises by operation of law in the sale of a product.

# **Privacy and Data Security**

Motorola understands that privacy and data security are important to everyone. Because some features of your phone may affect your privacy or data security, please follow these recommendations to enhance protection of your information:

- Monitor access: Keep your phone with you and do not leave it where others may have unmonitored access. Lock your device's keypad where this feature is available.
- Keep software up to date: If Motorola or a software/application vendor releases a patch or software fix for your phone which updates the device's security, install it as soon as possible.
- Erase before recycling: Delete personal information or data from your phone prior to disposing of it or turning it in for recycling. For step-by-step instructions on how to delete all personal information from your device, please contact your local service provider.

 Understanding AGPS: In order to comply with emergency caller location requirements of the FCC, certain Motorola phones incorporate Assisted Global Positioning System (AGPS) technology. AGPS technology also can be used in non-emergency applications to track and monitor a user's location, for example, to provide driving directions. Users who prefer not to permit such tracking and monitoring should avoid using such applications.

If you have further questions regarding how use of your phone may impact your privacy or data security, please contact Motorola at privacy@motorola.com, or contact your service provider.

# **Smart Practices While Driving**

#### Drive Safe, Call Smart SM

Check the laws and regulations on the use of phones and their accessories in the areas where you drive. Always obey them. The use of these devices may be prohibited or restricted in certain areas. Go to <a href="https://www.motorola.com/callsmart">www.motorola.com/callsmart</a> for more information

Your phone lets you communicate by voice and data, almost anywhere, anytime, wherever wireless service is available and safe conditions allow. When driving a car, driving is your first responsibility. If you choose to use your phone while driving, remember the following tips:

- Get to know your Motorola phone and its features such as speed dial and redial. If available, these features help you to place your call without taking your attention off the road.
- When available, use a hands-free device. If possible, add an additional layer of convenience to your phone with one of the many Motorola Original hands-free accessories available today.



 Position your phone within easy reach. Be able to access your phone without removing your eyes from the

- road. If you receive an incoming call at an inconvenient time, if possible, let your voice mail answer it for you.
- Let the person you are speaking with know you are driving; if necessary, suspend the call in heavy traffic or hazardous weather conditions. Rain, sleet, snow. ice, and even heavy traffic can be hazardous.
- Do not take notes or look up phone numbers while driving. Jotting down a "to do" list or going through your address book takes attention away from your primary responsibility, driving safely.
- Dial sensibly and assess the traffic; if possible, place calls when your car is not moving or before pulling into traffic. If you must make a call while moving, dial only a few numbers, check the road and your mirrors, then continue.
- Do not engage in stressful or emotional conversations that may be distracting. Make people you are talking with aware you are driving and suspend conversations that can divert your attention away from the road.
- Use your phone to call for help. Dial 911 or other local emergency number in the case of fire, traffic accident, or medical emergencies.\*\*

- Use your phone to help others in emergencies. If you see an auto accident, crime in progress, or other serious emergency where lives are in danger, call 911 or other local emergency number, as you would want others to do for you.\*\*
- Call roadside assistance or a special non-emergency wireless assistance number when necessary. If you see a broken-down vehicle posing no serious hazard, a broken traffic signal, a minor traffic accident where no one appears injured, or a vehicle you know to be stolen, call roadside assistance or other special non-emergency wireless number.\*

Wherever wireless phone service is available.

# index

A accessories 10, 78 active phone line 55 advanced calling 73 3-way calls 73 call waiting 73 alarm clock 74 do not disturb 75 quick timer 74 stop watch 74 alert	battery 15 battery indicator 55 Bluetooth 48 connect 49 send information 51 setting your phone 49 turning on or off 49  C call answer 18	photo editor 38 record video 37 self-timer 37 center key 58 center select key 10 clock 80 clock screen saver 53 contacts 75 edit/delete 75 set picture ID 75 set ringer ID 75
set 69, 70 turn off 63, 69	any key answer 74 end 18	D
answer a call 18	make 17	datebook 76
<b>B</b> backlight 80	call forward 65 caller ID 64 camera 35, 36 digital viewfinder 38	create events 76 receive events 76 setup 71 view reminders 76

dial a phone number 17 Instantl INC Mobile to dialed calls 63 Mobile calls **GPS** 77 display 54 answer 19 approximate location 77 drafts 23 international calls 67 privacy options 77 GPS enabled Ε emergency calls 66 earpiece volume 69 language 80 GPS, see GPS enabled emergency number 66 LINC features 39 н end a call 18 low battery message 55 end key 18 handsfree 78 М export regulations 89 auto answer 78 main menu 55 speaker-phone 78 F make a call 17 handsfree speaker 58 features for the vision Hearing Aid 60 memory impaired 62 text messages 24 using your phone with 60 flip 18 memory card 11, 79 Hearing Aid Compatibility 97 flip activation 74 home screen 54 manage memory 79 frequently asked questions ring tones 69 service and repairs 89 storage preferences 79 menu style 80 incoming call message 64 messages 80

modem using your handset as a 26 music player 28	Q quick notes create, edit 23	radio frequency 84 RF energy interference 85 safety information 84 safety tips 103 security 81
N 10 50	radio frequency 84	send key 17, 18 signal strength indicator 54
navigation key 10, 58	received calls 63	SIM card 11
0	recent calls 63 recycling 100	change SIM PIN 81 enable SIM PIN 81 soft keys 54 speaker 55 speed dial 67 store your number 20
one touch PTT 47 optional accessory 10, 78 optional feature 10	redial 64 ring style indicator 55 ring style, setting 69 ring tones	
P	off 70	Store your number 20
packet data 55	setting 69 vibrate 70	Т
PC applications 80 personalize 80 phone number 20 picture ID 64 power key 17	ring tones, setting 69 ringer volume 69  s text entry 55 text entry mode 56, 5 text messages 21, 26 creating 23	text entry 55 text entry mode 56, 57 text messages 21, 26
		creating 23 deleting 24, 25
	safety	drafts 23

memory 24 receiving 22 resend messages 24 sending 23 sent messages 24 setting up 21 TTY calls 80 turn on/off 17 U using 60 ٧ video 37, 38 voice commands 65 voice mail receiving 67 setting up 67 voicemail 67 voicemail message indicator

volume 69

W

wallpaper 71 WHO information 99

Y

your phone number 20

108 index

67