

Sprint Prepaid

Printable User Guide

A downloadable, printable guide
to your phone's features.



Available applications and services are subject to change at any time.

Table of Contents

Get Started	1
Your Phone at a Glance	1
Charge Your Phone Battery	1
Activation and Service	2
Register Your Phone on Sprint Prepaid	2
Activate Your Phone	3
Manage Your Account	3
Sprint Prepaid Payment Options	4
Complete the Setup Screens	4
Set Up Voicemail	6
Retrieve Data from Your Old Phone	6
Phone Basics	8
Your Phone's Layout	8
Turn Your Phone On and Off	9
Turn Your Screen On and Off	10
Adjust the Sound Volume	11
Find Your Phone Number	12
Touchscreen Navigation	12
Your Home Screen	12
Status Bar	14
Active Notifications	15
App List	16
Search	16
Google Now	17
Motorola Assist	18
Enter Text	18
Touchscreen Keyboard	19
Text Entry Settings and Dictionary	20
Tips for Editing Text	21
Voice Typing	22
Phone Calls	23
Make Phone Calls	23
Call Using the Phone Dialer	23

Call from History	24
Call from Contacts	24
Call a Number in a Text Message or Email Message	25
Call from Favorites	25
Call Emergency Numbers	25
Receive Phone Calls	26
Voicemail	27
Visual Voicemail	27
Set Up Visual Voicemail	28
Review Visual Voicemail	28
Visual Voicemail Settings	30
Change Your Main Greeting via the Voicemail Menu	31
Edit the Display Name via the Voicemail Menu	31
Phone Call Options	32
Make a 3-Way Call	33
Contacts	34
Access Contacts	34
Add a Contact	35
Save a Phone Number	35
Edit a Contact	35
Sync or Transfer Contacts	36
Call or Text Contacts	36
Make Groups	37
Accounts and Messaging	38
Gmail and Google	38
Create a Google Account	38
Sign in to Your Google Account	39
Use Gmail	39
Email	41
Add an Email Account	41
Compose and Send Email	42
Manage Your Email	43
Text and Multimedia Messaging	44
Send a Text Message	44
Send a Multimedia Message (MMS)	45
Save and Resume a Draft Message	45
New Messages Notification	46

Message Options	46
Social Networking Accounts	47
Facebook	47
Chat Using Hangouts	48
Wireless Emergency Alerts	48
Apps and Entertainment	49
Google Play Store	49
Find and Install an App	49
Create a Google Wallet Account	50
Request a Refund for a Paid App	50
Manage or Remove Apps	51
Download Apps from the Web	51
Google Maps	52
Google Play Music	54
Get Music	55
Tips and Tricks	55
Watch on Google Play	56
Google Play Games	56
Google Play Books	57
Google Play Newstand	58
FM Radio	58
YouTube	58
Web and Data	59
Wi-Fi	59
Chrome Browser	60
Voice Search on the Home Screen	63
Virtual Private Networks (VPN)	64
Prepare Your Phone for VPN Connection	64
Add a VPN Connection	64
Connect to or Disconnect from a VPN	64
Camera and Video	66
Take Photos	66
Photo Options	67
Edit, Share or Delete Photos	67
Record Videos	68
Capture Your Screen	68
View Photos and Videos	68

Edit Your Gallery Photos	69
Share Photos and Videos	70
Tools and Calendar	71
Calendar	71
Clock	72
Calculator	72
Quickoffice	73
Update Your Phone	74
Update Your Profile	74
Voice Commands	74
Google Drive	75
Bluetooth Connections	76
Turn Bluetooth On or Off	77
Connect New Devices	77
Reconnect Devices	78
Disconnect Devices	78
Rename the Phone	78
Rename a Paired Device	78
Motorola Assist	79
Connect Your Phone to Your Computer	79
Settings	81
Wireless and Network Settings	81
Airplane Mode	81
Wi-Fi Settings	82
Bluetooth Settings	82
VPN Settings	82
Call Settings	82
Voicemail Settings	82
Other Call Settings	82
Sound Settings	84
Display Settings	85
Storage Settings	86
Battery Settings	87
Battery Usage	87
Battery Capacity	87
Charging the Battery	87
Apps Settings	88

Location Settings	88
Security and Screen Lock Settings	89
Set Up Screen Lock	89
Encryption	92
Passwords	92
Device Administration	92
Credential Storage	93
Language and Input Settings	93
Language Settings	93
Keyboard and Input Method Settings	93
Voice Search	95
Text-to-speech Output	95
Mouse/Trackpad	96
Privacy Settings	96
Backup and Restore	96
Reset Your Phone	97
Account Settings	97
System Update	98
Date and Time Settings	98
Accessibility Settings	98
TalkBack	99
Caller ID for Talkback	100
Zoom	101
Touchscreen and Key Settings for Accessibility	101
Messages	101
Hearing Aids	102
TTY	102
Braille	103
Apps for Accessibility	103
About Phone	103
Copyright Information	105
Safety, Regulatory & Legal	106
Battery Use & Safety	106
Battery Charging	106
Third Party Accessories	106
Driving Precautions	107
Seizures, Blackouts & Eyestrain	107

Caution About High Volume Usage	107
Repetitive Motion	108
Children	108
Glass Parts	108
Use and Care	108
Operational Warnings	109
Potentially Explosive Areas	109
Symbol Key	109
Radio Frequency (RF) Energy	110
Regulatory Information	111
Specific Absorption Rate (FCC & IC)	111
European Union Directives Conformance Statement	111
FCC Notice to Users	112
Industry Canada Notice to Users	113
Software Notices	113
Location Services	113
Navigation	114
Privacy & Data Security	114
Disposal & Recycling	115
Hearing Aid Compatibility in the US	116
Software Copyright	117
Content Copyright	117
Open Source Software Information	117
Product Registration	118
Service & Repairs	118
How to Obtain Service or Other Information	118
Motorola Mobility LLC Limited Global Warranty	120
What does this Limited Warranty cover?	120
What is not covered?	120
My Product is defective, what should I do?	122
Index	123

Get Started

The following topics give you all the information you need to set up your Moto G™ phone and Sprint Prepaid service the first time.

Your Phone at a Glance

The following illustration outlines your phone's primary external features and buttons.



Note: Your phone may look a little different.




This product meets the applicable national or international RF exposure guidance (SAR guideline) when used normally against your head or, when worn or carried, at a distance of 1.5 cm from the body. The SAR guideline includes a considerable safety margin designed to assure the safety of all persons, regardless of age and health.

Charge Your Phone Battery

You may need to charge the phone battery to begin setting up your phone. Your phone may already be partly charged. (Your SIM is already in your phone).

Caution: Before using your phone, please read the safety, regulatory and legal information provided with your product.

1. Plug the USB connector into the charger/accessory jack on the bottom of your phone.

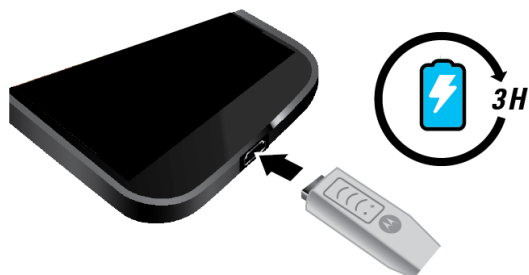

2. Plug the AC adapter into an electrical outlet. Fully charging a battery may take up to three hours. Your phone may turn on when you connect the AC adapter to the outlet—this is normal.

Note: Your phone's battery should have enough charge for the phone to turn on and find a signal, run the setup application, set up voicemail, and make a call. You should fully charge the battery as soon as possible.

Note: Don't try to remove or replace the battery yourself—doing so may damage the battery and could cause burning and injury. If your phone becomes unresponsive, try a reboot—press and hold the **Power** key until the screen goes dark, and your phone restarts.

Any time you want to see what's using up phone battery power, touch **Apps** ⋮ > ⚙️ **Settings** > **Battery**. To set automatic rules to save power, touch **Apps** ⋮ > 🏠 **Assist**.

Activation and Service

The following topics guide you through setting your phone up on Sprint Prepaid, activating your phone, and getting help and information about your Sprint Prepaid service.

Register Your Phone on Sprint Prepaid

Before using your phone, you must register it online with Sprint Prepaid.

1. **Get your numbers**

You will need the phone's MEID (DEC) number to activate your phone. The MEID (DEC) can be located on the box that the phone came in. The MEID is an 18-digit number.

2. **Get activated**

Go to sprint.com/prepaidactivate. During the activation process you can choose to get a new number or use an existing number.


3. Finalize your activation

You'll receive a message from Sprint letting you know that your phone number and account is ready to go.

Activate Your Phone

After setting up your account on sprint.com/prepaidactivate, simply turn your device on. Your device is designed to activate automatically. If you are swapping from another Sprint device to a new one, be sure to turn off the old device before swapping the serial number (MEID). Once the MEID swap is complete, turn on the new device and the programming information will be pushed to your device automatically.

- Press and hold the **Power** key to turn the phone on.

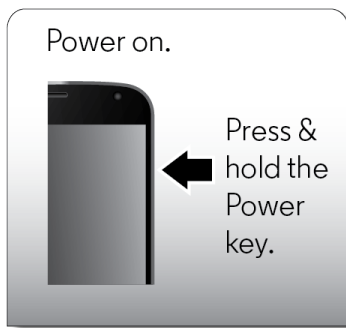

- If your phone is activated, it will turn on, search for service, and begin the setup process. See [Complete the Setup Screens](#).

You can also start the activation process manually.

- Touch **Apps**  >  **Settings** > **Activate Device**.

Note: Before the activation process can begin, the device will prompt the TalkBack voice navigation feature for visually impaired users. Touch **Next** to bypass this feature. For more information on TalkBack, see [TalkBack](#).

Manage Your Account

Access information about your account. You can:

- Add money to your account.
- Change plans.
- And more.

From Your Phone

Access account information and other self-service tools right from your phone:

- Dial *3 to make a payment.
- Dial *2 to access Sprint customer service or get answers to other questions.

From Your Computer

- Log in with your wireless phone number and account PIN at sprint.com/prepaidmysprint.

From Any Other Phone

- Sprint Prepaid Customer Care: **1-855-639-4644**.

Sprint Prepaid Payment Options

Sprint makes it easy to add money to your account. You decide exactly how and where you want to pay. Keep your account active by using your phone and adding money to your account.

Pay with Cash

Find an Authorized Sprint Retailer near you. Pick up a Sprint Pay Card or recharge for as low as \$10 at the register, where available.

Pay Anytime with a Credit/Debit Card

Dial *3 to add money from your phone or visit sprint.com/prepaidreload to do it online. Securely register your credit/debit card with Sprint for more convenient one-time payments or to set up easy Sprint Auto payments.

Set Up Worry-Free Payments with Sprint AutoPay

It's the easiest way to make sure your account stays on and active. Use a credit card, debit card or bank account—whatever's best for you.

Visit sprint.com/prepaidmysprint to get the details on all your payment options.

Complete the Setup Screens

The setup screens help you set up certain features and preferences on your phone. Once your phone has been turned on, you will see a Welcome message. You can then complete the setup process.

Note: You may be able to complete the setup screens before your phone has been activated on your account.


1. If you haven't already done so, press and hold the **Power** key to turn the phone on.
2. From the Welcome screen, select a language (if prompted) and touch **Next** to get started.

Note: On the Welcome screen, there may also be an **Accessibility** button. If you are visually impaired or hard of hearing, touch **Accessibility** to change the accessibility settings.

3. Follow the onscreen instructions to complete each section. You can skip any topic and continue to the next screen by touching **Next** or **Skip**.

Note: You do not need to sign up for a Google Account to use your phone. However, to download apps from the Google Play Store app, you must link your phone to a Google Account.

- **Got Google?** – Touch **Yes** and complete the steps to sign in to your current Google Account, or touch **No** and then touch **Get an account** (to set up a new Google Account) or **Not now** to skip Google setup. The following options may apply depending on your selection:

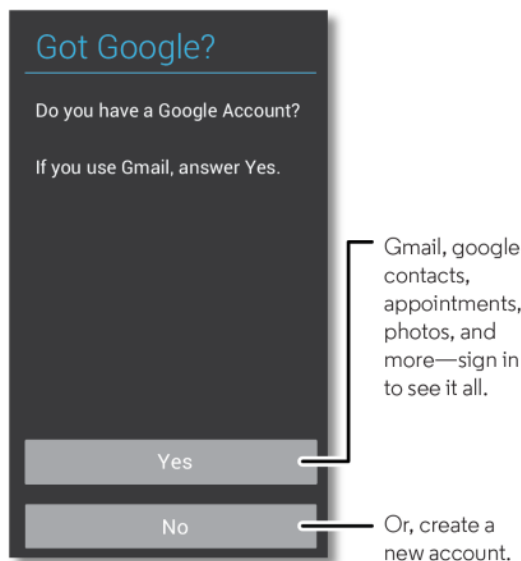

- **Sign in** – Enter your Gmail address and password and touch **Sign in** or the right arrow to sign in to your current Google Account.
 - **Get an account** – Follow the instructions to sign up for a new Google Account. There will be screens to enter your first and last names, create an email address (Gmail), create a password, enter recovery information (including a backup email address and recovery question), an option to join Google+, and an option to enable purchases from the Google Play Store app. Touch **Next** between each screen.
 - **Use Google location** – Select your Google location options and then touch **Next**.
- **Wi-Fi** – If prompted, follow the prompts to sign in to an available Wi-Fi network. For secured Wi-Fi networks, you will need to enter a password. See [Wi-Fi](#) for more details.

- **This phone belongs to...** – If applicable, enter your first and last name and touch **Next**. This information is used by the phone to personalize certain apps.
 - **Sign in** – Touch the right arrow to go to the next screen.
 - **Motorola Migrate** – You can migrate content from your previous Android phone or iPhone device to your new phone or do it later.
4. Touch **Finish**. Your setup is now complete and you can test it by making a phone call. Follow the onscreen instructions to learn about basic touch menu navigation, view tutorials, or just get started.


 


Note: During or after setup, you may be prompted to install the Sprint Prepaid Default ID. Follow the prompts to download and install the ID.

Tip: You can quickly access Google+ anytime on your phone, touch **Apps**  >  **Google+**.

Set Up Voicemail

You should set up your Sprint voicemail and personal greeting as soon as your phone is activated. Always use a password to protect against unauthorized access. Your phone automatically transfers all unanswered calls to your voicemail, even if your phone is in use or turned off.

If your screen is locked, press the **Power** key to turn on the screen and then flick the lock symbol on the screen to the right to unlock it.


1. Touch  >  (the number 1 on the dialpad) or touch **Apps**  >  **Voicemail**.
2. Follow the prompts to:
 - Create your password.
 - Record your name announcement.
 - Record your greeting.

Important: Voicemail Password – It is strongly recommended that you create a password when setting up your voicemail to protect against unauthorized access. Without a password, anyone who has access to your phone is able to access your voicemail messages.

For more information about voicemail, see [Voicemail](#) or [Visual Voicemail](#).

Retrieve Data from Your Old Phone

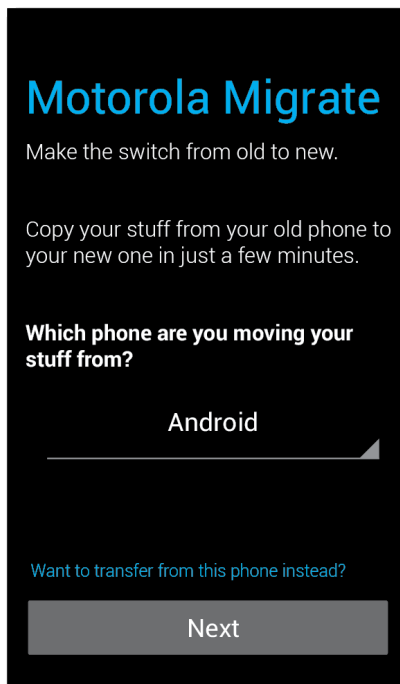

Moving your photos, music, text and call history, photos, contacts and more from your old Android™ or old iPhone phone is quick and painless. You can keep using your phone while you are migrating.





Tip: If you don't copy your content right after setting up your phone, you can always do it later.

Note: If your old phone was also Android and you used the Android Backup and Reset feature, your contacts automatically appear on your new phone. Not all music can be copied.

To move your old Android phone data to your new phone:

1. On your old Android phone, download the Motorola Migrate app on Google Play™.
2. On your new phone, touch **Apps**  >  **Motorola Migrate** > **Android**.
3. Follow the on screen prompts to complete the transfer.

To move your old iPhone data to your new phone:

1. On your new phone, touch . touch **Apps**  >  **Motorola Migrate** > **iPhone**.
2. Follow the on screen prompts to complete the transfer.



Note: Your transferred photos are placed in the Gallery, but to copy them to your PC go to the **DCIM** > **Camera** folder.

Note: No data connection is needed after the application is loaded on the old phone. The Motorola Migrate app uses Wi-Fi to transfer the data.

Tip: While you're migrating, you can keep using your phone.

Phone Basics

Your phone is packed with features that simplify your life and expand your ability to stay connected to the people and information that are important to you. The following topics will introduce the basic functions and features of your phone.

Tip: Phone Software Upgrades – Updates to your phone's software may become available from time to time. Updates are pushed to your phone over-the-air. You can also use the menu to check for and download updates. Touch **Apps**  >  **Settings** > **System Update** > **Update Motorola software** to search for and download available updates.

Your Phone's Layout

The illustrations and descriptions below outline your phone's basic layout.



 

Tip: Find answers to your questions about your new phone right on your phone.

Touch **Apps**  >  **Help**.



Tip: The menu icon  will sometimes be shown. Touch **Menu**  to show options or settings.

Key Functions

- **Headphone Jack** allows you to plug in an optional headset for convenient, hands-free conversations.
- **Front Camera Lens** takes pictures and records videos while facing the screen, and allows you to video conference.
- **Power** key lets you turn the phone on or off or turn the screen on or off, or switch your phone to silent mode, vibration mode, or airplane mode.
- **Volume** keys allow you to adjust the ringtone or media volume or adjust the voice volume during a call.
- **Micro USB/Charger Jack** allows you to connect the phone charger or a USB cable (included).
- **Microphone** transmits your voice for phone calls or records your voice or ambient sounds for voice recordings and videos.
- **Flash** (on back) helps illuminate subjects in low-light environments when the camera is focusing and capturing a picture or video.
- Photo/Video Camera (both front and back) lets you take pictures and videos.
- **Return**  or **Back**  closes an option menu or returns you to the previous screen.
- **Home**  returns you to the Home screen.
- **Recent Apps**  shows a list of the last apps you opened.


CAUTION! Inserting an accessory into the incorrect jack may damage the phone.

Turn Your Phone On and Off

The instructions below explain how to turn your phone on and off.



Turn Your Phone On

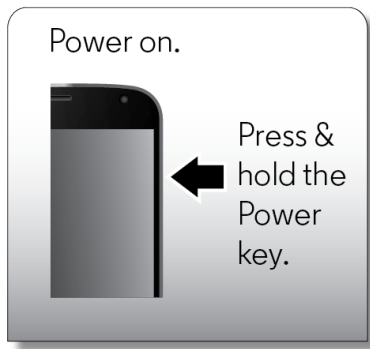- Press and hold the **Power** key.



Turn Your Phone Off

1. Press and hold the **Power** key to open the phone options menu.
2. Touch **Power off** to turn the phone off.

Note: To change Wi-Fi, Bluetooth®, Airplane mode, and other settings, at the top of the screen flick the status bar down and touch . For even more settings, touch .

Turn Your Screen On and Off

Your phone allows you to quickly turn the screen off when not in use and to turn it back on and unlock it when you need it. For information on how to set up security options to avoid unauthorized access to your phone, see [Security and Screen Lock Settings](#).

Turn the Screen Off When Not in Use

- To quickly turn the screen off, press the **Power** key. Pressing the **Power** key again will turn on your phone screen and show the lock screen.

To save battery power, the phone automatically turns off the screen after a certain period of time when you leave it idle. You will still be able to receive messages and calls while the phone's screen is off.

Note: For information on how to adjust the time before the screen turns off, see [Display Settings](#).



Note: For information on how to set up a screen lock, see [Security and Screen Lock Settings](#).

Turn the Screen On and Unlock It

1. To turn the screen on, press the **Power** key.

2. To unlock the screen, touch  and flick to the outer circle that appears.




- If you have set up a screen lock, you will be prompted to draw the pattern or enter the password or PIN. See [Set Up Screen Lock](#).
- To answer an incoming call with a locked screen, touch  and flick to the right.
- To ignore an incoming call with a locked screen, touch  and flick to the left.

Note: During a call, your screen might stay dark if the sensor just above the top of the screen is covered. Don't use covers or screen protectors (even clear ones) that cover this sensor.

Adjust the Sound Volume

Your volume keys control the sound for the current feature you have open on your phone.

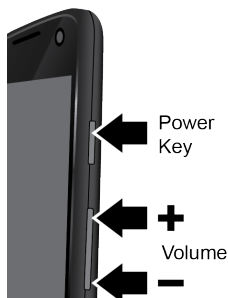

- **Ringer volume:** Press the keys in the home screen, or press them when your phone is ringing to silence it.
- **Earpiece volume:** Press the keys during a call.

- **Music/video volume:** Press the keys during a song or video.

Note: When you connect a headset a pop-up tells you it is connected.

Find Your Phone Number

You can verify your phone number.

 


- Touch **Apps**  >  **Settings** > **About phone** > **Status** > **My phone number**.

Touchscreen Navigation

Your phone's touchscreen lets you control actions through a variety of touch gestures.

- **Touch:** Choose an icon or listed option by simply touching it.
- **Touch and Hold:** Position your finger on an item until it opens or lists the options related to an item (such as **Contacts**).
- **Swipe (or drag):** Press an item and then slide it to a new location and release.
- **Flick:** Use light, quick strokes in a vertical or horizontal direction, such as when scrolling through contacts or messages lists.

Tip: To stop a quickly scrolling list, touch the screen.

- **Pinch and Spread:** "Pinch" the screen using your thumb and forefinger to zoom out or "spread" the screen to zoom in when viewing a picture or a Web page. (Move fingers inward to zoom out and outward to zoom in.)
- **Twist:** Twist a map with two fingers to rotate it, and pull two fingers down to tilt it.
- **Panels:** To add or show other panels of shortcuts and widgets, flick the home screen left or right.
- **Return:** To close an option menu or return to a previous screen, touch  or  depending on the screen.
- **Menu:** To show options or settings touch **Menu** .

Your Home Screen

The home screen is the starting point for your phone's applications, functions, and menus. You can customize your home screen by adding application icons, shortcuts, folders, widgets, and more.

Note: Touch  to return to the main home screen from any other screen.

Home Screen Overview

Your home screen extends beyond the initial screen. Swipe the screen left or right to display additional screens. Flick it down from the top to see settings and notifications.



Note: Your home screen might look a little different.

Add Items to the Home Screen

Learn how to add, move, or remove items from the home screen pages.

- **Wallpaper:** Touch and hold an empty spot on your home screen to choose your wallpaper.
- **Widgets and Shortcuts:** Touch **Apps** [Apps icon], touch and hold the widget or shortcut and drag it to one of your home screen panels. To see all your apps, shortcuts, and widgets, touch **Apps** [Apps icon] and flick the menu to the left, or touch **APPS** or **WIDGETS** at the top.

Tip: You can resize some widgets—touch and hold a widget until you feel a vibration, then release. Drag the blue circles at the edges to resize.

- **Shortcut groups:** Drag one app shortcut onto another to create a shortcut group on your home screen to organize them. Add more app shortcuts by dragging them onto the first shortcut. To name the group, touch it and enter a name below the listed shortcuts.

Move or Remove Items on the Home Screen Pages












- Touch and hold a widget or shortcut until you feel a vibration, and then drag it to another spot, left or right to another panel, or to **Remove** at the top of the screen.
- To see another panel, flick the screen left or right.




Note: To close the keyboard that opens for you to type text, touch **Back**  or touch  at the bottom of your phone.

Status Bar

The status bar at the top of the home screen provides phone and service status information. Icons on the left notify you about new messages or events. Icons on the right tell you about phone status.


Status Icons

TableText	Status
	Bluetooth® on/connected Bluetooth® off
	GPS active
	Wi-Fi on/connected Wi-Fi on/not connected
	downloading
	vibrate
	silent
	Microphone on/off
	Network strength
	Warning
	airplane mode
	sync active

TableText	Status
	alarm set
	battery (charging)
	battery (full charge)

Active Notifications


At the top of the screen, icons on the left notify you about new messages or events. If you don't know what an icon means, flick the bar down to find out.

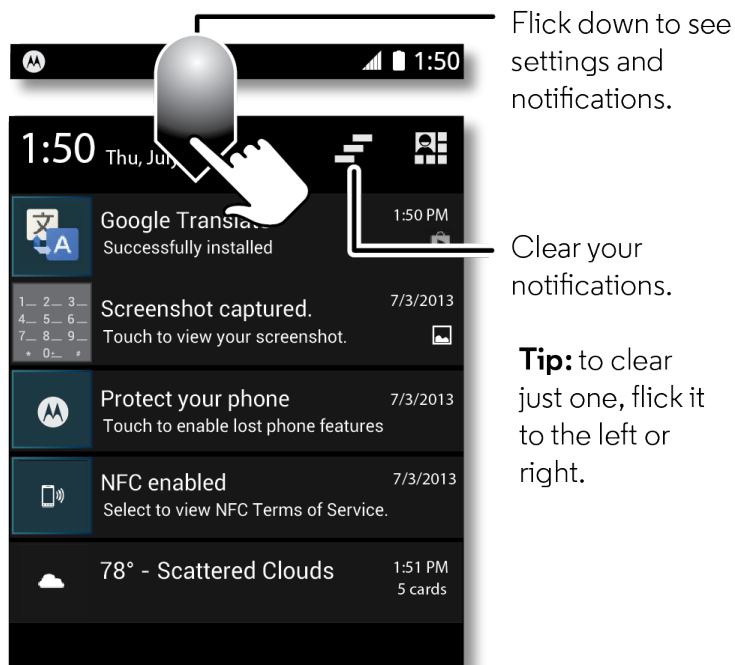

To view Active Notification alerts, touch the status bar and flick or drag down.


You can also choose to send notification text messages and other information to your computer using **Motorola Connect**.

To delete alerts individually or clear the entire list:

- Touch the status bar and flick or drag down to see your alerts.
 - To clear all the Active Notification alerts, and touch .
 - To remove individual alerts, swipe a message to the right or left.

App List

The app menu shows you all of your applications. To open it from the home screen, touch **Apps** .

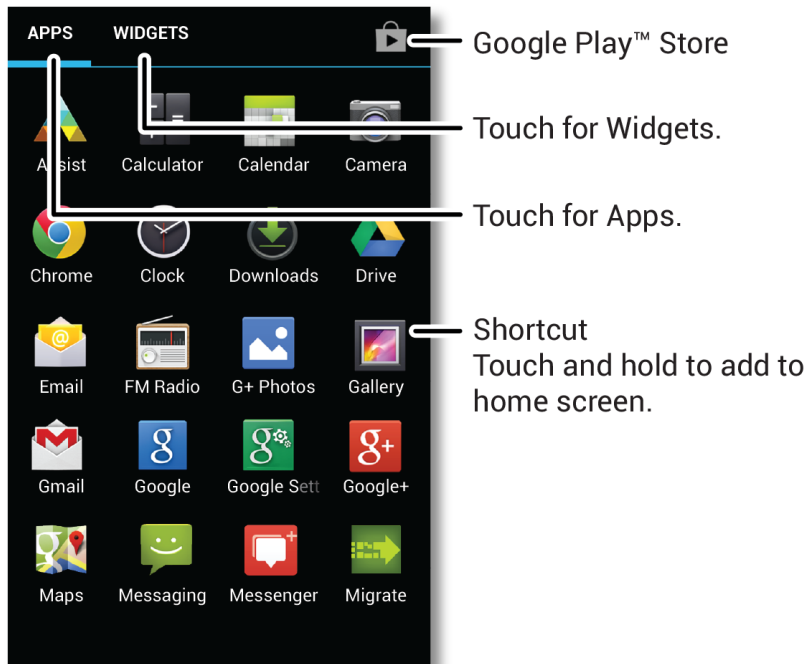

Flick left and right to see all of your apps pages. Any new apps that you download (see [Google Play Store](#)) are added to the app menu.

Tip: Flick left or touch **WIDGETS** at the top to see the widgets you can place on your Home screen.

To close the app menu, touch **Home**  or **Back** .


Recent Apps

Touch **Recent Apps**  to see the last few apps you used, and then touch the app you want.


Touch **Home**  or **Back**  to return to the home screen.

Search

You can use the search widget on the top of the Home screen to search your phone or the Web.

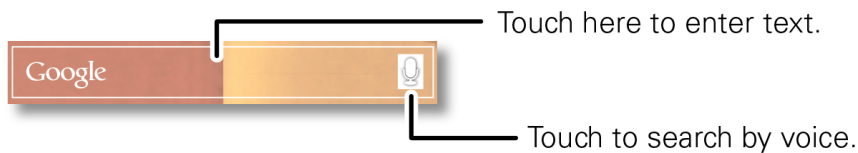


Touch the Google search widget for a text search. As you type, suggestions appear below the search field.



- To search by using the suggestion, touch the suggestion.
- To search for your text in the search field, touch  on the keyboard.

Google Now

Google Now™ uses your search history, location history, and Google™ services to provide the information you need, when you need it. The service is always working for you in the background—you don't have to ask for anything. Google automatically notifies you when new information is available.

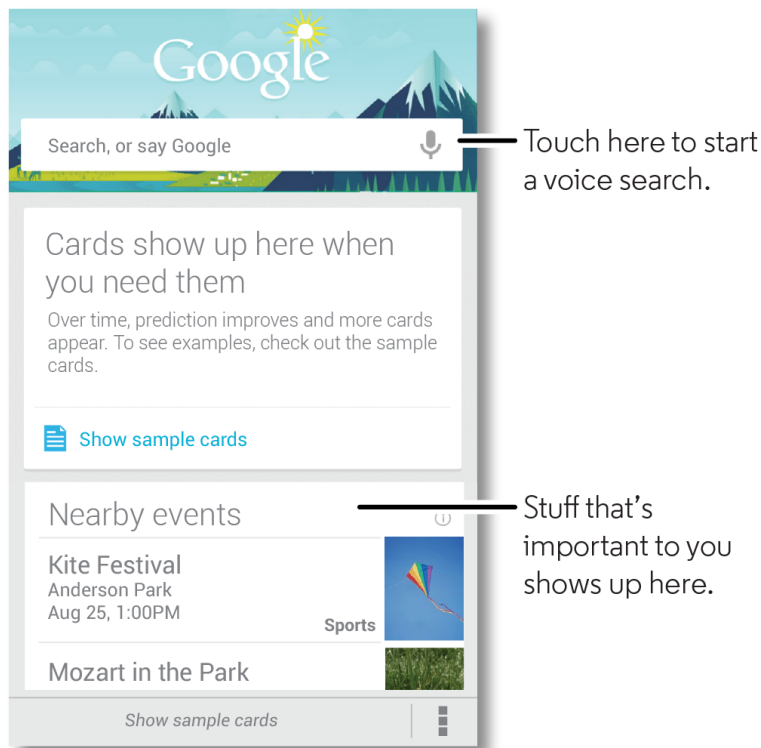

 If you set up a Google Account when you initially set up your phone, get started with Google Now:

- Touch and hold  and then drag up into the home screen to the Google Now icon .



To turn Google Now on/off or set your preferences for notifications, open Google Now, and scroll to the bottom of the screen:


- Touch **Menu**  > **Settings** > **Google Now**.

Motorola Assist

Your phone can reply to texts when you're driving, silence your ringer during meetings, and conserve your battery when it runs low with Motorola Assist.

Motorola Assist suggests actions to automate based on how you use your phone. When you see a suggestion in the status bar, flick the bar down to accept or delete it.

- To start Motorola Assist, touch **Apps**  >  **Assist**.

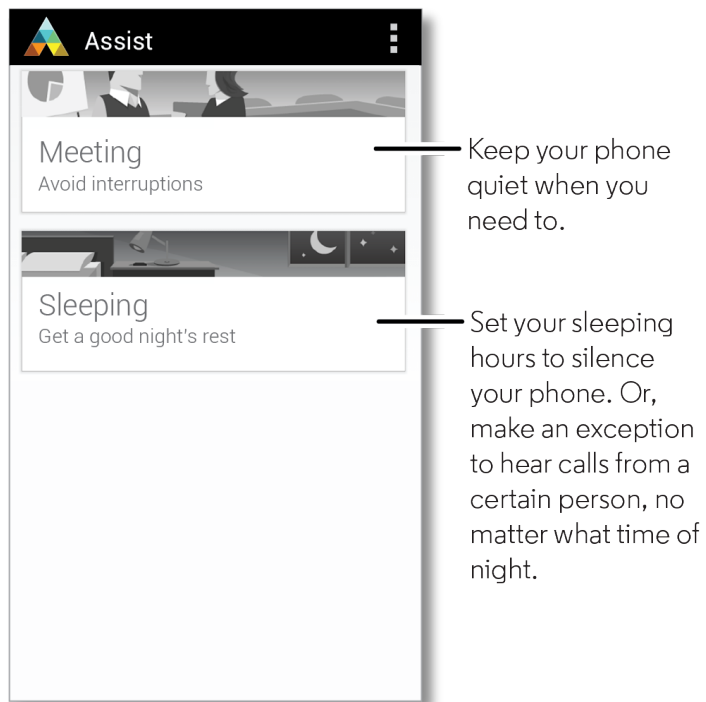

Enter Text

You use the touchscreen keyboard to enter text on your phone.


Touchscreen Keyboard

The keyboard appears automatically onscreen when you touch a text entry field, and is used in either portrait or landscape mode. Your phone gives you many options to make entering text easier, including copying, cutting, and pasting text, using voice-to-text input, continuous key (gesture) input, customizing the user dictionary, suggesting predictive text, and more.





You can use the following options to enter text on your touchscreen keypad.

- **Type:** Enter letters by touching them one at a time.
- **Gesture:** Enter a word by tracing a continuous path through the letters. When you lift your finger after the last letter of a word, a space is automatically added.

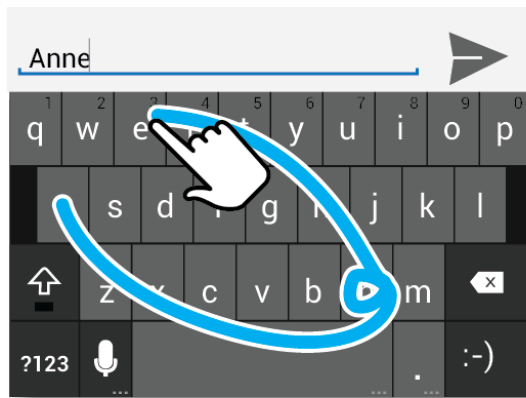

 Do you see a different keyboard? It varies by app. This one is for texting.

- **Word completion/correction:** Whether you type or use gestures to add part of a word to the text box, suggestions for the word appear below the text box in the word list. Touch a suggested word to replace your partial entry or typo.
- **Word suggestion:** After you enter a space in your message, the next word is suggested for you in the bar below the message.
- **Close the keypad:** Touch **Back**  or touch  at the bottom of your phone.

 
Note: Your touchscreen keyboard looks slightly different depending on whether you're entering a text message, email, or other text.

You can also use the Google Voice typing option to enter text using your voice (see [Voice Typing](#) for details).

Text Entry Settings and Dictionary

You can change the preferences when using your keyboard, voice entry options, and edit the dictionary of words your phone suggests.

To change the settings, touch **Apps**  >  **Settings** > **Language & input**:


- To change preferences, touch  next to the setting name or touch the setting name to see its associated options.
- To add or edit the words that your phone suggests and recognizes, touch **Personal dictionary**. You can also add words to the dictionary from your typed entries.

Tip: You can assign a shortcut for commonly used words or groups of words in the dictionary settings after you add the word or phrase to the dictionary.

Tips for Editing Text

You can cut, copy, and paste names, phone numbers, addresses, quotes, or anything else in a text box. You can cut, copy and paste within the same message or between apps.

You use the icons at the top of an app screen or select screen options that guide you when you touch the typed words in your message.

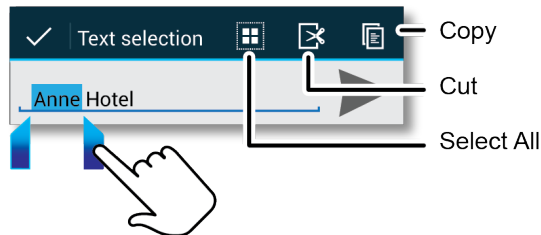




Tip: Touch and hold icons to show their description label.

To...	Instructions
Enter alternate characters	Touch and hold the letter to enter its associated number, or touch to enter numbers or to enter symbols.
Enter one capital letter	Touch and touch the letter.
Enter only capital letters	Touch twice and type. Touch again to return to typing lowercase.
Select text	Double tap a word to select it. To select more than one word drag the cursors on each side of the selected word to either end of the text. To select all words, touch .
Cut or Copy selected text	Select text and then choose Cut or Copy . You can copy text from one app to another.
Move the cursor	Touch a spot in the text you have typed to place the cursor, then drag the arrow under the cursor to move it.
Paste cut or copied text	Touch and hold location to paste, then touch Paste or .
Double letters:	When entering text using a gesture instead of typing, circle a letter to enter two of them.
Adding words to the dictionary from your text	You can add an often used word to the dictionary. As you enter a word, it appears in the word list below the text entry box. Double-tap the word in the word list to add it to your dictionary.
Delete a character	Touch Delete .

Voice Typing

You can use your voice to enter a message, email, or text in other applications. Your speech is converted to text. Add any punctuation by saying the name of the punctuation mark, such as “period”, “exclamation point”, or “comma”.

To use voice entry in a message, email or other text box:

1. Touch the text box, and then touch  on the keyboard.
2. Begin speaking clearly, saying the name of the punctuation mark where needed.
3. Touch  to pause or restart.
4. To edit the text, touch  to return to the keyboard.


Phone Calls

With the Nationwide Sprint Network and your phone's calling features, you can enjoy clear phone calls across the country.

Note: During a call, your touchscreen goes dark to avoid accidental touches. To wake it up, move it away from your face or press the **Power** key.




Make Phone Calls


There are several convenient ways to place calls from your phone. You can call using the dialpad, from the History list, or from the contact list.

Tip: You can multi-task while you're on a call. Touch **Home**  to hide the call display and look up a phone number, address, or open other apps. To reopen the call display, flick down the status bar and touch **Ongoing call**.

Call Using the Phone Dialer

The most "traditional" way to place a call is by using the phone's dialer screen.

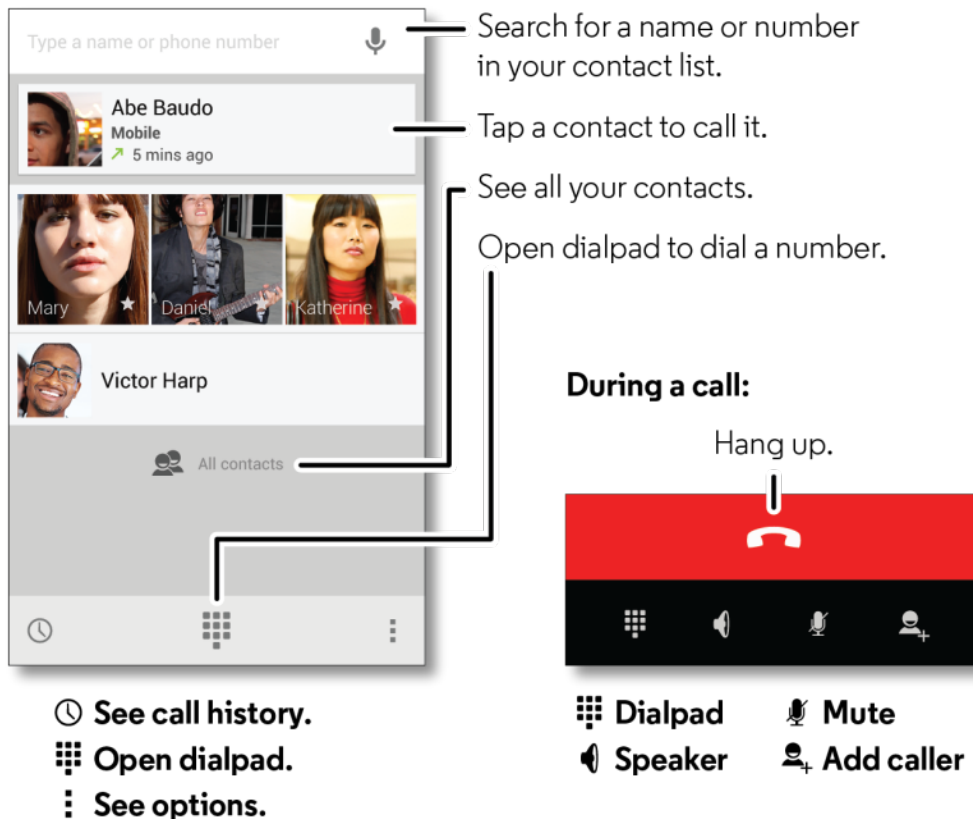


1. Touch  to open the phone app. If you don't see the dialpad, touch  to display it.
2. Touch the number keys on the dialpad to enter the phone number.
 - As you enter digits, your phone searches for contacts that match. If you see the number you want to dial, touch it to place the call.
3. Touch  to call the number.



4. To end the call, touch .

Call from History



The History list lets you quickly place calls to recent incoming, outgoing, or missed numbers.

1. Touch  to open the phone app.
2. Touch  to display the History call list.
3. To call a number in the list, touch  on the right.
 - For additional options and call details, touch the name or number.

Tip: You can clear the list by touching **Menu**  **> Clear call log.**





Call from Contacts

You can place phone calls directly to your contacts from entries in your People list.

1. Touch **Apps**  >  **People** to display the contacts list.
2. Touch a contact to see its information.
3. Touch a phone number to place a call.
 - You can also send a text message, an instant message, or an email from a contact page.
 - For additional information, see [Contacts](#).





Call a Number in a Text Message or Email Message

While viewing a text message or email message, you can place a call to a number that is in the body of the message.

1. Touch  **Messaging**,  **Gmail** or  **Email**.
2. Touch the message with the phone number, and then touch the phone number.
3. The phone dialpad opens with the phone number automatically filled in and ready to be dialed.
4. Touch  to place the call.

Call from Favorites

You can also place calls from the Favorites list.



- Touch **Apps**  >  **People** >  **Favorites**.
 - To call, text, email, or view contact information, touch the contact and touch a contact number or address.
 - To edit, share, delete, or set a ringtone for a contact, touch the contact, then touch **Menu** . You can also place the Favorite on the Home Screen for quick access.

Call Emergency Numbers

You can place calls to 9-1-1 even if the phone's screen is locked or your account is restricted.

To call the 9-1-1 emergency number when your phone's screen is locked with a screen lock or when your account is restricted:

1. Press the **Power** key to turn on the screen. For more information, see [Turn Your Screen On and Off](#).
2. Touch **Emergency call** on the screen.

3. Touch  .

Enhanced 9-1-1 (E 9-1-1) Information

This phone features an embedded Global Positioning System (GPS) chip necessary for utilizing E 9-1-1 emergency location services where available.

When you place an emergency 9-1-1 call, the GPS feature of your phone seeks information to calculate your approximate location. Depending on several variables, including availability and access to satellite signals, it may take up to 30 seconds or more to determine and report your approximate location.

Important: Always report your location to the 9-1-1 operator when placing an emergency call. Some designated emergency call takers, known as Public Safety Answering Points (PSAPs), may not be equipped to receive GPS location information from your phone. Your pre-programmed emergency number(s) may not work in all locations, and sometimes an emergency call cannot be placed due to network, environmental, or interference issues. See [Location Services](#) in the Important and Safety Information.

Receive Phone Calls

The following information lets you know how to answer incoming calls, mute the ringer on incoming calls, reject incoming calls, and more.

When you receive a phone call from a contact, the Incoming call screen appears and displays the caller ID icon, name, and phone number of the calling party. When you receive a phone call from someone who is not stored in People, only the default caller ID icon and phone number appear on the Incoming call screen.

Note: If your phone is turned off, all calls automatically go to voicemail.



Answer an Incoming Call

- To answer a call touch  and drag to .

Silence the Ringing Sound

- To silence the ringer without rejecting the call, press the **Volume** key.

Reject an Incoming Call




- To send an incoming call to your voicemail, touch  and drag to .

Answer a Call with a Text Message

You can automatically send a text message to an incoming caller.

1. To send an incoming call a text message, touch  and drag to. 

2. Touch one of the quick response messages or touch **Custom** and type a new message. For more information, see **Text message Reply** in [Other Call Settings](#).

Tip: You can edit or create your own quick response messages. Touch **Apps**  >  **Phone** > **Menu**  > **Settings** > **Quick responses**, and then touch a message to edit it.

Voicemail

You should set up your voicemail and personal greeting as soon as your phone is activated. Always use a password to protect against unauthorized access. Your phone automatically transfers all unanswered calls to your voicemail, even if your phone is in use or turned off.

Note: Your phone also supports the Visual Voicemail app. For information on setting up and using Visual Voicemail, see [Visual Voicemail](#).

Set Up Voicemail Account

 
- To set up your voicemail, see [Set Up Voicemail](#).

Important: Voicemail Password – It is strongly recommended that you create a password when setting up your voicemail to protect against unauthorized access. Without a password, anyone who has access to your phone is able to access your voicemail messages.

Tip: For information on using the Visual Voicemail app, see [Set Up Visual Voicemail](#).

Voicemail Notification

When you have a new voicemail,  shows at the top of your screen.

Note: When you are off network, you may not receive notification of new voicemail messages. It is recommended that you periodically check your voicemail by dialing 1 + area code + your wireless phone number. When your voicemail answers, touch  and enter your password.

Note: Your phone accepts messages even when it is turned off. However, your phone notifies you of new messages only when it is turned on and you are in a network service area.

Retrieve Your Voicemail Messages

When you have a new voicemail,  shows at the top of your screen.

- To hear the message, touch  **Phone** to open the dial screen, and then touch and hold .

Visual Voicemail

Visual Voicemail gives you a quick and easy way to access your voicemail. Now you can find exactly the message you are looking for without having to listen to every voicemail message first. This new




feature periodically goes out to your voicemail, and gathers the caller information from all of the current voicemails. It then populates a list with the caller name and number, along with the length of time and priority level of the voicemail message.

Set Up Visual Voicemail

Setting up Visual Voicemail follows many of the same procedures as setting up traditional voicemail. You should set up your voicemail and personal greeting as soon as your phone is activated. Your phone automatically transfers all unanswered calls to your voicemail, even if your phone is in use or turned off.

Note: To set up your traditional voicemail box, see [Set Up Voicemail](#).

To set up your Visual Voicemail:




1. Touch **Apps**  >  **Voicemail**.
2. Touch **Personalize now** and follow the instructions to:
 - Create a password (part of the standard voicemail).
 - Record your name.
 - Record your greeting.
3. When prompted to enter information, touch  to show the phone dialpad to enter numbers.
4. When finished, return to the voicemail page (see step 1).
5. Touch the **Welcome to Voicemail** message on the screen to play a brief explanation of voicemail services.

Important: Voicemail Password – It is strongly recommended that you create a password when setting up your voicemail to protect against unauthorized access. Without a password, anyone who has access to your phone is able to access your voicemail messages.




Review Visual Voicemail

Visual Voicemail lets you easily access and select which messages you want to review. You can choose to listen to all unheard messages or one at a time. Text and voice messages remain stored for later review.

To listen to all unheard messages played back in sequence, last message first:


1. Touch **Apps**  >  **Voicemail** to open the list of calls in the voicemail inbox.
2. To listen to all unheard messages, touch .

To listen to one message:



1. Touch **Apps**  >  **Voicemail** to open the list of calls in the voicemail inbox.
2. Touch  **Play** in a message picture box to hear the message.



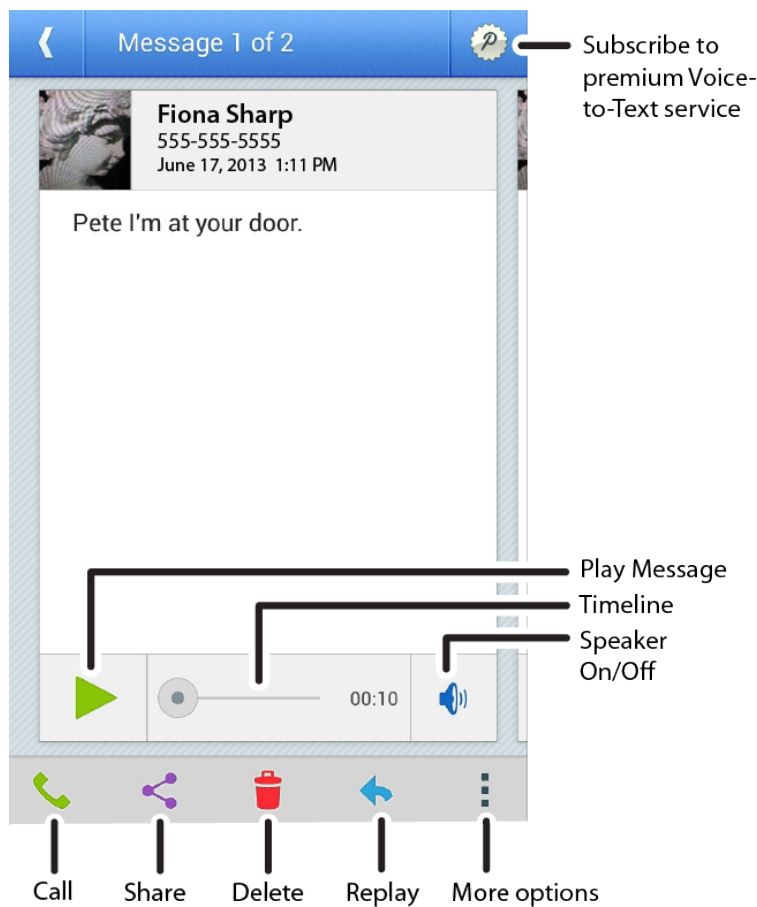



– or –

Touch a message to open it, play it, read it, and respond to it.



Features available while reviewing messages include:




- **Timeline:** Provides a visual time detail for the current message. Touch and drag the bar to move to different points in the message.
 - Touch  **Pause** to pause the playback. Touch  **Play** to resume.
- **Speaker Off/On:** Turn the speakerphone on or off during playback. If the speakerphone feature was enabled within your Voicemail settings menu, the speakerphone will always be automatically enabled during voicemail playback.

- **Call** : Call the person who left the voicemail message.
- **Share** : Share your voicemail message via Bluetooth, text message, Gmail™, or email. You can then reply to the sender or forward the message to anyone with an email account or phone number. This allows you to send a voicemail message to several recipients at the same time.
- **Delete** : Delete the current voicemail message.
- **Reply** : Reply to the message sender.
 - Touch **SMS message** or **Audio message**, compose or record your reply, and then touch  to deliver the message.
- **Menu** :
 - **Archive**: Save the message.
 - **Settings**: Set up Visual Voicemail settings.
 - **Help**: Open online help.
 - **Send feedback**: Provide feedback about the app.

Visual Voicemail Settings

The Visual Voicemail settings menu lets you access settings for notifications, pictures, greetings, and more.




Note: Settings and availability are subject to change.

1. Touch **Apps**  >  **Voicemail**.
2. Touch  > **Settings** and select from the following list to change settings:
 - **Manage subscription** to manage your Visual Voicemail subscription.
 - **Data consent agreement** to choose whether or not to send speech data to help improve the Visual Voicemail service.
 - **Auto forward to email** to forward voicemail messages to your email.
 - **Personalize voicemail** to adjust your voicemail greeting.
 - **Notifications** to determine how you are notified of new voicemails. Choose from: **Select sound** and **Vibrate**.
 - **Delete Messages** to select when messages are permanently deleted from the Trash folder.

- **Display name** to enter a name or a number that is attached to your outgoing voicemails as part of an identification string.
- **Speakerphone** to set the default your messages to be read to you or muted.
- **Themes** to choose the color scheme for your phone.
- **View quick tips tutorial** to view a tutorial about Visual Voicemail.
- **Help** to view the online help for Visual Voicemail.
- **Send feedback** to provide feedback about the app.
- **Updates** to search for an upgrade to your visual message software.
- **About Voicemail** to view information about the Visual Voicemail application, such as the version.




Change Your Main Greeting via the Voicemail Menu

Your main greeting can be changed using the Visual Voicemail system.

1. Touch **Apps**  >  **Voicemail**.
2. Touch **Menu**  > **Settings** > **Personalize voicemail**.
3. Touch **OK** to connect to the Sprint voicemail system. Follow the prompts to change your current greeting.

Edit the Display Name via the Voicemail Menu

From your Visual Voicemail menu, you can quickly change the name or number attached to your voice messages.

1. Touch **Apps**  >  **Voicemail**.
2. Touch **Menu**  > **Settings** > **Display name**.
3. Touch the existing identification field and enter a new identifying name or number (used to identify you to recipients of your voice messages).
4. Touch **OK** to save your information.

Phone Call Options

Your phone application provides many useful features and options to help you make the most of your calling experience.



Note: Using a mobile phone or accessory while driving may cause distraction and may be illegal. Always obey the laws and drive safely.

In-call Options

While you're on a call, you will see a number of on-screen options. Touch an option to select it.



During a call:



- To mute a call, touch **Mute** .
- To use the speakerphone, touch **Speaker** .

Note: Your phone includes a proximity sensor. When you hold the phone to your ear, the display goes dark to prevent accidental touches. When you move your phone away from your ear, the display lights up again.

Warning: Because of higher volume levels, do not place the phone near your ear during speakerphone use.

Make a 3-Way Call

With 3-way calling, you can talk to two people at the same time. When using this feature, the normal airtime rates will be charged for each of the two calls.

- To start a conference call, call the first number. After the call connects, touch **Add Call** . Dial the next number, or select it from contacts or favorites. When the next number answers, touch **Merge calls** .


Contacts

Your phone's Contacts application, called "People," lets you store and manage contacts from a variety of sources, including contacts you enter and save directly in your phone as well as contacts synchronized with your Google™ Account.


Access Contacts

There are a few ways to find a contact.

- Touch **Apps**  >  **People**.

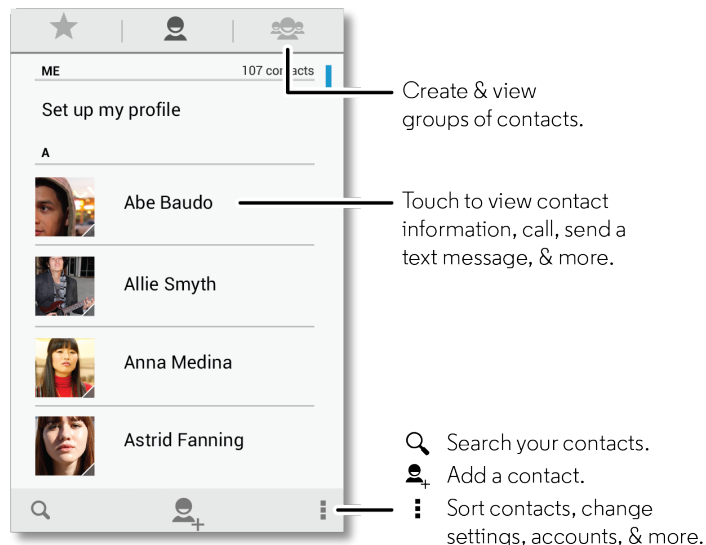






Tip: To search the list, begin typing a name.

- Touch **Menu**  to show options:
 - **Contacts to display:** Filter and sort your contact list.
 - **Import/Export:** Import or export contacts from a memory card.
 - **Accounts:** Touch **Auto-sync app data** to keep the contact information in your apps up to date or touch the individual accounts to synchronize them.
 - **Settings:** Change the way your contacts names are listed or how your contact list is sorted.

Add a Contact




You can add contacts from your phone's People application or from the dialpad. Enter details such as name, phone numbers, email addresses, mailing addresses, and more.

1. Touch **Apps**  >  **People** and touch .
2. Fill in as much or as little information as you'd like.
3. When you're finished, touch  **DONE**.


Note: To select a type (label) for a phone number, email address, or postal address (such as Mobile, Home, Work, etc.), touch  to the right of the field and touch your selection.

Save a Phone Number

You can save a phone number to Contacts directly from the phone dialpad.





1. Touch  **Phone**.
2. Enter the phone number and touch **Menu**  > **Add to contacts**.
3. To add the number to a new contact, touch **CREATE NEW CONTACT**. To add the number to an existing contact, search or scroll for the contact and touch it.
4. For an existing contact, select a number type for the new number by touching , and then touch **OK**.

– or –

For a new contact, enter the first and last name and any additional information, and then touch  **DONE**.

Edit a Contact

After you add a contact, you can edit the information, assign a caller ID picture, customize with a unique ringtone, and more.

1. Touch **Apps**  >  **People**.
2. Touch the contact you want to change, touch **Menu**  and select from the following menu items:
 - **Edit:** Touch any field you want to add or change. When you are finished, touch  **DONE**.

- **Share:** To share a contact's information with another app, touch the app and follow the app instructions, or touch **Bluetooth** to send the information to another Bluetooth enabled device. For more on Bluetooth, see [Bluetooth Connections](#).
 - **Delete:** Touch **OK** if you are sure you want to delete the contact.
 - **Set ringtone:** Touch the ringtone you want to hear when this contact calls you and touch **OK**.
 - **All calls to voicemail:** All calls from this contact are automatically sent to voicemail until you reset this option.
 - **Place on Home screen:** A contact widget is added to your Home screen so you can quickly access this contact.
3. To assign a picture to a contact, touch the picture icon at the top of the contact page and touch an option:
- **Take new photo:** Your camera opens. Touch the **touchscreen** to take the photo. Touch **Checkmark** to continue. Crop the photo (touch and drag the square to crop the picture) and touch **OK**.
 - **Select new photo from Gallery:** Choose the app to use to get the saved photo and choose from **Always** or **Just once**. Select **Camera** or **Gallery** and then touch a photo to select it. Crop the photo (touch and drag the square to crop the picture) and touch **SAVE**.

Sync or Transfer Contacts

When you change one of your contacts, your phone automatically updates your other accounts providing the Auto-sync app data option turned on. For additional information see [Edit a Contact](#).

Get all your contacts, all in one place. Here are a few helpful hints:

- **Use Gmail™:** All your Gmail contacts are automatically synced to your phone. Various computer applications for mobile phones and email accounts allow you to export your contacts as a **“.CSV”** file. You can then use Gmail™ to import the file. For details, see motorola.com/transfercontacts or log in to your Gmail account on your computer and select **“Help.”**
- **More:** Find other methods and tools to help you at motorola.com/transfercontacts.

Call or Text Contacts






You can call or text a contact directly from the People app.

1. Touch **Apps**  >  **People**.

2. Touch a contact, touch the number you want to call or touch  to send a text message.

Make Groups

You can set up groups in Contacts for Group Connect calls or for quick messaging.

1. Touch. **Apps**  >  **People** > **Groups** .
2. Touch  to start a new group.
3. Type a name for your group.
4. Type a name to search for people to add to the group. When the list of **People** entries pops up, touch a name to add that person to the group.
5. Touch  **DONE**.

Note: You may see different options based on the information you have saved for your contact.

Accounts and Messaging

With Sprint service and your phone's messaging capabilities, you have the opportunity to share information through many different channels and accounts, including Gmail™ (Google), personal and corporate email, text and multimedia messaging, social networking accounts, and Google Hangouts™.

Gmail and Google

You will need a Google Account to access several phone features such as Gmail, Google Maps™, Google Hangouts, and the Google Play™ Store apps. Before you are able to access Google applications, you must enter your account information. These applications sync between your phone and your online Google Account.

Create a Google Account

If you do not already have a Google Account, you can create one online or using your computer or phone.



Note: You can also create and sign in to your Google/Gmail account through your phone's Setup application.

Note: Although you need a Gmail account to use certain features of your phone, such as Google Play, you do not need to use Gmail as the default account for your phone.


Create a Google Account Online

1. On your computer, launch a browser and go to google.com.
2. Click **Sign in** > **SIGN UP** and follow the instructions to create your free account.
3. Check your email for a message from Google confirming your account. Respond to the email to activate your account.

Create a Google Account Using Your Phone

1. Touch **Apps**  >  **Settings** and scroll to **Accounts**.
2. Touch **Add Account** and then touch **Google** > **New**.
3. Follow the prompts to enter your name and select a Gmail address.
4. When prompted, enter and reenter your password.
5. Create a security question and answer, and then enter a secondary email address to help you recover your password if you ever lose it.





Note: When setting up a new Google Account, you will be prompted to add a secondary email address. Enter a second email address from which you currently send and receive email. This address is used to authenticate your account should you have problems or forget your password. This is recommended so you can regain access to Google services and purchases on your phone.

6. Follow the prompts to read and accept the Google terms of service.
7. After your phone connects with Google servers, select the items you want to sync with your phone, and then touch .
8. Touch **Finish setup**.

Sign in to Your Google Account

If you already have a Google Account, you can sign in to add the account to your phone.

Note: You can also create and sign in to your Google/Gmail account through your phone's Setup application.


1. Touch **Apps**  >  **Settings** and scroll to **Accounts**.
2. Touch **Google** and then touch **Existing**.
3. Enter your Gmail address and password, and then touch .
4. After your phone connects with Google servers, select the items you want to sync with your phone, and then touch .
5. Touch **Finish setup**.

Use Gmail

Once you have set up your Gmail account, you can use it to check your Gmail, reply to messages, set account options, and more.

Access Gmail

- Touch **Apps**  >  **Gmail**.

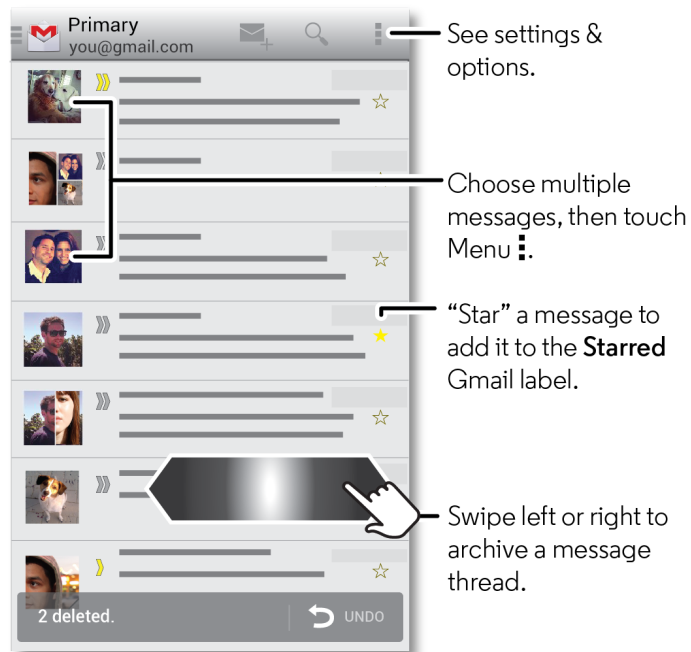







- **To view an email message:** Touch a message in the list.
- **To view more email messages:** If the inbox is full, flick up the screen to view more messages and conversations.
- **Read a new email message:** Touch the unread message or the conversation with an unread message (just-arrived items appear in bold).
- **Select messages and conversations:** To select multiple emails in the list without opening the message, touch the messages.
- **View the Inbox of your other Gmail account:** Touch **Inbox** at the top of the screen and choose an account.
- **Archive:** To quickly archive a message, flick the message to the right.
- **Refresh the inbox:** Touch Menu ⋮ > Refresh.

Send a Gmail Message

1. Touch **Apps** ⋮ > **Gmail**.
2. Touch .
3. Enter the message recipient's email address in the **To** field. As you enter email addresses, any matching addresses from your contacts list are shown. Touch a match to enter that address.
4. Enter the email subject, and then compose your email.
5. After composing your message, touch to send it.

Read and Reply to Gmail Messages

1. Touch **Apps**  >  **Gmail**.
2. Touch a message.
 - To **Reply**, touch  and enter an additional message.
 - To **Reply to all**, touch **Menu**  (located on top right on the message) > **Reply all**, and enter your message.
 - To **Forward** a message, touch **Menu**  > **Forward**, enter or select recipients, and then enter your message.
3. After composing your message, touch  to send it.



Email

Use the Email application to send and receive email from your webmail or other accounts, using POP3 or IMAP. You can also access your Corporate Sync email and other features on your phone.

Add an Email Account

You can add several types of personal email accounts, such as POP3 and IMAP accounts, to your phone.

Add an Email Account

1. Touch **Apps**  >  **Settings** and scroll to **Accounts**.
2. Touch **Add Account** and then touch **Email**.
3. Enter your email address and password.

Touch **Next**.

— or —

Touch **Manual setup** to set up your account manually.



4. Enter the account settings and touch **Done**.

Note: You may need to check with your service provider for any connection details.

Add a Corporate Sync Account







You can also add a corporate email account to your phone.

Important: Before setting up a Microsoft Exchange ActiveSync Account, contact your company's Exchange Server administrator for required account settings information.







1. Touch **Apps**  >  **Settings** and scroll to **Accounts**.
2. Touch **Add Account** and then touch **Corporate**.
3. Enter the Corporate Exchange account details and then touch **Next**.
4. Select the type of information you want to synchronize and touch **Done**.

Compose and Send Email

Compose and send email using any account you have set up on your phone. Increase your productivity by attaching files such as pictures, videos, or documents to your email messages.



 

1. Touch **Apps**  >  **Email**.
2. Touch .
3. Enter the message recipient's email address in the To field. As you enter email addresses, any matching addresses from your contacts list are shown. Touch a match to enter that address.
4. Enter the email subject, and then compose your email.
 - To add an attachment, touch **Menu**  > **Attach picture** or **Attach video**.
5. Touch  to send the message immediately, or **Menu**  > **Save draft** to send it later.

View and Reply to Email

1. Touch **Apps**  >  **Email**.
2. Touch a message.
 - To **Reply**, touch  and enter an additional message.
 - To **Reply to all**, touch **Menu**  (located on top right on the message) > **Reply all**, and enter your message.
 - To Forward a message, touch **Menu**  > **Forward**, enter or select recipients, and then enter your message.
3. After composing your message, touch  to send it.


Manage Your Email

Use the email menu options to change what you see, refresh accounts, delete items, edit settings, and more.

1. Touch **Apps**  >  **Email**.
2. Touch  in the upper right corner to view or filter your accounts:
 - Touch the name of an email account.
 - **INBOX** - Touch **Inbox** for the currently selected account.
 - **RECENT FOLDERS** - Folders you recently viewed.
 - **ALL FOLDERS** - Touch a folder name to filter your emails.
3. Touch  to return to the email Inbox.

Refresh an Email Account


Whatever your automatic synchronization settings are, you can synchronize your email messages manually at any time.

- While in the account you want to synchronize, touch **Menu**  > **Refresh**.

Archive Email Messages

- Swipe the email message to the right.


Delete Email Messages

- Touch the email message you want to delete and touch **Menu**  >  **Delete**.

Edit Email Account Settings


You can edit settings for your individual email accounts, such as email address and password, name shown and signature, frequency of retrieval, and more.

From the email inbox:

- Touch **Menu**  > **Settings** and then touch an account to change its settings, or touch **General settings** to change general email settings.

Delete an Email Account

1. Touch **Apps**  >  **Settings** > **Email**, and select the account you want to delete.


2. Touch **Menu**  > **Remove account**.
3. Touch **Remove account** again to delete it from your phone.

Text and Multimedia Messaging

With Text Messaging (SMS), you can send and receive instant text messages between your wireless phone and another messaging-ready phone.



Multimedia messages, or MMS, can contain text and pictures, recorded voice, audio or video files, picture slideshows, contact cards (vCard), or appointments (vCalendar).

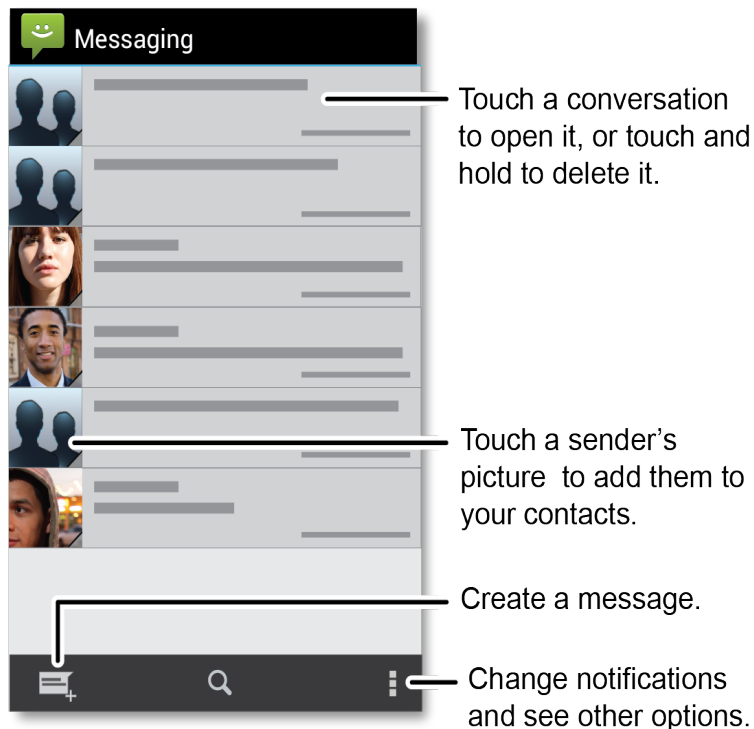See your service plan for applicable charges for messaging.



Send a Text Message

Quickly compose and send text messages on your phone.

1. Touch **Apps**  > **Messaging**.
2. Touch  to start a new message.
3. Add one or more recipients. You can:

- Enter phone numbers directly in the **To** field. If you're sending the message to several phone numbers, separate the phone numbers with a comma.
- Enter a contact from your list by beginning to type the contact's name. Touch the contact's name to enter it. You can also add contact groups as recipients.




4. Touch the **Type message** field and compose your message.

Note: If a text message goes over 160 characters, or if it is addressed to multiple recipients, it is automatically converted to an MMS message.

5. When done, touch **Send** ➤.


Send a Multimedia Message (MMS)

When you need to add a little more to a text message, you can send a multimedia message (MMS) with pictures, voice recordings, audio or video files, contact cards (vCard), or appointments (vCalendar).

1. Touch **Apps**  >  > **Messaging**.
2. Touch  to start a new message.
3. Add one or more recipients. You can:
 - Enter phone numbers directly in the **To** field. If you're sending the message to several phone numbers, separate the phone numbers with a comma.
 - Enter a contact from your list by beginning to type the contact's name. Touch the contact's name to enter it. You can also add contact groups as recipients.

Note: You can add a subject line by touching **Menu**  > **Add subject**.

4. Touch the **Type message** field and compose your message.

5. Touch  and select a media type from the list.

6. Touch **Send** ➤.

Save and Resume a Draft Message

Any message that you do not send is automatically saved as a draft unless you delete it.

To resume composing the message:

1. In the messages list, touch the message marked with **Draft** that you want to resume editing.
2. When you are finished, touch **Send** ➤.




New Messages Notification

Depending on your notification settings, the phone plays a ringtone, vibrates, or shows an icon in the status bar when you receive a new text or multimedia message. To change the notification for new text and multimedia messages, see [Text and Multimedia Messaging](#) for details.

To open the message, slide the status bar down to open the Notifications panel. Touch the new message to open and read it.

Message Options

Change your text and MMS options.

- Touch **Apps**  >  **Messaging** > **Menu**  > **Settings**.
 - **SMS Enabled:** Touch **SMS Enabled** and then touch **Default SMS app** to select an alternate messaging app (such as Google Hangouts).

Note: If you choose a default messaging app other than Messaging (for example, Google Hangouts), you will not be able to use the Messaging app unless you restore it as the default messaging app.

- **Storage**
 - **Delete old messages:** Check to delete messages as limits are reached.
 - **Text message limit:** Touch to change the maximum number of text messages to store in each conversation thread. (This does not include locked messages.)
 - **Multimedia message limit:** Touch to change maximum messages per conversation.
- **Multimedia (MMS) messages**
 - **Group messaging:** Touch to choose if MMS is used to send a single message when there are multiple recipients.
 - **Auto-retrieve:** Touch to let your phone automatically retrieve MMS messages.
 - **Roaming auto retrieve:** Touch to let your phone retrieve messages when out of your network coverage area.
- **Notifications:** Touch to have phone message notifications appear in the status bar.
- **Sound:** Touch to choose the notification ringtone from a list.
- **Vibrate:** Touch to have your phone to vibrate when it receives a message.

Social Networking Accounts




Stay in touch on the go with all your social networking accounts. Post updates on Facebook® and Twitter®, review your LinkedIn contacts, see what everyone's talking about from YouTube™, and more.


Facebook

Post updates, read what your friends are up to, upload pictures and check-ins, and more with on-the-go Facebook access.

Install the Facebook App on Your Phone



Before you use Facebook on your phone, you must download and install the app from the Google Play Store app.

1. From home, touch **Apps**  >  Play Store .
2. Touch **Search**  and search for "facebook".
3. Touch **Facebook** from the results list.
4. Touch **Install**, and then touch **Accept**.
5. When the download has completed, touch **Open**.

Note: To open the app from the home screen, touch **Apps**  >  **Facebook**.






Sign in to Your Facebook Account from Account Settings

You can sign in to your Facebook account when you launch the app, or you can sign in from the account setting menu.

1. From the home screen, touch **Apps**  > **Settings** > **Add account**.
2. Touch  **Facebook**.
3. Read the disclaimer and touch **I accept** to continue.
4. Enter your Facebook username and password and touch **Next**.
5. Touch **Done**.




Chat Using Hangouts

Hangouts is Google's instant messaging app that uses your Google account to keep you in touch with friends and family. It can also be used as your phone's default text messaging app.

- Touch **Apps**  >  **Hangouts**.
 - **Start a new hangout:** Touch  (or swipe left), touch a name in your list of friends, and then follow the prompts to invite the user to a hangout.
 - **Message via hangout:** Touch an existing hangout and enter a message in the **Send a message** field. Touch  for a video chat.
 - **Change settings:** Touch **Menu**  to see your old Hangouts, change your profile pic, other settings and more.
 - **Chat from a computer:** You can chat from a computer too. Find out more at google.com/hangouts.



Wireless Emergency Alerts

Read the following information about Wireless Emergency Alerts and your phone.

Wireless Emergency Alerts, also known as CMAS or PLAN, is a U.S. national emergency alert system. Emergency alerts can pop up to tell you about a national or local crisis. After you close an alert, you can reopen it by touching **Apps**  >  **Messaging** > **Menu**  > **Emergency alerts**.



Tip: Emergency alerts have a special sound and vibration that is two seconds long, followed by one second, then another one second.

- To choose which types of alerts you receive, touch **Apps**  >  **Settings** > **More** > **Emergency alerts**.

The U.S. and local governments send these alerts through your service provider. So you will always receive alerts for the area where you are, and you will not receive alerts if you are outside the U.S.

For more, visit ctia.org/consumer_info/safety/.

Apps and Entertainment

All your phone's features are accessible through the Apps list.

Note: Like all apps, downloaded apps will use up memory, data, battery, and processing power—some more than others. For example, a simple battery level widget will use less than a streaming music player app. After installing an app, if you're not happy with how much memory, data, battery or processing power it's using, uninstall it. You can always install it again later. If you doubt the safety of an app, don't install it.


Note: Available applications and services are subject to change at any time.

Google Play Store

The Google Play Store is the place to go to find new apps for your phone. Choose from a wide variety of free and paid apps ranging from productivity apps to games. When you find an app you want, you can easily download and install it on your phone.

Note: You must first connect to the Internet using your phone's Wi-Fi or data connection and you must set up a Google™ Account (see [Accounts and Messaging](#)) in order to buy and download apps from the Google Play Store.



- Touch **Apps**  >  **Play Store**.




Get all the fun games and cool apps you want. The Google Play Store provides access to applications created by developers worldwide, so you can find the app you want. If you need help or have questions about the Google Play Store, touch **Menu**  > **Help**.

Important: Third-party applications may access your personal information or require Sprint to disclose your customer information to the third-party application provider. To find out how a third-party application will collect, access, use, or disclose your personal information, check the application provider's policies, which can usually be found on their website. If you aren't comfortable with the third-party application's policies, don't use the application.

Find and Install an App

Search for and download apps for your phone.

1. Touch **Apps**  >  **Play Store**.
2. When you open the Google Play Store for the first time, you must agree to the terms of service. Touch **Accept** to continue and touch **Apps**.
3. To browse, flick the screen left or right to locate different types of apps:

- **CATEGORIES:** Touch a category, for example, **Games**, **Entertainment**, or **Finance**. Once you have chosen a category, flick through the pages such as **TOP PAID**, **TOP FREE**, **TOP NEW PAID**, and more.
 - **FEATURED:** Take a look through some great apps: touch the Sprint logo for Sprint Featured Apps, or check out Staff Picks, Games, or Editor's Choice when you open the Google Play Store.
 - **Search by name:** Touch  **Search** on the Google Play Store home screen, type in the name or kind of app you're looking for and then touch  **Search** to the right of the search box. Or, touch the microphone icon  to start a Voice Search.
4. Touch the app you want to install. Then, touch **Install** (if app is free) or touch the price.
 5. If an app you are downloading requires access to your data or control of functions on your phone, you'll be asked to give your permission. After selecting **Install**, the app will download. After touching the price, you may be asked to sign in to an additional Google Account. Sign in and select **Accept** to proceed. Follow the on-screen instructions. To see the download progress, open the notifications window.

After you download an app, touch **Apps**  and the icon for that app.

Note: You need a Google Wallet™ account to purchase items on Google Play. See [Create a Google Wallet Account](#) to set up an account if you do not have one.

Warning: Read the notification carefully! Be especially cautious with applications that have access to many functions or a significant amount of your data. Once you touch **OK** on this screen, you are responsible for the results of using this item on your phone.

Create a Google Wallet Account

You need a Google Wallet™ Account to purchase items from the Google Play Store.

- On your computer, go to wallet.google.com to create a Google Wallet Account.



– or –

The first time you use your phone to buy an item from the Google Play Store, you're prompted to enter your billing information to set up a Google Wallet Account.

Request a Refund for a Paid App



If you are not satisfied with an application, you can ask for a refund within 24 hours of the purchase. Your credit card is not charged and the application is uninstalled from your phone.

If you change your mind, you can install the application again, but you can't request a refund a second time.

1. Touch **Apps**  >  **Settings** > **Apps** > **Downloaded**.
2. Touch the application to uninstall.
3. Touch **Uninstall & refund**. Your application is uninstalled and the charge is cancelled.
4. Touch the reason for removing the app, and then touch **OK**.

Manage or Remove Apps

Manage or remove the apps installed on your phone.

1. Touch **Apps**  >  **Settings** > **Apps**.
2. Touch an app in the list, and then touch **Uninstall** (for apps you downloaded), **Clear cache**, or other options.





Note: To reinstall any downloaded items, touch **Apps**  >  **Play Store**.

Download Apps from the Web

You can also download apps from the Web.

Warning: Apps downloaded from unknown sources can include spyware, phishing, or viruses that affect your phone, phone performance, and personal data. For security, download apps only from trusted sites, like  **Play Store**.

Note: Downloaded apps are stored in your phone's memory.

1. To allow your phone to download apps from any Web page, touch **Apps**  >  **Settings** > **Security** > **Unknown sources** > **OK**.
2. To launch the browser, touch **Apps**  >  **Chrome**.
3. Find the app you want to download and touch the download link.

Tip: Choose your apps and updates carefully, as some may impact your phone's performance.

Note: When installing an app, make sure you read the alerts that tell you what information the app will access. If you don't want the app to have access to this information, cancel the installation.


Google Maps


Use Google Maps™ to help you figure out where you are and get you where you're going. Share this information with your friends and family on a real time basis or by messaging.

Find out where you are, or get directions to where you are going.

- Touch **Apps**   **Maps**.

Google Maps offers powerful, user-friendly mapping technology and local business information—including business locations, contact information, and driving directions.

For help or to personalize your mapping experience, touch **Menu**  **> Help**.

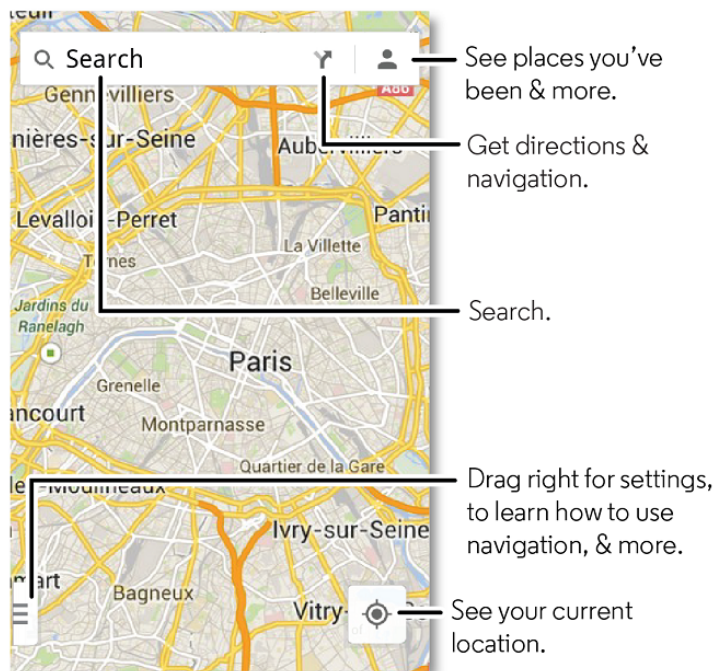

Set Your Location Sources





You can set your phone to determine your location using GPS satellite signals (highly accurate, but uses battery power) or using the mobile network (less accurate, but conserves battery power). You can also turn off access to your location. See [Location Settings](#).

Share and Report Your Location

You can fine tune the location settings allowed for family and friends and the frequency of location reporting:

- Touch **Apps**  >  **Maps** >  > **Settings**.






Find Any Location

1. Touch **Apps**  >  **Maps** > **Search** .
2. Enter text in the search box, such as an address, business, or city, and then touch  **Search**.


Tip: If it's an address you have visited before, select it from the list.


3. Touch the location you're searching for in the results list.

Get Directions and Navigation Options

1. Touch **Apps**  >  **Maps** > .
2. Enter a starting point address or touch  and say address.
3. Enter an end point address or touch  and say address.
4. Select your mode of transport (car, public transport, bicycle or walk).
 - To view your directions on a list, touch estimated time/miles.

– or –

To have your phone provide turn by turn driving directions, touch  **Start**.

5. For more options, touch  > **Settings**.
 - **More from your history:** If you have already used maps or navigation on your phone, you can choose from a list of previously searched for locations.

Select Map Mode

On a map, touch  to touch and add one or more information types to your map view:

- **Traffic** (map with traffic conditions)
- **Public transit** (public transportation routes)

Note: Options for public transportation include bus, subway, train, tram/light rail, all.


- **Bicycling** (map with bike lanes)
- **Satellite** (map with photos)

- **Google Earth** (geographical data)

Tip: To turn and tilt the map, rotate two fingers on map to turn it or drag down/up to tilt.

Google Play Music

Listen and create playlists anytime with music on your phone.

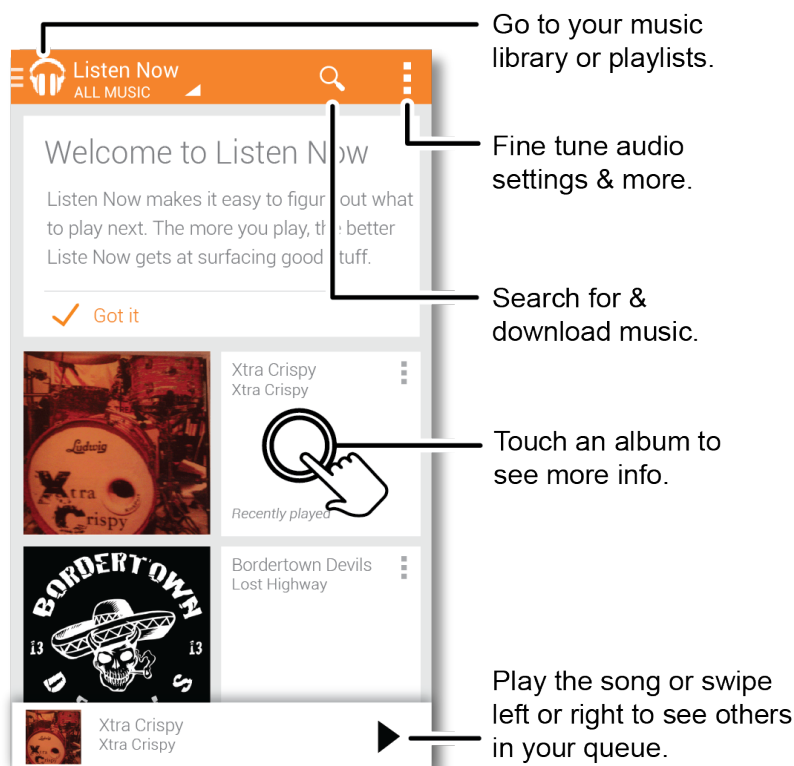

To play music on your phone:

- Touch **Apps** > **Play Music**.
 - **Go back:** When you open a song or artist list, touch the headphones icon in the top left to go back.
 - **Shuffle or repeat:** During a song, touch the empty space next to the music controls to show shuffle and repeat at the bottom. Touch once to repeat the current song list, or twice to repeat only the current song.
 - **Volume:** Press the volume keys.
 - **File types:** Your phone can play MP3, M4A, AAC, AAC+, MIDI, and WAV files.
 - **During a flight:** Press and hold the **Power** key and then touch **Airplane mode** to turn off all your network and wireless connections and listen to music during a flight.

Get Music

There are several ways to load music on your phone.

Note: Copyright – do you have the right? Always follow the rules. See [Content Copyright](#).

Transferring Music from a Windows Computer

1. Using a USB cable, connect your phone to your computer.
2. Flick down the status bar, and make sure that your phone's USB connection is set to **Media device (MTP)**.

Note: If the USB connection options do not appear, you can change the settings by touching **Apps**

 >  **Settings > Storage > Menu ⋮ > USB computer connection > Media device (MTP)**.

3. Your phone's internal storage appears on your computer as a drive. You can copy music files on to your phone's storage as you would to any other drive.
4. When finished, disconnect your phone from your computer.

Transferring Music from a Macintosh® Computer

Note: Mac OS does not natively support Media device (MTP) file transfer. To transfer media files between your phone and a Mac, you will need to use Android File Transfer. For more information on Android File Transfer see www.android.com/filetransfer.


1. Install **Android File Transfer**, and then open it.

Note: Once you have used Android File Transfer for the first time, you will no longer need to open it before connecting your phone. It will open automatically when you connect your phone to your computer.


2. Using a USB cable, connect your phone to your computer.
3. A window showing the contents of your phone appears. You can then copy music files on to your phone.
4. When finished, disconnect your phone from your computer.

Tips and Tricks

Check out these tips and tricks to make the most of your music.

- **Hide the music player:** To use another app while your music plays, touch **Home** . To return to the music player, flick down the status bar and touch the song title.

Tip: Control music playback from the Home screen by adding the **Google Play™ Music** widget.

- **Playlists:** Touch  next to a song in your library to add it to a playlist or show other options. To edit, delete and rename a playlist, touch and hold its name in the music library.
- **Get Help:** To get help or access your Google Play Music with a computer visit www.google.com/music.

Watch on Google Play

Find and rent movies to watch on your phone, tablet, or computer.


- Touch **Apps**  >  **Play Movies & TV**.

To shop, rent, or watch, go to www.google.com/play and choose “Movies & TV”.

Google Play Games

Download and play the latest fun games.

- Touch **Apps**  >  **Play Games** > **Play Games**.

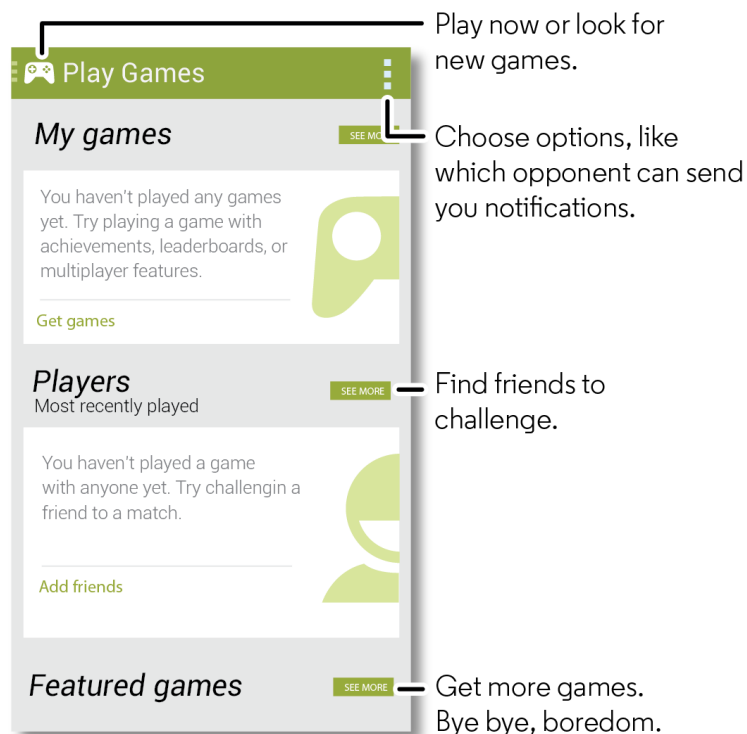


- **Challenge friends:** You can play against people in your Google+ circles. Scroll down to **Players** and choose a person or touch **Add friends**.





- **Find more friends:** Scroll down to **You may know** and choose a person or touch **SEE MORE**.

Google Play Books

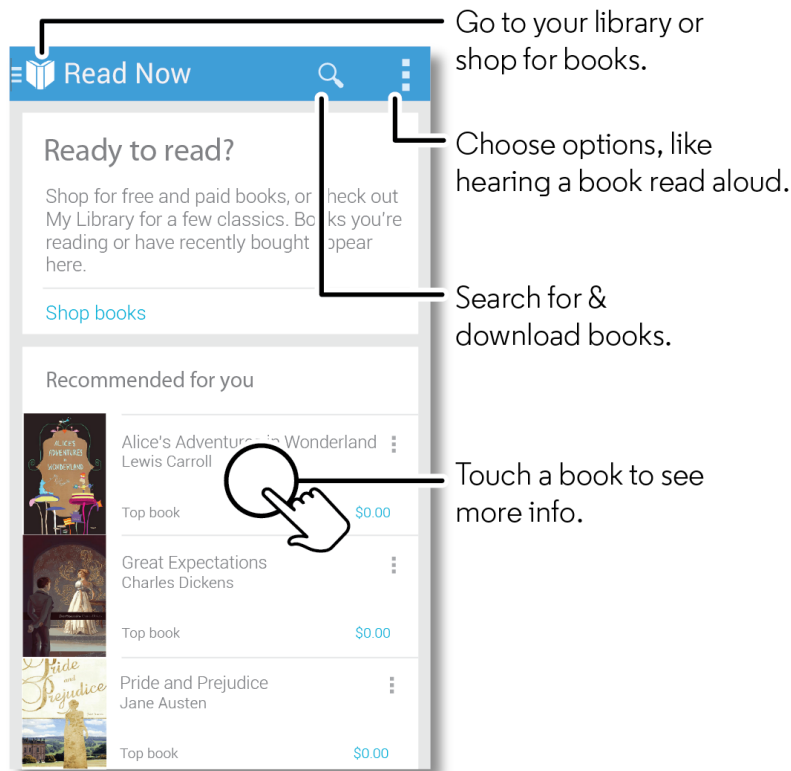Read your favorite books when and where you want.

- Touch **Apps**  >  **Play Books > Read Now**.



- **Turn pages:** While reading the book, turn the pages by flicking them.
- **Recent page:** When you open a book, it shows the page you were reading last.
- **Table of contents:** Touch a book page, then touch **Menu**  to open the table of contents or to change the view.
- **Close:** To return to your book list, touch the book title at the top.
- **Shop:** To shop for books, touch **Apps**  >  **Play Books > Shop**.
Browse by category or touch  and search for a title or author. Touch a book to show details. Then, touch the book's price to buy it (or touch **OPEN** to open a free book). After you confirm purchase, the book appears in your library.

Google Play Newstand

Read your favorite magazines and newspaper when and where you want.

- Touch **Apps**  >  **Play Newsstand**.

FM Radio

Listen to your favorite radio stations when and where you want.

- Touch **Apps**  >  **FM Radio**.

Tip: To listen to FM radio, you must plug in wired headphones. The headphones act as an antenna to pick up the radio signals.

YouTube

Share videos with YouTube™ users everywhere. You don't need a YouTube account to browse and view videos. If you set up your Google™ Account (see [Create a Google Account](#)) you will be automatically signed in to YouTube™.

- Touch **Apps**  >  **YouTube**.

Note: If you want a YouTube account, go to youtube.com. Click **Sign in**, then click **CREATE AN ACCOUNT**.

Web and Data

Your phone's data capabilities let you wirelessly access the Internet or your corporate network through a variety of connections, including Wi-Fi, Data Services (3G Network), and Virtual Private Networks (VPN).

The following topics address your phone's data connections and the built-in Web browser. Additional data-related features can be found in [Accounts and Messaging](#), [Apps and Entertainment](#), and [Tools and Calendar](#).

Wi-Fi

Wi-Fi provides wireless Internet access over distances of up to 300 feet.


The availability and range of the Wi-Fi signal depends on a number of factors, including infrastructure and other objects through which the signal passes.

Note: Your phone supports Wi-Fi modes 802.11 b, g, and n.

Turn Wi-Fi On or Off

Use the Wi-Fi settings menu to enable your phone's Wi-Fi radio and connect to an available Wi-Fi network.

- Touch **Apps**  >  **Settings** > **Wi-Fi**, and then touch **ON** or **OFF**.

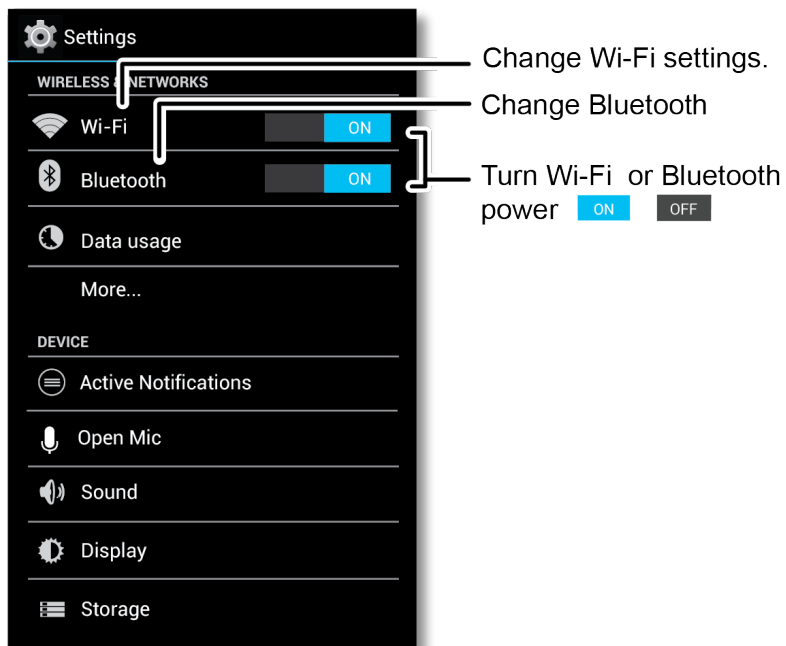



Note: To extend battery life, turn off Wi-Fi power when not in use.


Tip: You can turn off Wi-Fi notifications. Touch **Menu** ⋮ > **Advanced** and uncheck the box next to **Network notification**.

Wi-Fi Search and Connect

To find networks in your range, follow the instructions below.

1. Touch **Apps**  >  **Settings** > **Wi-Fi**.
2. Turn on Wi-Fi to scan for available networks. If Wi-Fi is already on, touch **Wi-Fi** to see the list of networks your phone finds within range.


Tip: To see your phone's MAC address or other Wi-Fi details, touch **Menu** ⋮ > **Advanced**.

3. Touch a network to connect.
4. If necessary, enter Network SSID, Security, and Wireless password, and touch **Connect**. When your phone is connected to the network, the wireless indicator  appears in the status bar.

Tip: When you are in range and Wi-Fi is on, you will automatically reconnect to available networks you've connected to before.

Chrome Browser

The Chrome browser combines minimal design with sophisticated technology to make the Web faster, safer, and easier.

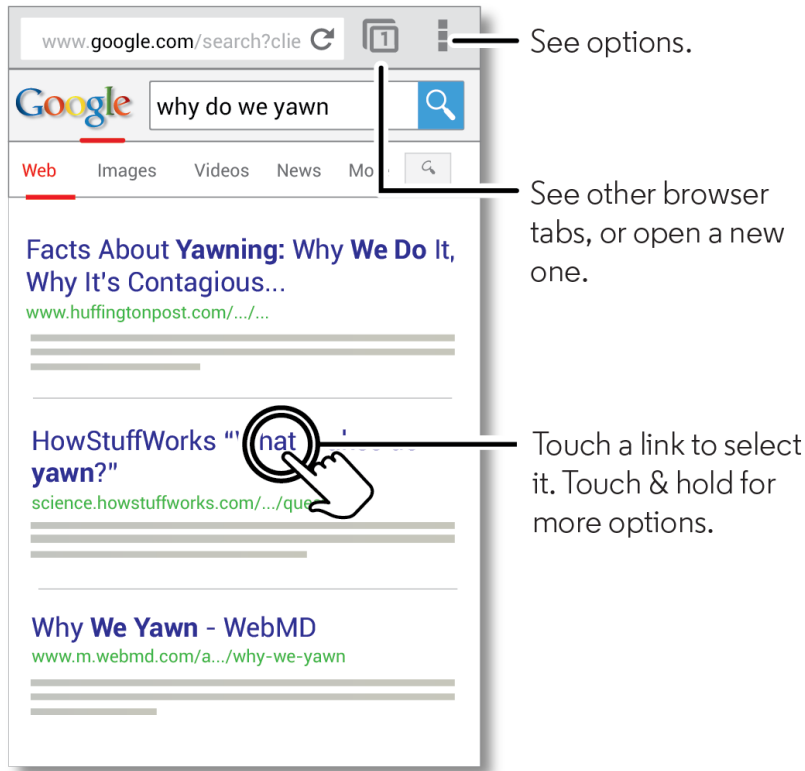





▪ Touch Apps > Chrome.

- **Go to a webpage:** Touch the address bar at the top of a page and enter a webpage address.

Tip: Touch  Search to open the search window, and then enter a webpage address in the Google text box at the top of the screen.

Note: If you can't connect, contact Sprint.

- **Create or open bookmarks:** Open the address bar (if you do not see the address bar at the top, drag the page down) then touch **Menu**  > **Bookmarks**.
- **Mobile sites:** Some websites automatically show you a “mobile” version of their page—if you want to show the standard computer versions of all websites, touch **Menu**  > **Request desktop site**.
- **Reload:** If a page doesn't load correctly, try touching .
- **Clear history:** In the browser, touch **Menu**  > **Settings** > **Content settings** > **Website settings**. Then touch the Web site you want to clear and touch **Clear stored data**.



Tip: For more about Google Chrome, visit support.google.com/chrome/.

Connect

Your phone uses the mobile phone network (over the air) or a Wi-Fi connection to automatically access the Web.

Note: Your service provider may charge to surf the Web or download data over your mobile phone network.

To use a Wi-Fi connection:

- Touch **Apps**  >  **Settings** > **Wi-Fi**, and then touch **ON**. Touch **Wi-Fi** to see a list of nearby wireless networks. Touch a network to connect.

Select Links

When you touch a link in the browser, your phone outlines it and goes to that page. If you touch and hold the link, your phone shows a list of options, such as **Open in new tab** or **Save link**.



See Browser Options

- Touch **Menu**  with the browser open to choose these options.

Options	Description
New tab	Open a new tab.
New incognito tab	Pages you view in this tab are not added to your browser or search history.
Bookmarks	See your bookmarks.
Other devices	See recent websites you explored on any devices you have related to your phone such as your computer.
History	See all websites you explored on any devices you have related to your phone organized by date.
Share	Share page by using Bluetooth, Email, and more or save the URL address to the clipboard.
Find in page	Provide a search word to locate on the current Web page.
Request desktop site	Website appears as it would on a computer instead of in a mobile format.
Settings	Open page and privacy settings.
Help	Go to a Web help guide.


Adjust Browser Settings

You can change the page settings for your browser, including default zoom level, preferred search engine, pop-up blocking, display options, and more.

1. Touch  **Chrome** > **Menu**  > **Settings**.
2. Choose from these options:
 - **[Google Account]**: Set Chrome options for your Google Account (if you are signed in to a Google Account).
 - **Search engine**: Choose your preferred search engine.
 - **Autofill forms**: Allows you to store personal and credit card information to automatically fill in this information for you on the Web.
 - **Save passwords**: Lists all the sites for which you have stored an access password.
 - **Privacy**: Manage the browser's navigation and network settings.
 - **Accessibility**: Set browser accessibility features such as comfortable text size and forced zoom. For additional Accessibility options and features, see [Accessibility Settings](#).
 - **Content settings**: Manage internet features such as blocking pop-ups, accepting cookies, and clearing cached (stored) Website data.
 - **Bandwidth management**: Choose condition to enable preloading of WebPages.
 - **About Chrome**: View Chrome app version, phone OS version, and other information.

Voice Search on the Home Screen

Use the Google Search bar on your Home screen to quickly search with voice or text.

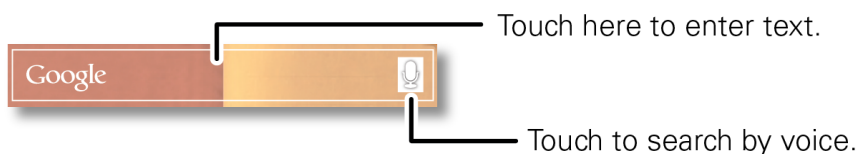

- Touch the Google Search bar and start typing search words or touch and begin speaking.

Tip: If searching with voice, the microphone turns red while it is listening to you. If it is gray, touch it again to change or speak new search words.

Note: With Google Voice search, you can also narrow search results to images, places, news, and more. After initial search, choose an option from the slider bar at the bottom of the screen.

Virtual Private Networks (VPN)

From your phone, you can add, set up, and manage virtual private networks (VPNs) that allow you to connect and access resources inside a secured local network, such as your corporate network.



 
Prepare Your Phone for VPN Connection

Depending on the type of VPN you are using at work, you may be required to enter your login credentials or install security certificates before you can connect to your company's local network. You can get this information from your network administrator.

Before you can initiate a VPN connection, your phone must first establish a Wi-Fi or data connection. For information about setting up and using these connections on your phone, see [Wi-Fi](#).

Add a VPN Connection

Use the Wireless & networks settings menu to add a VPN connection to your phone.



1. Touch **Apps**  >  **Settings** > **More...** > **VPN**.
2. Touch **Add VPN network** , and then enter the information for the VPN you want to add.
 - Information may include Name, Type, Server address, PPP encryption (MPPE), and advanced options.
 - Set up all options according to the security details you have obtained from your network administrator.
3. Touch **Save**.

The VPN is then added to the VPNs section of the VPN settings screen.

Connect to or Disconnect from a VPN

Once you have set up a VPN connection, connecting and disconnecting from the VPN is easy.

Connect to a VPN

1. Touch **Apps**  >  **Settings** > **More...** > **VPN**.
2. In the VPNs section, touch the VPN that you want to connect to.

3. When prompted, enter your login credentials, and then touch **Connect**. When you are connected, a VPN connected icon appears in the notification area.
4. Open the Web browser to access resources such as intranet sites on your corporate network. (For more information about browsing the Web, see [Chrome Browser](#).)

Disconnect from a VPN

1. Drag the title bar down to open the **Notifications** panel.
2. Touch the VPN connection to return to the VPN settings screen, and then touch the VPN connection to disconnect from it.


When your phone has disconnected from the VPN, you will see a VPN disconnected icon in the notification area of the title bar.

Camera and Video




Use your phone's camera and video camera to take and share pictures and videos.

Take Photos

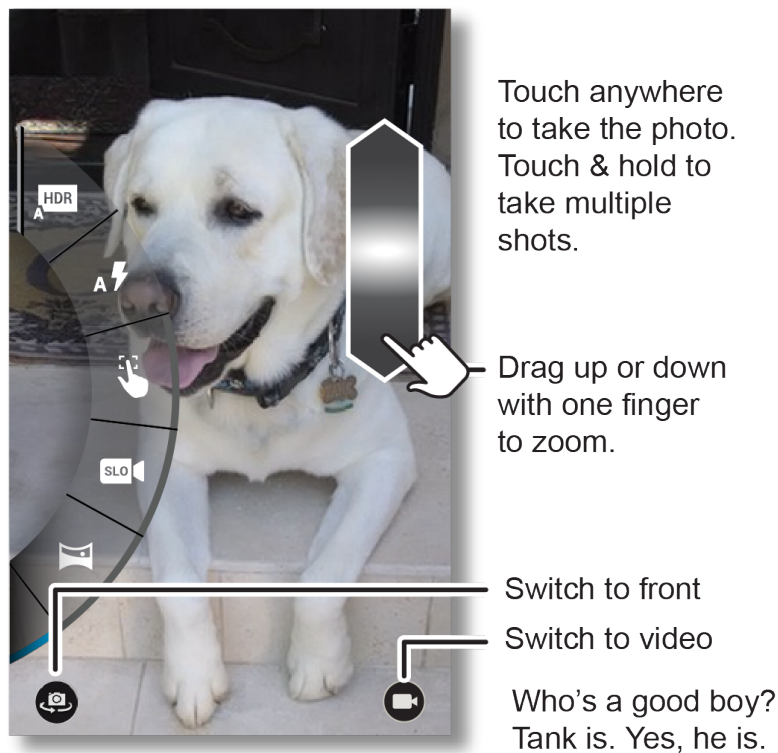Take super clear photos and share them.

 


To take a photo:

1. Touch **Apps**  >  **Camera**.
 - To zoom the photo, drag up or down with one finger.
 - For a widescreen view, turn the phone sideways.
 - Touch  to switch the camera to the front to take a picture of yourself.
2. To take a single photo, touch anywhere on the screen.

– or –

For a quick burst of multi shot photos, touch and hold the screen.









After you take a photo, the photo is stored and you are ready to snap another. If you want to quickly check your last shots from within the camera mode, swipe the camera image left to open the Gallery. Touch  **Back** to return to the camera.

Tip: To view your photos later in the Gallery, touch **Apps**  >  **Gallery**.

Photo Options







You can make adjustments to optimize your shot. Before snapping your photo, drag the screen right to see the wheel with these options:

Note: To see previous photos you've taken, drag the screen left.

-  **HDR:** Turn on HDR (High-dynamic-range) effect for better pictures in challenging lighting situations.
-  **Flash:** Set On, Off, or Auto.
-  **Touch to Focus:** Set the camera to focus on the object you touch in the screen.
-  **Slow Motion:** Take a slow motion video.
-  **Panorama:** Take a wide-angle shot. Use the on-screen guide to slowly pan while you are taking the photo.
-  **Location:** Tag your photos with a location.
-  **Widescreen:** Take widescreen photos.
-  **Shutter click:** Set shutter click On or Off.




Edit, Share or Delete Photos

Touch any open photo to wake the available options for editing, sharing, or deletion.






- To share the photo, touch **Share**  > and then touch a share method such as **Messaging**, **Bluetooth**, **Hangouts**, or **Email**. Touch **See all** to see a full list of sharing options.
- To post the photo on Google Drive, touch **Share**  > **See all** >  **Drive**.
- To delete the photo, touch .
- To edit the photo, touch .
- For additional options, touch **Menu** .

Record Videos

Record high-quality videos using your phone's video camera.


 

1. Touch **Apps**  >  **Camera** and then touch .


 - The camera starts recording right away.

2. Touch  to stop the recording.
3. Swipe left on the screen to open the Gallery:
 - To play the video, touch .
 - To send the video in a message or post it online, and then touch .
 - To delete the video, touch .
4. For additional options, touch **Menu** .

Capture Your Screen

Share a screen capture of your favorite playlist, your new high score, or a friend's contact information. If you can show it on your phone, you can share it with your friends. Your screenshot is saved in the Gallery.



- To capture your phone's screen, press and hold the **Power** and **Volume Down** keys at the same time.
 - To open the Gallery to see your screenshot, touch **Apps**  >  **Gallery** > **Screenshot**.
 - To share the screenshot, touch **Share** .


Tip: You can edit your screenshot using the photo editing tools. Touch the photo to show the tools and touch .

View Photos and Videos

Using the Gallery application, you can view photos and watch videos that you've taken with your phone's camera, downloaded, or copied onto your storage card.

You can do basic editing, such as rotating and cropping, on your saved photos. You can also make a photo your contact picture or wallpaper and share photos with your friends.


- Touch **Apps**  >  **Gallery** and touch a folder, **Camera**, or **Screenshot**.
- Touch a photo thumbnail to view, edit, and send.

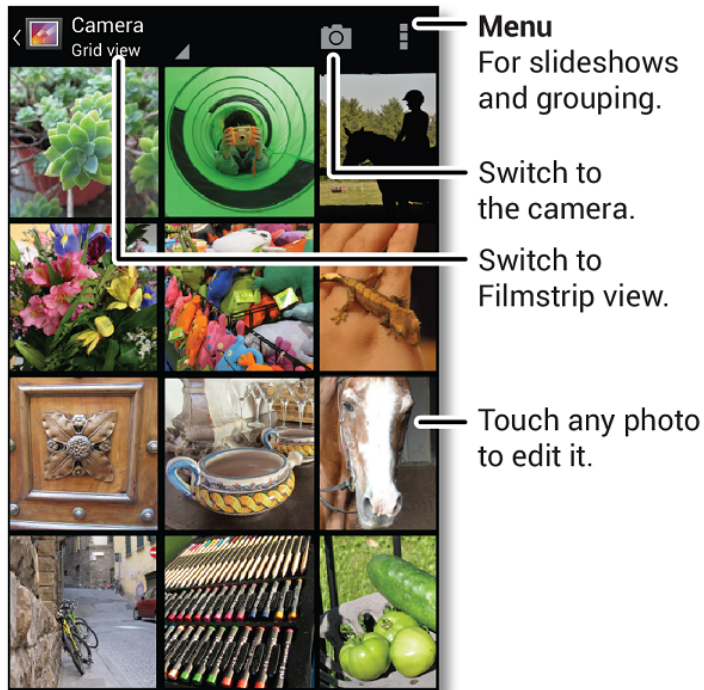

Tip: To select multiple files for sharing or deletion, open a folder, touch and hold a photo, then touch others.

Edit Your Gallery Photos




Many options are available to make changes to your photos while you view your photos.

1. While you're viewing a photo, touch the photo to see options.
2. Touch **Menu** .
3. Choose from these options:
 - **Slideshow:** Play a slideshow of your photos.
 - **Rotate left:** Rotate the photo 90 degrees to the left.
 - **Rotate right:** Rotate the photo 90 degrees to the right.

- **Crop:** Touch **None** to select from a list of preset reduction ratios or you can drag the grid to manually reset the size. This option also opens the full set of editing tools.
- **Set picture as:** Set the photo as a **Contact photo** or **Wallpaper**.
- **Details:** See the recorded information for this photo, such as Title, Time, Width, Height, Exposure, Storage path, and more.
- **Print:** Touch the name of your device (the top option) to choose a printer. Touch any other option to set up your printing.

Share Photos and Videos

Send your photos to friends, family or to your favorite social media from the Gallery. The Gallery stores all your screenshots, photos and videos.

1. Touch **Apps**  >  **Gallery**.
2. Touch a folder to open it.
3. Touch a photo or video, and then touch **Share**  and select an option.

Tip: To learn how to copy photos to/from a computer, go to [Connect Your Phone to Your Computer](#).

Tools and Calendar


Learn how to use many of your phone's productivity-enhancing features.

Calendar

Create and manage events, meetings, and appointments.



- Touch **Apps**  >  **Calendar**.

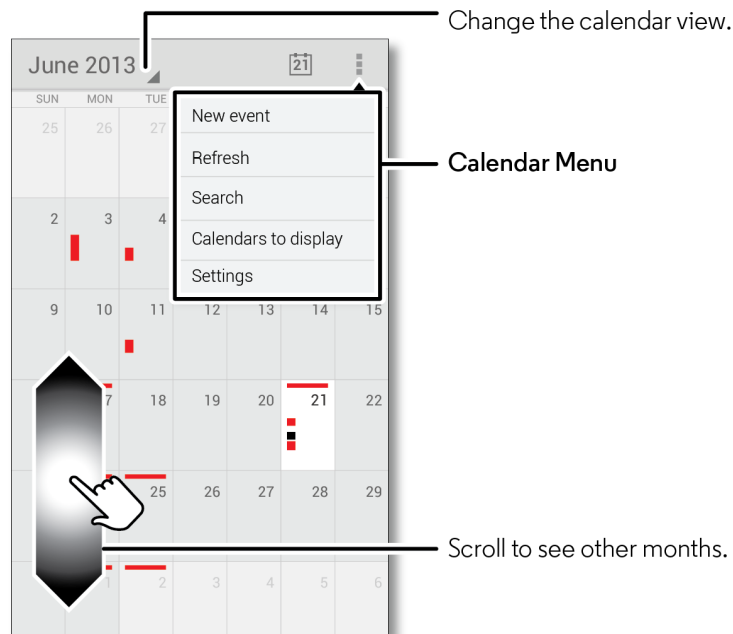Touch the date to view your calendar events by **Day**, **Week**, **Month**, or **Agenda**. When you highlight an event, more details appear.









Tip: You can set up multiple calendars by using your Gmail™ account so you can access them from your phone wherever you go.

Add Calendar Events

1. From any view, touch **Menu**  > **New event**. Enter the event name, location, start time, and other details. You can even set a reminder so you don't forget about the event. (When you set the reminder time to 0 minutes, it plays at the event start time.)
2. When you finish entering event details, touch  **DONE**.









Manage Calendar Events



- To edit an event, touch it, and then touch . If it is a recurring event, select whether to edit only this event, this and future events, or all events. When you're finished, touch  **DONE**.
- To delete an event, touch it, and then touch  and **OK**. If it is a recurring event, select whether to remove only this event, this and future events, or all events.
- To find a specific event, touch **Menu**  > **Search** and enter in the event name. Touch  and touch the event to view details.

Tip: Add a Calendar widget to your home screen. Touch **Apps**  > **WIDGETS** (at the top), then touch and hold the **Calendar** widget to add it to your home screen.

Clock

Use your phone as an alarm clock, timer, or stopwatch.

- Touch **Apps**  >  **Clock**.
 - To turn an alarm on or off, touch  **Set alarm** to see the list of existing alarms, and then touch **OFF** or **ON** next to the alarm.
 - When an alarm rings, touch  and drag to  to turn it off or drag to **zz** to snooze for ten minutes.
 - To add an alarm, touch **+** and enter alarm details. Touch **DONE** when you are finished.
 - **Settings:** To change your alarm sound, snooze delay, or other settings, touch **Menu**  > **Settings**.
 - **Timer:** For a timer, touch .
 - **Stopwatch:** For a stopwatch, touch .



Tip: To set your current date, time, time zone, and formats, touch **Apps**  >  **Settings** > **Date & time**.

Calculator

Your phone comes with a handy calculator.

- Touch **Apps**  >  **Calculator**.

Your calculator has basic and advanced views.





- To change views, touch **Menu**  > **Advanced panel/Basic panel**.
- To clear history, touch **Menu**  > **Clear history**.

Quickoffice

With the Quickoffice® app, you can edit or create documents, spreadsheets, or presentations. You can also view documents downloaded to your phone including Adobe Acrobat® PDF files.



- Touch **Apps**  >  **Quickoffice**.

Quickoffice Options

- **Recent files:** Lists all recently viewed documents you created and saved or downloaded.
-  Lists all files you downloaded or saved to the download folder.
-  **New document:** Use to create and edit documents.
-  **New spreadsheet:** Use to create and edit spreadsheets.
-  **New presentation:** Use to create and edit presentations.

Tip: For help, open your document and touch **Menu**  > **Help & feedback**.

Create a New File


- To create a new file, touch **New document**, **New spreadsheet**, or **New presentation** and begin creating your document. Save your file by touching  and then touching .

Tip: In documents or presentations, touch  to add stored images or photos from your camera.

Open a Document



- To open an existing file, touch **Open file** or touch the name of the document in **Recent Files**.

Quickoffice Tips

- Place your cursor by touching the text.
- Select text by double-tapping it.
- To choose formatting, save the file, or to choose other options, touch **Menu** .



Update Your Phone

From time to time, updates may become available for your phone.

- Using your phone:
 - You may get an automatic notification of an available update on your phone. Simply follow the instructions to download and install.
 - To manually check for updates, touch the **Apps**  >  **Settings** > **System Update** > **Update Motorola software**.
 - Your phone downloads updates over your Wi-Fi connection (if available) or mobile network. We recommend that you download updates over a Wi-Fi connection. Remember, these updates can be quite large (25MB or more) and may not be available in all countries. If the mobile network updates are not available in your country, update using a computer.
- Using your computer:
 - On your computer, go to sprint.com/support, search for your phone model, and check the “**Software**” links. If an update is available, follow the installation instructions.

Update Your Profile



This option allows you to automatically update your online user profile information. If you choose to change your user name and select a new one online, you must then update the user name on your phone.


1. Touch **Apps**  >  **Settings** > **System Update** > **Update Profile**.
2. Follow the onscreen instructions.

Note: If your data services or account syncing ever seems to go out unexpectedly, use this feature to reconnect with the network.


Voice Commands

You can control your phone by speaking to it.

Use voice actions to perform functions such as making a call dictating text in a message or email or searching the Web. To access Voice Search, touch **Apps**  >  **Voice Search**.

- To begin a voice search while on the home screen, touch  and begin speaking. Your search begins immediately.


Note: If you're writing a text message, touch  **Voice** to begin dictation mode. Your phone recognizes words you speak and enters them into your message.


- Or, touch **Voice**  in the Google Search app or widget and speak. For example, you can say one of the following commands:

To...	Say...
Map a route	"navigate to"
Send a text message	"send text"
Make a call	"call"
Send email	"send email"
Find local businesses	"map of..."
Browse the Web	"go to"
Make a voice note	"note to self"
Get directions	"directions to"

Google Drive


Use Google Drive to store all of your photos, videos, documents, and more safely in one place, all private unless you choose to share. You can use Google Drive from all your devices.

You have 50 GB of extra storage for the next two years on top of the 15 GB you already get from Google. Touch **Apps**  >  **Drive** within 30 days of activating your phone to redeem this special offer.

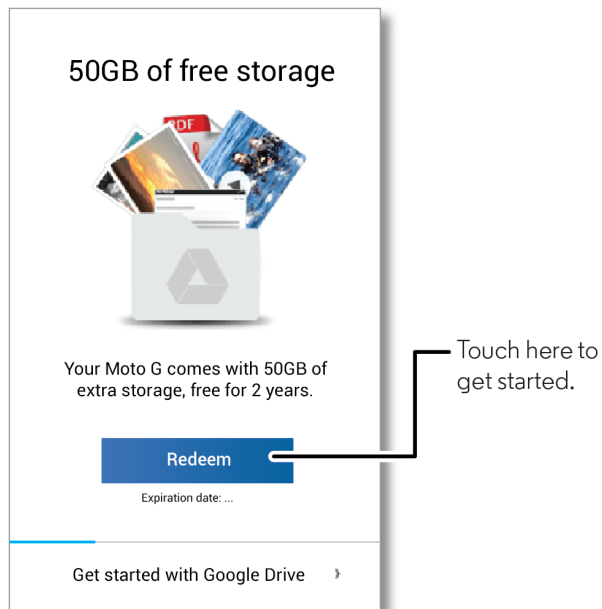

Bluetooth Connections

Bluetooth is a short-range communications technology that allows you to connect wirelessly to a number of Bluetooth devices, such as headsets and hands-free car kits, and Bluetooth-enabled handhelds, computers, printers, and wireless phones. The Bluetooth communication range is approximately 30 feet.

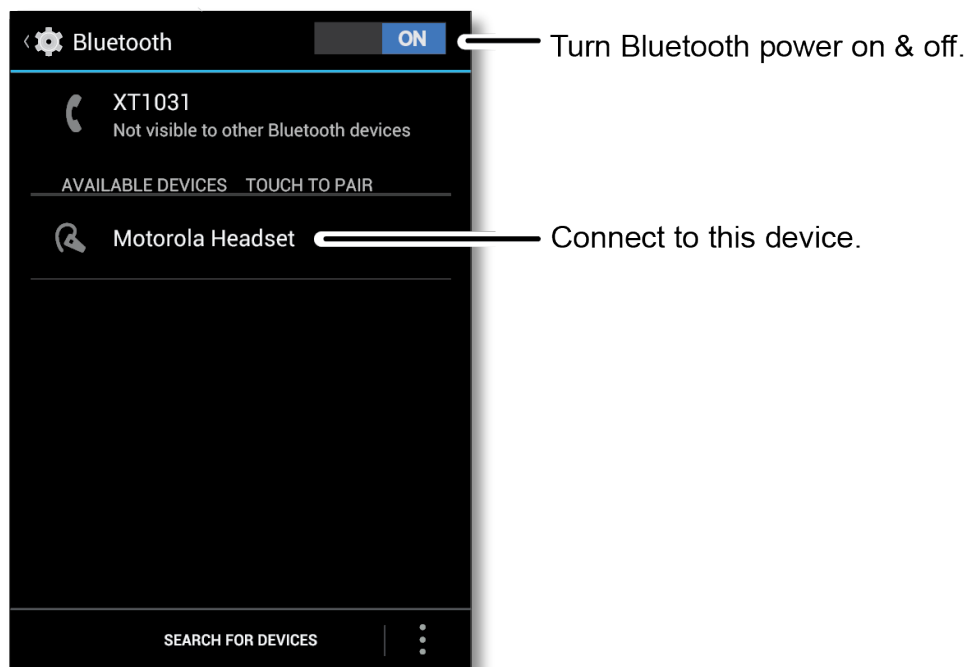

Turn Bluetooth On or Off

Use the Bluetooth settings menu to enable or disable your phone's Bluetooth capabilities.

- Touch **Apps** (⋮) > **Settings** (⚙️) > **Bluetooth** and touch **ON** or **OFF**.

Note: To extend battery life, turn Bluetooth power off when not in use.

Connect New Devices

Use the Bluetooth settings menu to connect new devices to your phone.

Note: This feature requires an optional accessory.


Standard Method

To connect with a new device, you need to pair with it. You only need to do this once for each device. To connect again, just turn on the device.

1. Make sure the device you are pairing with is in discoverable mode.

Note: Refer to the guide that came with the device for details.

2. Touch **Apps** (⋮) > **Settings** (⚙️) > **Bluetooth**.

3. Touch **ON** to turn on and scan. If Bluetooth power is already on, touch **SEARCH FOR DEVICES**.
4. Touch a device to connect.
5. If necessary, touch **OK** or **Pair**, or enter the device passkey (like 0000) to connect to the device.
When the device is connected, the Bluetooth indicator  appears in the status bar.

Note: Using a mobile device or accessory while driving may cause distraction and may be illegal. Always obey the laws and drive safely.

Reconnect Devices

Once you have paired a Bluetooth device with your phone reconnecting it is simple.

- To automatically reconnect your phone with a paired device, simply turn on the device.
- To manually reconnect your phone with a paired device, touch the device name in the Bluetooth devices list.

Disconnect Devices

When you are not using a Bluetooth device, you can disconnect it from your phone.

- To automatically disconnect your phone from a paired device, simply turn off the device.
- To manually disconnect your phone from a paired device, touch the device name in the devices list, and then touch **OK**.




Rename the Phone

You can change the device name for your phone.

- Touch **Apps**  >  **Settings** > **Bluetooth** > **Menu**  > **Rename phone**. Edit the existing name, or enter a new name, then touch **Rename**.

Rename a Paired Device

You can change the name of a device paired to your phone.

1. Touch **Apps**  >  **Settings** > **Bluetooth**.
2. Touch  next to the paired device name and then touch **Rename**.
3. Edit the existing name or enter a new name, then touch **OK**.

Motorola Assist

You can create Motorola Assist rules to automatically reply to texts when you're driving, silence your ringer during meetings, dim the screen to conserve your battery when it runs low and more. You can even set a different wallpaper for when you're at home.

Motorola Assist suggests actions to automate, based on how you use your phone. When you see a suggestion in the status bar, drag the bar down to accept or delete it.

If you are tired of doing the same tasks over and over again, let Motorola Assist do them for you.


- Touch **Apps**  >  **Assist**.

For more information, open the **Motorola Assist** app and touch **Menu** .

Connect Your Phone to Your Computer




You can connect your phone to a computer by using a USB cable.

Note: The first time you use a USB connection, your computer may indicate that drivers are being installed. Follow any prompts you see to complete the installation. This may take a few minutes.

1. Connect a Motorola micro USB data cable from your phone's micro USB port to a USB port on your computer. Your phone should show  in the status bar.

Note: Make sure to connect the phone to a high power USB port. Typically, these are located directly on your computer.

2. On your phone, flick down the status bar and touch the USB notification to see the USB connection options.

Note: If the USB connection options do not appear, you can change the settings by touching **Apps**  >  **Settings** > **Storage** > **Menu**  and then touch **USB computer connection** > **Media device (MTP)**.

3. Touch an option:

- **Media device (MTP):** Transfer media files between your phone and computer.

Note: To transfer media files between your phone and a Mac, you will need to use Android™ File Transfer. For more information on Android File Transfer see android.com/filetransfer.

- **Camera (PTP):** Transfer photos using camera software, and transfer any files that do not support MTP.

Tip: You can use Google Drive to upload files to the Web so you can access them from a computer or other Android devices. See [Google Drive](#).


Settings


The following topics provide an overview of items you can change using your phone's Settings menus.

Note: Your phone's settings menus may differ.

Wireless and Network Settings

This group of settings lets you control your phone's wireless network settings, Wi-Fi settings, Bluetooth, and more.

- To quickly see frequently viewed settings, swipe down the top of your screen to open your Notifications and touch .

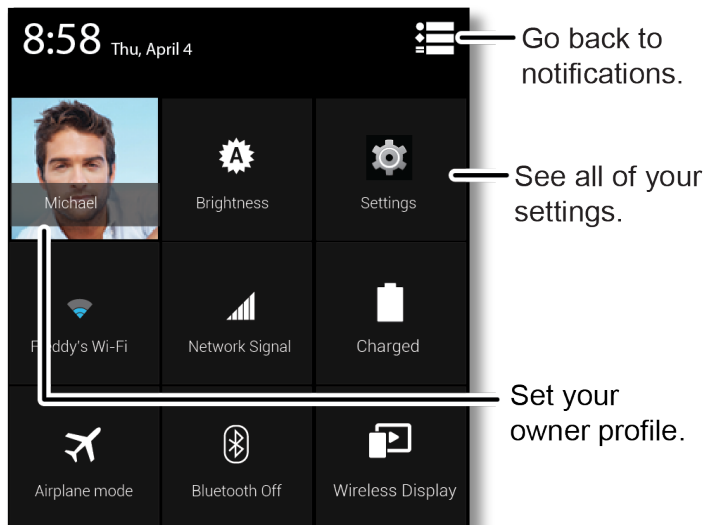

Airplane Mode

Airplane Mode turns off all your wireless connections and allows you to use many of your phone's features when you are in an airplane or in any other area where calls and data are prohibited. When you set your phone to Airplane Mode, it cannot send or receive any calls or access online information.

- Press and hold the **Power** key and then touch **Airplane mode**.

Wi-Fi Settings

Your phone lets you take advantage of Wi-Fi connections. For details on your phone's Wi-Fi features and settings, see [Wi-Fi](#).

- Touch **Apps**  >  **Settings** > **Wi-Fi**.

Bluetooth Settings

Your phone's Bluetooth capabilities let you use wireless headsets, send and receive pictures and files, and more. For details on your phone's Bluetooth settings, see [Bluetooth Connections](#).

- Touch **Apps**  >  **Settings** > **Bluetooth**.

VPN Settings

You can set up a Virtual Private Network (VPN). Select either basic or advanced options.

- Touch **Apps**  >  **Settings** > **More...** > **VPN**.

Call Settings

Your phone's Call Settings menu lets you set up your voicemail options and a number of other settings.

Voicemail Settings

If you need to adjust your voicemail provider or access settings, use the Voicemail settings menu.

- Touch **Apps**  >  **Voicemail** > **Menu**  > **Settings**.

For more about voicemail, see [Voicemail](#) or [Visual Voicemail](#).

Other Call Settings

Options under the Call Settings menu include Voicemail, Dial Pad touch tones, Quick responses (editable text to send to callers), Auto-retry, Hearing Aids, TTY mode, DTMF tones, and Voice Privacy.

- Touch  **Phone > Menu**  **> Settings** to access your call settings.

TTY Mode

TTY (also known as a TDD or Text Telephone) is a telecommunications device that allows people who are deaf, hard of hearing, or who have speech or language disabilities to communicate by telephone.

To turn TTY Mode on or off:

- Touch  **Phone > Menu**  **> Settings > TTY mode.**

Your phone is compatible with select TTY devices. Please check with the manufacturer of your TTY device to ensure that it is compatible with digital cell phones. Your phone and TTY device will connect via a special cable that plugs into your phone's headset jack. If this cable was not provided with your TTY device, contact your TTY device manufacturer to purchase the connector cable.

Note: If you need to charge your phone at the same time, make sure to first plug in your TTY device so that your phone can properly connect to it. Then plug in the charger.

Warning: 9-1-1 Emergency Calling:

It is recommended that TTY users make emergency calls by other means, including Telecommunications Relay Services (TRS), analog cellular, and landline communications. Wireless TTY calls to 9-1-1 may be corrupted when received by public safety answering points (PSAPs), rendering some communications unintelligible. The problem encountered appears related to software used by PSAPs. This matter has been brought to the attention of the FCC, and the wireless industry and the PSAP community are currently working to resolve this.





Hearing Aid Settings

If you wear a hearing aid, select this setting for compatibility.

- Touch  **Phone > Menu**  **> Settings > Hearing Aids.**

Text Message Reply

When you ignore an incoming call, your phone can automatically send a text message to the caller.

- To send a text message to an ignored call, slide  up to  and touch a stored text message from the list or create a new one.
- To edit the outgoing messages, touch  **Phone > Menu**  **> Settings > Quick responses,** and touch a quick response to edit it.

Voice Privacy

Turn on enhanced privacy mode to make it harder for devices to pick up your frequency.


- Touch  **Phone > Menu**  **> Settings > Voice privacy.**

Sound Settings

Control your phone's audio, from ringtones and alerts to touch tones and notifications.

Volume

- To set volume, just press the volume buttons in the home screen (ringtone volume), during a call (earpiece volume), or while playing music or a video (media volume).

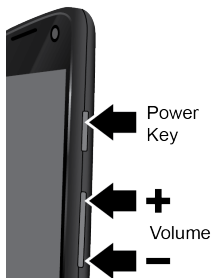

Phone Ringtone

- To set a ringtone for incoming phone calls, or silence the ringtone, touch **Apps** ⋮ > ⚙️ **Settings** > **Sound** > **Phone ringtone**. Select a ringtone, and touch **OK**.

Vibrate When Ringing

- To add a vibration to Silent mode, touch **Apps** ⋮ > ⚙️ **Settings** > **Sound** > **Vibrate when ringing**.

System Settings

The System settings menu lets you select whether you hear tones when touching numbers on the dialpad, selecting on-screen options, and more.

- Touch **Apps** ⋮ > ⚙️ **Settings** > **Sound**.
 - **Default notification sound:** Select from various tones to play when you get a notification, or select **None**.
 - **Dial pad touch tones:** Play tones when using the dialpad.
 - **Touch sounds:** Play sounds when making an on-screen selection.
 - **Screen lock sound:** Play sounds when locking or unlocking the screen.
 - **Vibrate on touch:** Vibrate when touching keys and during certain other instances.
 - **Emergency tone:** Set to Off, Alert or Vibrate.



Display Settings

Adjusting your phone's display settings not only helps you see what you want, it can also help increase battery life. To set display brightness, see the following:



Brightness

- To set display brightness, touch **Apps**  >  **Settings** > **Display** > **Brightness**. Slide the dimmer switch setting left or right, or touch **Auto** to have the phone automatically set the brightness.

Auto-Rotate Screen

- To set the screen to rotate automatically when you rotate the phone from portrait to landscape mode, touch **Apps**  >  **Settings** > **Display** > **Auto-rotate screen**.

Display Timeout Delay



- To set the number of minutes before your screen goes dark, touch **Apps**  >  **Settings** > **Display** > **Sleep** and select the number of minutes.

Note: To save battery charge, make your phone go to sleep quicker.

Font Size

- To set the font size, touch **Apps**  >  **Settings** > **Display** > **Font size**.

Daydream

- To set up a screen saver when docked or charging, touch **Apps**  >  **Settings** > **Display** > **Daydream**.

Wallpaper Settings

To apply a new wallpaper:

1. Touch and hold an empty spot on your home screen.

— or —

Touch **Apps**  >  **Settings** > **Display** > **Wallpaper**.

2. Touch **Gallery**, **ID wallpapers**, **Live wallpapers**, **Photos**, or **Wallpapers** and choose a wallpaper.
3. Touch **Set wallpaper**.


Storage Settings

The Storage settings menu lets you manage internal storage on your phone.

- To see how much storage your applications are using, touch **Apps** ⓘ > ⚙️ **Settings** > **Storage**.

A bar at the bottom tells you how much app storage space you have left. At the top, touch the list of **RUNNING**, or **ALL** apps, then touch an app in the list to show its details and storage usage. You can touch **Clear data** or touch other options.

- To show which apps are using the most data, touch **Apps** ⓘ > ⚙️ **Settings** > **Data usage**.
Click up the screen to see the individual apps with their data usage below.

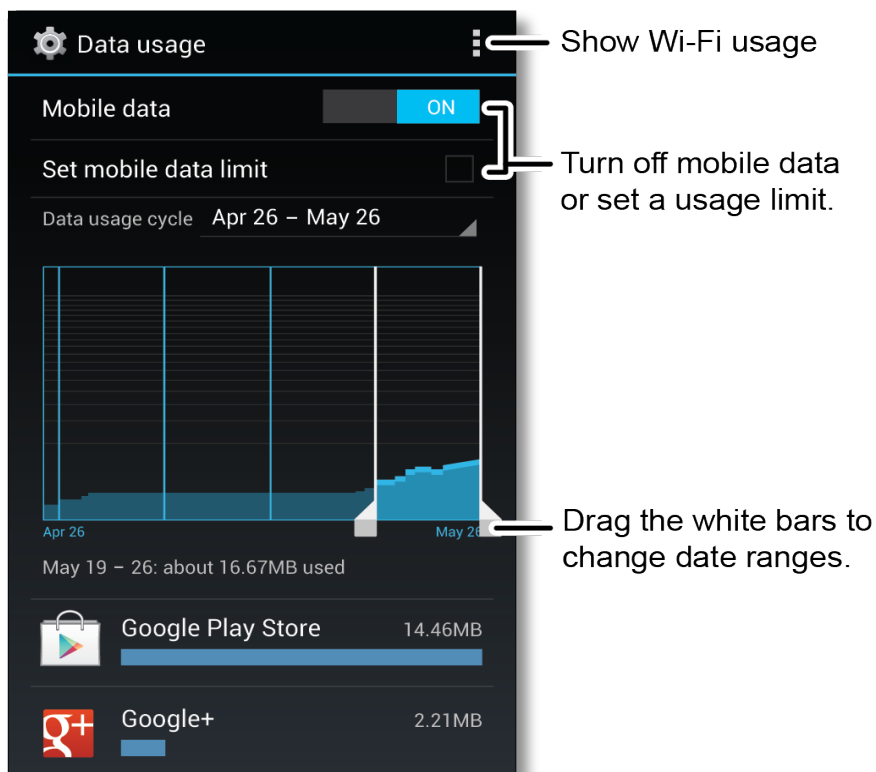

Note: Apps that use a lot of data might also use a lot of battery power.



Note: Usage information is provided to help you manage your phone. This may not match the amounts charged by your service provider.

Battery Settings

Monitor your phone's battery usage through this settings menu. View which functions are consuming your battery's charge and at what percentage.

Battery Usage

Check your battery usage.

- To see battery usage statistics, touch **Apps**  >  **Settings** > **Battery**.

Warning: Use only Sprint-approved or Motorola chargers with your phone. The failure to use a Sprint-approved or Motorola charger may increase the risk that your phone will overheat, catch fire, or explode, resulting in serious bodily injury, death, or property damage.

Sprint-approved or Motorola accessories can be found at Sprint Stores or through Motorola; or call Sprint Customer Care. They're also available at sprint.com.

Battery Capacity

Your phone is equipped with a battery that allows you to recharge it before it is fully drained.

Note: Searching for service, vibrate mode, browser use, and other variables may reduce the battery's talk and standby times.

Tip: Watch your phone's battery level indicator and charge the battery before it runs out of power.

Warning: Don't try to remove or replace the battery yourself—doing so may damage the battery and could cause burning and injury. If your phone becomes unresponsive, try a reboot—press and hold both the **Power** and the **Volume Down** keys until the screen goes dark, and your phone restarts.

Charging the Battery

Keeping track of your battery's charge is important. If your battery level becomes too low, your phone automatically turns off, and you will lose any information you were just working on.

Always use a Sprint-approved or Motorola desktop charger, travel charger, or vehicle power adapter to charge your battery.

1. Insert the small end of the USB cord into the charger/accessory jack on the left side of your phone.
2. Insert the larger end of the USB cord into the AC adapter.

3. Plug the AC adapter into an electrical outlet and charge for at least three hours.

With the Sprint-approved Li-Ion battery, you can recharge the battery before it becomes completely run down.

Apps Settings

This menu lets you control your application settings, including allowing installation of non-Google Play™ Store applications, managing, and viewing running services.



Unknown Sources

You can set a warning to show before you install applications from vendors other than the Google Play Store.

- Touch **Apps**  >  **Settings** > **Security** > **Verify Apps**.



Manage Apps

Remove, stop, and manage your apps.

1. **Apps**  >  **Settings** > **Apps**.
2. Touch an app for more options.
3. To remove an app, touch **Uninstall** > **OK**.

Running Services

View apps that are currently running.

- Touch **Apps**  >  **Settings** > **Apps** > **RUNNING**.
 - To stop an app, touch the app and then touch **Stop**.



Location Settings

You Location settings menu lets you select how your phone determines its location (using the wireless network, GPS satellites, both, or neither). For more information on using maps and navigation, see [Google Maps](#).

These features allow the network to detect your position. Turning **Access to my location** off will hide your location from everyone, except 9-1-1.

Note: Turning **Access to My Location** on will allow the network to detect your position, making some Sprint applications and services easier to use. Turning **Access to My Location** off will disable sharing for all purposes except 9-1-1, but will not hide your general location based on the cell

site serving your call. No application or service may use your location without your request or permission. GPS-enhanced 9-1-1 is not available in all areas.

1. To choose the options for your phone's location settings, touch **Apps**  >  **Settings** > **Location**.
2. Touch the **On/Off** switch beside Location to turn the service on.
3. To select your Location options, touch **Mode** and then touch an option.
 - **High accuracy** to use all available methods (GPS, Wi-Fi, and mobile network) to determine location.
 - **Battery saving** to use only Wi-Fi and mobile networks.
 - **Device only** to use only GPS to determine location.
4. To select your Location Services options, touch **Google Location Reporting** and select your Google location reporting options for each account you've added to your phone.


Security and Screen Lock Settings

The Security settings menus let you set phone security, lock codes, passwords, administrator settings, and more.

Set Up Screen Lock

You can increase the security of your phone by creating a screen lock. When enabled, you have to draw the correct unlock pattern on the screen, slide an icon, pose for face recognition, or enter the correct PIN or password to unlock the phone's control keys and touchscreen.

- Touch **Apps**  >  **Settings** > **Security**.

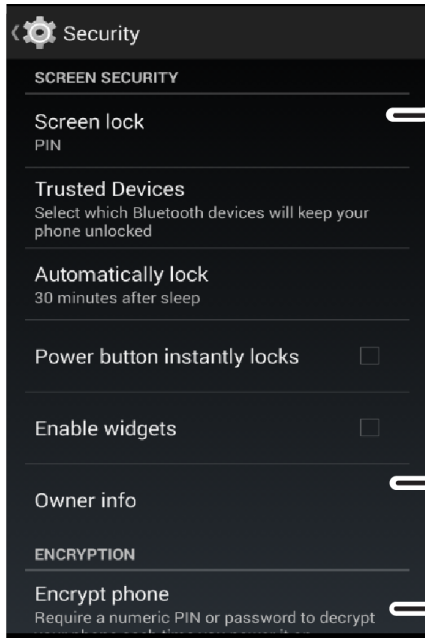

For a screen lock, you can use facial recognition, a connected device, a pattern, a password, or other choices.

Add some info to show on your lock screen.

Encrypt the data stored on your phone or memory card.

Note: You can make emergency calls on a locked phone (see [Call Emergency Numbers](#)). A locked phone still rings, but you need to unlock it to answer.

- To lock the screen, press the **Power** key on the right side of the phone.
- To unlock the screen, press the **Power** key. Then, drag the lock to the outer circle to unlock your screen.

Slide Lock



Slide an icon to open the phone.

- To set the slide lock, touch **Apps**  >  **Settings** > **Security** > **Screen lock** > **Slide**.

When the screen is locked, touch  and drag to the outer circle that appears.

Pattern Lock



Draw a pattern to unlock your phone:

1. To set the lock pattern, touch **Apps**  >  **Settings** > **Security** > **Screen lock** > **Pattern**.
2. Follow the instructions to draw your lock pattern, and then touch **Continue**.
3. When prompted, draw the pattern to unlock the phone, and then touch **Confirm**.

If you fail to draw the correct unlock pattern on the screen after five attempts, you will be prompted to wait for 30 seconds before you can try again.

PIN Lock



Enter four to sixteen digits to unlock your phone:

1. Touch **Apps**  >  **Settings** > **Security** > **Screen lock** > **PIN**.
2. Enter a numeric PIN, and then confirm it.
3. When prompted, enter PIN to unlock the phone.

If you fail to enter the correct PIN after five attempts, you will be prompted to wait for 30 seconds before you can try again.

Password Lock

Enter four to sixteen letters, digits, or symbols to unlock your phone:



1. Touch **Apps**  >  **Settings** > **Security** > **Screen lock** > **Password**.
2. Enter password, and then confirm it.
3. When prompted, enter the password to unlock the phone.

If you fail to enter the correct password after five attempts, you will be prompted to wait for 30 seconds before you can try again.

Face Unlock



Use face recognition software to unlock your phone:

Note: This feature is less secure than a pattern, PIN, or password.

1. Touch **Apps**  >  **Settings** > **Security** > **Screen lock** > **Face Unlock** > **Set it up**.
2. Hold your phone at eye level, look into the front camera, and follow the instructions on the screen.
3. When the face capture is complete, you will be prompted to choose a pattern or PIN as a backup security measure you can use when the phone cannot see your face clearly.

Tip: To unlock the phone: When the screen is dark, press the **Power** key, and then frame your face in the square at the bottom to unlock.

Disable the Screen Lock

1. Touch **Apps**  >  **Settings** > **Security** > **Screen Lock**.
2. Draw your unlock screen pattern, use face recognition, or enter password or a numeric PIN, as prompted.
3. Choose **None** or set up another type of screen lock.

Note: If you forget your pattern, password, or your PIN, contact Sprint.

Security Lock Timer

- Touch **Apps**  >  **Settings** > **Security** > **Automatically lock**, and then select a length of time your phone is idle before it locks.

Note: Security lock timer is only available if you have a screen lock enabled.

Allow Bluetooth Bypass



Allow your phone to remain unlocked when your Bluetooth device is connected. If your Bluetooth device is disconnected then your phone locks using the locking method you set up.

- Touch **Apps**  >  **Settings** > **Security** > **Trusted devices** > **Yes, I'm in.**

Encryption

Encrypt the data stored on your phone and/or SIM card.

Encrypt Your Phone

1. To encrypt data on your phone, first set up a screen lock (see [Set Up Screen Lock](#)).
2. Touch **Apps**  >  **Settings** > **Security** > **Encrypt phone**.
3. Select **Encrypt phone** to encrypt all personal data on your phone.

Note: Your phone must be fully charged and plugged into a charger to begin the encryption process. The entire process can take more than an hour to complete.

Passwords

Select whether to show passwords as you enter them instead of *****.

- Touch **Apps**  >  **Settings** > **Security** > **Make passwords visible**.



Device Administration

Activate the device administrator role so that you can have further control over erasing phone data, changing passwords, setting password rules, monitoring failed screen unlock attempts, and locking the screen.

- Touch **Apps**  >  **Settings** > **Security** > **Device administrators**.

Credential Storage

Use secure credential information from memory storage.

- Touch **Apps**  >  **Settings** > **Security** and select from the following options:
 - **Trusted credentials**: show trusted CA certificates.
 - **Install from storage**: install credentials from storage.
 - **Clear credentials**: clear all credential storage and reset the password.

Language and Input Settings


Your phone's Language settings let you select a language for the phone's screens and menus, as well as manage a personal user dictionary. The Keyboard settings let you select a preferred input method, control keyboard settings, and more.

Language Settings

The language settings menu lets you select an on-screen language and add custom words to your phone's user dictionary.




Select Language

Set your menu language and region:

- Touch **Apps**  >  **Settings** > **Language & input** > **Language** and select **English** or **Español**.

Personal Dictionary

Add words to your personal dictionary so they appear as suggestions when you enter text.



 
1. Touch **Apps**  >  **Settings** > **Language & input** > **Personal dictionary**.
2. To add a word, touch , type the word, and touch **Done**.

Keyboard and Input Method Settings

The keyboard settings menu lets you set the input method for the touchscreen keyboard (Android keyboard or voice) and set options for each method.




Android Keyboard

Your phone's touchscreen input method is the default multi-touch keyboard.

- Touch **Apps**  >  **Settings** > **Language & input** >  to the right of **Google Keyboard** to set the following options:
 - **Input languages:** Choose an input language.
 - **General**
 - **Auto-capitalization:** Automatically capitalize the next word after a period.
 - **Vibrate on keypress:** Vibrate when you press a key.
 - **Sound on keypress:** Make a sound when you press a key.
 - **Popup on keypress:** Keys pop up as you touch them.
 - **Voice input key:** Select where voice input key appears on keyboard.
 - **Text Correction**
 - **Personal dictionary:** Create your own dictionary.
 - **Add-on dictionaries:** Install additional dictionaries.
 - **Block offensive words:** Stop offensive words being used.
 - **Auto correction:** Spacebar and punctuation automatically correct mistyped words.
 - **Show correction suggestions:** Show word suggestions as you type.
 - **Gesture Typing**
 - **Enable gesture typing:** Input a word by sliding through the letters.
 - **Dynamic floating preview:** See the suggested word while gesturing.
 - **Show gesture trail:** Show letters already selected with a gesture.
 - **Phrase gesture:** Adds spaces during a gesture addition of a word.
 - **Other options**
 - **Next-word suggestions:** Uses the previous word to offer next word options.
 - **Advanced settings:** Additional options you may choose after you are familiar with your phone,
 - **Send feedback:** Send your feedback about Google Keyboard.
 - **About Google Keyboard:** Google Keyboard version data and links to see licenses, privacy policy, version, and bug reporting.



 Google Voice Typing

Google voice typing is automatic.

- Touch **Apps**  >  **Settings** > **Language & input** >  to the right of **Google voice typing** to set the following options:
 - **General**
 - **Block offensive words:** Hide recognized offensive text.
 - **Offline speech recognition:** Enables voice input while offline.



 
Voice Search

Set up the options your phone uses when you search by using voice commands or when it can respond to you with text-to-voice.

- Touch **Apps**  >  **Settings** > **Language & input** > **Voice Search** to set the following settings for voice recognition:
 - **Language:** Select a language.
 - **Speech output:** Select Always, Informative only, or Hands-free only.
 - **Block offensive words:** Hide recognized offensive text.
 - **Hotword detection:** Say “OK Google” to launch voice search.
 - **Offline speech recognition:** Enables voice input while offline.
 - **Personalized recognition:** Improve speech recognition accuracy.
 - **Google Account dashboard:** Manage your collected data.
 - **Bluetooth headset:** Records audio through Bluetooth headset if available.

Text-to-speech Output

Set up your phone’s speech synthesis engine and speech rate.

- Touch **Apps**  >  **Settings** > **Language & input** > **Text-to-speech output** for the following settings:
 - **Google Text-to-speech Settings** (touch ).
 - **Language:** Sets the language for the spoken voice.

- **Settings for Google Text to speech:** Choose to auto update voices and use Wi-Fi only to update voices.
- **Install voice data:** Downloaded voice data is required for speech synthesis.
- **Speech rate:** Speed at which the text is spoken.
- **Listen to an example:** Play a short demonstration of speech synthesis that matches the settings you select in Speech rate.

Mouse/Trackpad

- Touch **Apps**  >  **Settings** > **Language & input** > **Pointer speed**. Use the slider to adjust the speed of a pointer device.

Privacy Settings

Your phone's privacy settings allow you to back up the data on your phone and to reset its settings back to factory defaults.

Backup and Restore

Save yourself time and effort. Use Backup and Restore to save your personal data. If your phone is ever reset, your passwords and settings will automatically be restored.

Back Up My Data

Select whether to back up your personal data (passwords and settings) to Google servers.

- Touch **Apps**  >  **Settings** > **Backup & reset** > **Back up my data**.

Backup Account

Select an account to set as backup account.

- Touch **Apps**  >  **Settings** > **Backup & reset** > **Backup account**.




Automatic Restore

Set whether to automatically restore backed up data if you reinstall an app.

- Touch **Apps**  >  **Settings** > **Backup & reset** > **Automatic restore**.

Reset Your Phone

Selecting Reset phone resets all phone settings back to their default values and clears all information (text messages, contacts, emails, etc.) and downloaded apps.



1. Touch **Apps**  >  **Settings** > **Backup & reset** > **Factory data reset**.
2. Read the prompt and touch **Erase everything** to complete the reset. (Touch **Back**  to cancel.)

Warning: All data on your phone will be deleted.





Account Settings

The Accounts menu lets you add and manage all your email, social networking, and picture and video sharing accounts.

Set Up a New Account

1. Touch **Apps**  >  **Settings** > **+** **Add account**.
2. Touch an account type:
 - **Corporate, Email, Facebook** or **Google**.
3. Enter your account information and touch **Next**.
 - Depending on the account type, you may need to enter an email address or user address, password, domain name, or other information. For Corporate accounts, contact your server administrator to determine what information you will need.
4. Touch **Done** when you are finished.

Manage Existing Accounts

1. Touch **Apps**  >  **Settings**.
2. Touch an account to manage its settings.
 - Touch a field to edit it.
 - Touch **Menu**  > **Remove account** to delete it from your phone.
3. Touch **Back**  when you are finished.

System Update

The System Update menu lets you manually search for and apply important phone and system updates.

- Touch **Apps**  >  **Settings** > **System Update**.

Date and Time Settings

Use the Date & Time settings menu either to select time and date format options.

Changing the Date & Time

To set date and time formats:

- Touch **Apps**  >  **Settings** > **Date & time** > **Use 24-hour format** or **Choose date format**.

Accessibility Settings

The Accessibility menu lets you enable and manage accessibility-related applications. Accessibility features are there for everyone, helping to make things easier.

Note: For general information, accessories, apps, and more, visit motorola.com/accessibility.

You can customize your phone with more accessible features such as large text, power button to end call, text-to-speech output, and more.

- To access the accessibility options, touch **Apps**  >  **Settings** > **Accessibility**.

Accessibility Shortcut

Set an accessibility shortcut to use simple gestures to quickly activate Talkback and other accessibility features on your phone.

- Touch **Apps**  >  **Settings** > **Accessibility** > **Accessibility shortcut**.

Sound Volume and Vibrate Settings

- You can choose the volume and the vibration settings for the various phone features. See [Adjust the Sound Volume](#).

Display Brightness for Accessibility

Your phone automatically adjusts the screen brightness when you're in bright or dark places, but you can set your own brightness level instead. To set display brightness, see [Display Settings](#).

Note: Setting brightness to a high level decreases your phone's battery life. To maximize battery life, select **Automatic brightness**.

TalkBack

Use TalkBack to read out loud your navigation, your selections, even your books. Talkback reads all of the text you type except for passwords.



- To turn on TalkBack, touch **Apps**  >  **Settings** > **Accessibility** > **TalkBack**, and then touch **ON**.

Note: You might need to download a text-to-speech app.

TalkBack features make your phone more useable:

- **Menus and screens:** Touch an item in a menu or screen and your phone speaks the name.
- **Dialer and text entry:** Start typing, and your phone speaks each number or letter.
- **Notifications:** Flick the status bar down and your phone speaks all of the notifications.
- **Books & more:** Open a book, a file, a message, and more and the contents are read out loud (this feature is app dependent).
- **Browsers:** Enable Web pages in your browser to be read out loud (see support.google.com/chrome) Move between pages, paragraphs, lines, words, or characters.



You can navigate through your apps and menus to hear how voice readouts work on your phone. When in TalkBack mode, your phone may read out an item when you first touch it and may require you to touch it again to perform the action.

- To pause/resume TalkBack:
 - Wave your hand over the proximity sensor at the top of the phone. To activate this feature, touch **Apps**  >  **Settings** > **Accessibility** > **TalkBack** > **Settings** > **Use proximity sensor**.
 - When Explore by Touch is on, swipe down then right to open the global context menu, then use the menu to pause TalkBack.

Note: When you turn on Talkback, it allows you to add Explore by Touch.

Explore by Touch

You use Explore by touch to expand the functions of TalkBack. Your touches are read out loud as you move your finger around the screen.







- To turn on Explore by touch, when TalkBack is active, touch **Apps**  >  **Settings** > **Accessibility** > **TalkBack** > **Explore by touch**.

Tip: When you turn on TalkBack for the first time, your phone asks if you want to **Enable Explore by Touch?** Touch **OK** to turn it on.

Explore by touch changes some touch gestures slightly so that the location of your touches can be read out loud.






- **Touch** something on the screen to hear a description or text readout.
- **Double-touch** anywhere on the screen to open or activate the last touched item.
- **Swipe** using two fingers to scroll through lists or between screens.

Shortcut gestures let you navigate your phone with simple swipe gestures (for example, swipe up then left in a single motion to go to the Home screen).

- To verify or change these shortcuts, touch **Apps**  >  **Settings** > **Accessibility** > **TalkBack** > **Settings** > **Manage gestures**.
- To learn about Explore by Touch, touch **Apps**  >  **Settings** > **Accessibility** > **TalkBack** > **Settings** > Launch “Explore by touch” tutorial.
- To turn off Explore by Touch when TalkBack is active, touch **Apps**  >  **Settings** > **Accessibility** > **TalkBack** > **Settings**, and uncheck **Explore by touch**.

Caller ID for Talkback

Do the following when you want to hear who is calling.








- To have your caller announced out loud, touch **Apps**  >  **Settings** > **Accessibility** > **Talkback** > **SETTINGS** > **Speak Caller ID**.
- To assign a unique ringtone to a contact, touch **Apps**  >  **People**, touch the contact, and then touch **Menu**  > **Set ringtone**.

Zoom

Get a closer look at the screen with a few simple options. You can zoom in on maps, Web pages, and photos, magnify the screen with taps, and increase the size of text throughout your phone. You can also modify your browser for easier reading.

- To pinch to zoom in, touch the screen with two fingers and then drag them apart.
- To zoom out, touch the screen with two fingers and drag your fingers together.



Tip: To zoom in, you can also double-tap.

- To set up screen magnification so you can use tapping, touch **Apps**  >  **Settings** > **Accessibility** > **Magnification gestures**.
 - Triple tap the screen for full screen magnification, or triple tap and hold to temporarily magnify the screen.
- To show larger text throughout your phone, touch **Apps**  >  **Settings** > **Accessibility** > **Large text**.
- To set zoom, text size, contrast, and other accessibility options for your browser, touch **Apps**  > **Chrome**  > **Menu**  > **Settings** > **Accessibility**.

Tip: Use **Force enable zoom** to allow zooming on all webpages.

Touchscreen and Key Settings for Accessibility


You can optionally hear or feel when you touch or lock the screen.

- To hear or feel when you touch the screen, touch **Apps**  >  **Settings** > **Sound** and choose from the following options:
 - To hear screen touches (clicks), select **Touch sounds**.
 - To feel screen keyboard touches (vibrate), select **Vibrate on touch**.
 - To hear when you lock or unlock the screen (click), select **Screen lock sound**.

Messages

To make text entry in messages even easier, use features like auto-complete, auto-correct, and auto-punctuate.



- To set the auto text features, touch **Apps**  > **Settings**  > **Language & input**, then touch  next to a keyboard type.

Note: If you don't want to type at all, then use your voice by touching  on the touchscreen keyboard.

Hearing Aids



To help get a clear sound when using a hearing aid or cochlear implant, your phone may have been rated for use with hearing aids. If your phone's box has "Rated for Hearing Aids" printed on it, then please read the following guidance.

Note: Ratings are not a guarantee of compatibility (visit motorola.com/hacphones). You may also want to consult your hearing health professional, who should be able to help you get the best results.

- To choose hearing aid options, touch **Phone**  > **Menu**  > **Settings** > **Hearing aids**.
- To change call volume during a call, press the side volume keys to set a call volume that works for you.
- To choose best phone position, hold the phone to your ear as normal during a call, and then rotate/move it to get the best position for speaking and listening.

TTY

You can use your phone in TTY mode with standard teletype machines.







- To choose the TTY setting, touch **Phone**  > **Menu**  > **Settings** > **TTY mode** and select the mode you need:
 - **TTY full:** Type and read text on your TTY device.
 - **TTY HCO:** Hearing-Carry-Over – type text on your TTY device and listen to voice replies on your phone's speaker.
 - **TTY VCO:** Voice-Carry-Over – speak into your phone and read text replies on your TTY device.

Note: You'll need a cable/adaptor to connect your TTY device to the headset jack on your phone. **If you need to charge your phone at the same time, make sure to first plug in your TTY devices so that your phone can properly connect to it. Then plug in the charger.**

Tip: Refer to your TTY device guide for mode and usage information.

Braille

Combine your Braille display with TalkBack for braille and speech feedback.

1. To download the BrailleBack app from the Google Play™ Store, touch **Apps**  >  **Play Store** to search and install it on your phone.
2. Touch **Apps**  >  **Settings** > **Accessibility** > **BrailleBack**.
3. Turn on your Braille display and put it in Bluetooth® pairing mode.
4. On your phone, touch **Apps**  >  **Settings** > **Bluetooth**, then touch the Bluetooth **ON** power switch to turn it and scan.
5. Touch the name of your Braille display to pair it with the phone.

Apps for Accessibility

Google Play Store™ provides access to thousands of apps, many with useful accessibility features.

- Touch **Apps**  >  **Play Store**.

About Phone

The About Phone menu lets you access important phone information, search for and apply updates, and view legal, safety, and other information.



Status

View battery status, phone number, network information, and more:

- Touch **Apps**  >  **Settings** > **About phone** > **Status**.

Legal Information

Access the Legal Information menu to view important license and legal information.

1. Touch **Apps**  >  **Settings** > **About phone** > **Legal information**.
2. Select the information you wish to review:
 - Motorola Terms and Conditions
 - Open source licenses

- Google legal
- Carrier legal

Copyright Information

© 2014 Sprint Worldwide, Inc., Sprint, the Logo, and Sprint Prepaid are trademarks of Sprint Worldwide, Inc. Other marks are property of their respective owners.

Copyright & Trademarks

Motorola Mobility LLC
Consumer Advocacy Office
600 N US Hwy 45
Libertyville, IL 60048

www.motorola.com

Note: Do not ship your product to the above address. If you need to return your product for repairs, replacement, or warranty service, please contact the Motorola Customer Support Center at:

1-800-734-5870 (United States)

1-888-390-6456 (TTY/TDD United States for hearing impaired)

1-800-461-4575 (Canada)

Certain features, services and applications are network dependent and may not be available in all areas; additional terms, conditions and/or charges may apply. Contact your service provider for details.

All features, functionality, and other product specifications, as well as the information contained in this guide, are based upon the latest available information and believed to be accurate at the time of printing. Motorola reserves the right to change or modify any information or specifications without notice or obligation.

Note: The images in this guide are examples only.

MOTOROLA and the Stylized M Logo are trademarks or registered trademarks of Motorola Trademark Holdings, LLC. Android, Google and other trademarks are owned by Google Inc. The Android robot is reproduced or modified from work created and shared by Google and used according to terms described in the Creative Commons 3.0 Attribution License. All other product or service names are the property of their respective owners.

© 2014 Motorola Mobility LLC. All rights reserved.

Caution: Motorola does not take responsibility for changes/modification to the transceiver.

Product ID: Moto G (Model XT1031)

Manual Number: 68017657001-A



Safety, Regulatory & Legal

The following topics concern important safety and legal information.

Battery Use & Safety

Warning: Your mobile device contains a battery that should only be removed by a Motorola approved service center or recycler.

- Don't try to remove or replace the battery yourself. Attempting to remove or replace the battery may damage the battery and may cause burning and injury.
- Don't try to take apart or fix your phone. Attempting to take apart or fix your phone may damage the battery and may cause burning and injury.
- Don't crush, bend, or expose your phone to heat or liquid. This may damage the battery and may cause burning and injury.

Battery Charging

Notes for charging your product's battery:

- During charging, keep your mobile device and charger near room temperature for efficient battery charging.
- New batteries are not fully charged.
- New batteries or batteries stored for a long time may take more time to charge.
- Motorola batteries and charging systems have circuitry that protects the battery from damage from overcharging.

Third Party Accessories

Using third party accessories, including but not limited to batteries, chargers, headsets, covers, cases, screen protectors, and memory cards, may impact your mobile device's performance. Using a non-Motorola battery or charger may present a risk of fire, explosion, leakage, or other hazard. Motorola's warranty doesn't cover damage to the phone caused by non-Motorola batteries and/or chargers. For a list of Motorola accessories, visit motorola.com/accessories (in English only).

Driving Precautions

Responsible and safe driving is your primary responsibility when driving a vehicle. Making calls or using applications while driving may cause distraction, and may be prohibited or restricted in certain areas—always obey local laws and regulations for the use of mobile devices and accessories in the vehicle.

While driving, ALWAYS:

- Keep your eyes on the road.
- Use a handsfree device if available or required by law in your area.
- Enter destination information into a navigation device before driving.
- Use voice activated features (such as voice dial) and speaking features (such as audible directions), if available.
- Concentrate on driving, and stop using the mobile device if you can't concentrate.

Pull over safely before using your mobile device to send messages, surf the Web, or use other applications.

Seizures, Blackouts & Eyestrain

To reduce eyestrain and avoid headaches, it is always a good idea to hold the screen a comfortable distance from your eyes, use in a well-lit area, and take frequent breaks.

Some people may be susceptible to seizures or blackouts (even if they have never had one before) when exposed to flashing lights or light patterns, such as when playing video games, or watching videos with flashing-light effects.

Discontinue use and consult a physician if any of the following symptoms occur: seizures, blackout, convulsion, eye or muscle twitching, loss of awareness, or disorientation.

Caution About High Volume Usage

Exposure to loud noise from any source for extended periods of time may affect your hearing. The louder the sound, the less time is required before your hearing could be affected. To protect your hearing:

- Limit the amount of time you use headsets or headphones at high volume.
- Avoid turning up the volume to block out noisy surroundings.
- Turn the volume down if you can't hear people speaking near you.

If you experience hearing discomfort, including the sensation of pressure or fullness in your ears, ringing in your ears, or muffled speech, you should stop listening to the device through your headset or headphones and have your hearing checked.



Repetitive Motion

When you repetitively perform actions, such as pressing keys, you may experience discomfort in your hands, arms, shoulders, neck, or other parts of your body. If you continue to have discomfort during or after such use, stop use and see a physician.

Children

Keep your mobile device and its accessories away from small children. These products are not toys and may be hazardous to small children. For example, a choking hazard may exist for small, detachable parts.



Supervise access. If a child does use your mobile device, monitor their access to help prevent loss of data or unexpected charges for data or application purchases.






Glass Parts

Some parts of your mobile device may be made of glass. This glass may break if the product receives a substantial impact. If glass breaks, don't attempt to service the device yourself. Stop using your mobile device until the glass is replaced by a qualified service center.

Use and Care

To care for your Motorola mobile device, please observe the following:

 Liquids	Don't expose your mobile device to water, rain, extreme humidity, sweat, or other liquids.
 Drying	Don't try to dry your mobile device using a microwave oven, conventional oven, or dryer.

 Extreme heat or cold	Don't store or use your mobile device in temperatures below -10°C (14°F) or above 60°C (140°F). Don't recharge your mobile device in temperatures below 0°C (32°F) or above 45°C (113°F).
 Dust and dirt	Don't expose your mobile device to dust, dirt, sand, food, or similar materials.
 Cleaning	To clean your mobile device, use only a dry soft cloth. Don't use alcohol or other cleaning solutions.
 Shock and vibration	Don't drop your mobile device or expose it to strong vibration.
 Protection	To help protect your mobile device, always make sure that all connector and compartment covers are closed and secure, and avoid carrying it with hard objects such as keys or coins.

Operational Warnings

Obey all posted signs when using mobile devices in public areas.




Potentially Explosive Areas




Potentially explosive areas are often, but not always, posted and can include blasting areas, fueling stations, fueling areas (such as below decks on boats), fuel or chemical transfer or storage facilities, or areas where the air contains chemicals or particles, such as grain dust, or metal powders.

Turn off your mobile device before entering such an area, and do not charge batteries. In such areas, sparks can occur and cause an explosion or fire.

Symbol Key

Your charger, mobile device, device display, user's guide, or packaging may contain symbols, defined as follows:

Symbol	Definition
	Important safety information follows.
 	Your battery or mobile device may require recycling in accordance with local laws. Contact your local regulatory authorities for more information.

Symbol	Definition
	Do not dispose of your battery or mobile device with your household waste. See Disposal & Recycling for more information.
	For indoor use only.
	Listening at high volume to music or voice through a headset may damage your hearing.

Radio Frequency (RF) Energy

Exposure to RF Energy & Device Operation

Your mobile device contains a transmitter and receiver of RF energy. It is designed to comply with regulatory requirements concerning human RF exposure.

For optimal device performance, and to stay within the RF exposure guidelines:

- Hold your mobile phone like a landline when talking on it.
- When using the mobile phone next to your body (other than in your hand or against your head), maintain a distance of 1.5 cm (3/4 inch) from your body to be consistent with how the mobile phone is tested for compliance with RF exposure requirements.
- If you use your mobile phone with an accessory case or holder, make sure the accessory is free of metal.

Follow Instructions to Avoid Interference Problems

Turn off your mobile device in any location where posted notices instruct you to do so, such as hospitals or health care facilities.

In an aircraft, turn off your mobile device whenever instructed to do so by airline staff. If your mobile device offers an airplane mode or similar feature, consult airline staff about using it in flight.

Medical Devices

If you use an implantable pacemaker or defibrillator, consult your healthcare provider and the device manufacturer's directions before using this mobile device.

Persons with a pacemaker or defibrillator should observe the following precautions:

- ALWAYS keep the mobile device more than 20 centimeters (8 inches) from the pacemaker or defibrillator when the mobile device is turned ON.
- Use the ear opposite the pacemaker or defibrillator to minimize the potential for interference.

- Turn OFF the mobile device immediately if you have any reason to suspect that interference is taking place.

Regulatory Information

Your Motorola mobile device is designed to comply with national and international regulatory requirements. For full compliance statements and details, please refer to the regulatory information in your printed product guide.

Specific Absorption Rate (FCC & IC)

YOUR MOBILE DEVICE MEETS FCC AND IC LIMITS FOR EXPOSURE TO RADIO WAVES.

Your mobile device is a radio transmitter and receiver. It is designed not to exceed the limits for exposure to radio waves (radio frequency electromagnetic fields) adopted by the Federal Communications Commission (FCC) and Industry Canada (IC). These limits include a substantial safety margin designed to assure the safety of all persons, regardless of age and health.

The radio wave exposure guidelines use a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit for mobile devices is 1.6 W/kg. Tests for SAR are conducted using standard operating positions with the device transmitting at its highest certified power level in all tested frequency bands. The highest SAR values under the FCC and IC guidelines for your device model are listed below:

Head SAR	CDMA 1900 MHz, WiFi, Bluetooth	1.56 W/kg
Body-worn SAR	CDMA 1900 MHz, WiFi, Bluetooth	1.24 W/kg

During use, the actual SAR values for your device are usually well below the values stated. This is because, for purposes of system efficiency and to minimize interference on the network, the operating power of your mobile device is automatically decreased when full power is not needed for the call. The lower the power output of the device, the lower its SAR value.

If you are interested in further reducing your RF exposure then you can easily do so by limiting your usage or simply using a hands-free kit to keep the device away from the head and body.

Additional information can be found at www.motorola.com/rfhealth.

European Union Directives Conformance Statement

The following CE compliance information is applicable to Motorola mobile devices that carry one of the following CE marks:

CE
CE0168
CE0168 ⓘ

Hereby, Motorola declares that this product is in compliance with:

- The essential requirements and other relevant provisions of Directive 1999/5/EC
- All other relevant EU Directives

For products that support Wi-Fi 802.11a (as defined in your product information): This device is restricted to indoor use when operating in the 5.15 to 5.25 GHz (802.11a) Wi-Fi frequency band.

The following gives an example of a typical Product Approval Number:



You can view your product's Declaration of Conformity (DoC) to Directive 1999/5/EC (to R&TTE Directive) at motorola.com/hacphones (in English only). To find your DoC, enter the Product Approval Number from your product's label in the "Search" bar on the website.

FCC Notice to Users

The following statement applies to all products that bear the FCC logo and/or FCC ID on the product label.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. See 47 CFR Sec. 15.105(b). These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. See 47 CFR Sec. 15.19(a)(3).

Motorola has not approved any changes or modifications to this device by the user. Any changes or modifications could void the user's authority to operate the equipment. See 47 CFR Sec. 15.21.

For products that support Wi-Fi 802.11a (as defined in product information): In the United States, do not use your device outdoors while connected to an 802.11a Wi-Fi network. The FCC prohibits such outdoor use since frequencies 5.15-5.25 GHz can cause interference with Mobile Satellite Services (MSS). Public Wi-Fi access points in this range are optimized for indoor use.

Industry Canada Notice to Users

This device complies with Industry Canada license-exempt RSS standard(s). Operation is subject to the following two conditions: (1) This device may not cause interference and (2) This device must accept any interference, including interference that may cause undesired operation of the device. See RSS-Gen, Section 7.1.3. This device complies with ICES-003 requirements for Class BITE (Information Technology Equipment). CANICES-3(B)/NMB-3(B).

Software Notices

Warning against unlocking the bootloader or altering a product's operating system

software: Motorola strongly recommends against altering a product's operating system, which includes unlocking the bootloader, rooting a device or running any operating software other than the approved versions issued by Motorola and its partners. Such alterations may permanently damage your product, cause your product to be unsafe and/or cause your product to malfunction. In such cases, neither the product nor any damage resulting therefore will be covered by warranty.

Important FCC information: You must not make or enable any changes to the product that will impact its FCC grant of equipment authorization. The FCC grant is based on the product's emission, modulation, and transmission characteristics, including: power levels, operating frequencies and bandwidths, SAR levels, duty-cycle, transmission modes (e.g., CDMA, GSM), and intended method of using the product (e.g., how the product is held or used in proximity to the body). A change to any of these factors will invalidate the FCC grant. It is illegal to operate a transmitting product without a valid grant.

Location Services

Motorola mobile devices can provide information about their approximate location to applications, using sources including GPS, AGPS, and Wi-Fi. GPS (Global Positioning System) uses government-operated satellites that are subject to changes implemented in accordance with

Department of Defense policy and the Federal Radio Navigation Plan. These changes may affect the performance of location technology on your mobile device. AGPS (Assisted Global Positioning System) uses your wireless service provider's network to improve GPS performance. Airtime, data fees, and/or additional charges may apply in accordance with your service plan. Contact your wireless service provider for details. Your mobile device can also use Wi-Fi signals to determine your approximate location, using information from known and available Wi-Fi networks.

Mobile devices transmit location-based information when connected to a wireless network or when using other location technologies like GPS. If you use applications that require location-based information such as driving directions, your mobile device will provide location information to them. These applications may share location information with third parties, including your wireless service provider, applications providers, Motorola, and other third parties providing services.

Emergency Calls

When you make an emergency call, the cellular network may activate the AGPS technology in your mobile device to tell the emergency responders your approximate location.

AGPS has limitations and **might not work in your area**. Therefore:

- Always tell the emergency responder your location to the best of your ability; and
- Remain on the phone for as long as the emergency responder instructs you.

Navigation

If your Motorola mobile device provides navigation features, note that mapping information, directions, and other navigational data may contain inaccurate or incomplete data. In some countries, complete information may not be available. Therefore, you should visually confirm that the navigational instructions are consistent with what you see. All drivers should pay attention to road conditions, closures, traffic, and all other factors that may impact driving. Always obey posted road signs.

Privacy & Data Security

Motorola understands that privacy and data security are important to everyone. Because some features of your mobile device may affect your privacy or data security, please follow these recommendations to enhance protection of your information:

- **Monitor access:** Keep your mobile device with you and don't leave it where others may have unmonitored access. Use your device's security and lock features, where available.
- **Keep software up to date:** If Motorola or a software/application vendor releases a patch or software fix for your mobile device that updates the device's security, install it as soon as possible.

- **Secure Personal Information:** Your mobile device can store personal information in various locations, including your SIM card, memory card, and phone memory. Be sure to remove or clear all personal information before you recycle, return, or give away your device. You can also backup your personal data to transfer to a new device.
Note: For information on how to backup or wipe data from your mobile device, go to motorola.com/support.
- **Online accounts:** Some mobile devices provide a Motorola online account. Go to your account for information on how to manage the account, and how to use security features such as remote wipe and device location (where available).
- **Applications and updates:** Choose your apps and updates carefully, and install from trusted sources only. Some apps can impact your mobile device's performance and/or have access to private information including account details, call data, location details, and network resources.
- **Wireless:** For mobile devices with Wi-Fi features, only connect to trusted Wi-Fi networks. This precaution will help prevent unauthorized access to your device.
- **Location-based information:** Mobile devices enabled with location based technologies such as GPS, AGPS or Wi-Fi, can transmit location-based information. See "Location Services" for more details.
- **Other information your device may transmit:** Your mobile device may also transmit testing and other diagnostic (including location-based) information, and other non-personal information to Motorola or other third-party servers. This information is used to help improve products and services offered by Motorola.

If you have further questions about how using your mobile device may impact your privacy or data security, please contact Motorola at privacy@motorola.com, or contact your service provider.

Disposal & Recycling

Mobile Devices & Accessories

Please don't dispose of mobile devices or electrical accessories (such as chargers, headsets, or batteries) with your household waste.

Warning: Never dispose of batteries, either separately or within a mobile device, in a fire because they may explode. Mobile devices or electrical accessories should be disposed of in accordance with the national collection and recycling schemes operated by your local or regional authority. Or, you may return unwanted Motorola mobile devices and electrical accessories to any Motorola Approved Service Center in your region. For details on approved national recycling schemes and Motorola recycling activities, go to motorola.com/recycling/.

Packaging & Product Guides

Product packaging and product guides should only be disposed of in accordance with national collection and recycling requirements. Please contact your regional authorities for more details.



Hearing Aid Compatibility in the US

In the US, specific hearing aid compatibility (HAC) performance ratings can help clarify how certain wireless phones and hearing aids may perform together. HAC compliant wireless phones are capable of working with hearing aids that have a minimal immunity rating of at least 2. The immunity rating indicates how susceptible a hearing aid is to picking up interference from a digital wireless phone. It can rate the performance of the hearing aid for either microphone and/or telecoil coupling. Some hearing aids are more immune than others to this interference noise, and phones also vary in the amount of interference they generate. The US performance rating system for HAC compliant wireless phones is as follows:

The "M" (microphone) indicates that the product has been tested and rated for acoustic coupling. The "T" (telecoil) represents that the product has been tested and rated for inductive coupling. The higher the "M" or "T" rating, the less likely the hearing aid user will experience interference when the hearing aid is set to the respective microphone or telecoil mode. The highest values to date are 3 and 4 (e.g., "M4" or "M3/T3").

To determine if a product is rated for HAC, please look for the HAC rating or logo on the phone's packaging. For a list of current HAC models, visit motorola.com/hacphones.

Results will vary depending on the user's hearing aid and hearing loss. If your hearing aid happens to be vulnerable to interference, you may not be able to use a rated phone successfully. Trying out the phone with your hearing device is the best way to evaluate it for your personal needs. To couple the device to your telecoil equipped hearing aid, switch your hearing aid to the "T" or telecoil setting. Then, enable the 'Hearing Aid' mode feature on your Motorola phone with the following sequence: **Apps > Phone > Menu > Settings > Hearing aids**.

Motorola Mobility hearing aid compatible phones have been tested and rated for use with hearing aids for some of the wireless technologies that it uses. However, there may be some newer wireless technologies used in this phone that have not been tested yet for use with hearing aids. It is important to try the different features of this phone thoroughly and in different locations, using your hearing aid or cochlear implant, to determine if you hear any interfering noise. Contact your service provider or Motorola for information on hearing aid compatibility. If you have questions about return or exchange policies, contact your service provider or phone retailer.



Software Copyright

Motorola products may include copyrighted Motorola and third-party software stored in semiconductor memories or other media. Laws in the United States and other countries preserve for Motorola and third-party software providers certain exclusive rights for copyrighted software, such as the exclusive rights to distribute or reproduce the copyrighted software. Accordingly, any copyrighted software contained in Motorola products may not be modified, reverse-engineered, distributed, or reproduced in any manner to the extent allowed by law. Furthermore, the purchase of Motorola products shall not be deemed to grant either directly or by implication, estoppel, or otherwise, any license under the copyrights, patents, or patent applications of Motorola or any third-party software provider, except for the normal, non-exclusive, royalty-free license to use that arises by operation of law in the sale of a product.

Content Copyright

The unauthorized copying of copyrighted materials is contrary to the provisions of the Copyright Laws of the United States and other countries. This device is intended solely for copying non-copyrighted materials, materials in which you own the copyright, or materials which you are authorized or legally permitted to copy. If you are uncertain about your right to copy any material, please contact your legal advisor.


Open Source Software Information

For instructions on how to obtain a copy of any source code being made publicly available by Motorola related to software used in this Motorola mobile device, you may send your request in writing to the address below. Please make sure that the request includes the model number and the software version number.

MOTOROLA MOBILITY LLC
OSS Management
1000 Enterprise Way
Sunnyvale, CA 94043
USA

The Motorola website opensource.motorola.com (in English only) also contains information regarding Motorola's use of open source.

Motorola has created the opensource.motorola.com website to serve as a portal for interaction with the software community-at-large.

To view additional information regarding licenses, acknowledgments and required copyright notices for open source packages used in this Motorola mobile device, please go to **Apps**  **Settings**

> **About phone** > **Legal information** > **License**. In addition, this Motorola device may include self-contained applications that present supplemental notices for open source packages used in those applications.

Export Law Assurances

This product is controlled under the export regulations of the United States of America and Canada. The Governments of the United States of America and Canada may restrict the exportation or re-exportation of this product to certain destinations. For further information contact the U.S. Department of Commerce or the Canadian Department of Foreign Affairs and International Trade.

Product Registration

Product registration is an important step toward enjoying your new Motorola product. Registering permits us to contact you for product or software updates and allows you to subscribe to updates on new products or special promotions. Registration is not required for warranty coverage.

Please retain your original dated sales receipt for your records. For warranty service of your Motorola product you will need to provide a copy of your dated sales receipt to confirm warranty status.

Thank you for choosing a Motorola product.

Service & Repairs

If you have questions or need assistance, we're here to help.

Go to motorola.com/support, where you can select from a number of customer care options. You can also contact the Motorola Customer Support Center at 1-800-734-5870 (United States), 1-888-390-6456 (TTY/TDD United States for hearing impaired), or 1-800-461-4575 (Canada).

How to Obtain Service or Other Information

1. Please access and review the online Customer Support section of Motorola's consumer website prior to requesting warranty service.
2. If the Product is still not functioning properly after making use of this resource, please contact the Warrantor listed at the Motorola website or the contact information for the corresponding location.
3. A representative of Motorola, or of a Motorola Authorized Repair Center, will help determine whether your Product requires service. You may be required to download, or otherwise obtain

and accept software updates from Motorola or a Motorola Authorized Repair Center. You are responsible for any applicable carrier service fees incurred while obtaining the required downloads. Complying with the warranty process, repair instructions and accepting such software updates is required in order to receive additional warranty support.

4. If the software update doesn't fix the problem, you will receive instructions on how to ship the Product to a Motorola Authorized Repair Center or other entity.
5. To obtain warranty service, as permitted by applicable law, you are required to include: (a) a copy of your receipt, bill of sale or other comparable proof of purchase; (b) a written description of the problem; (c) the name of your service provider, if applicable; (d) your address and telephone number. In the event the Product is not covered by the Motorola Limited Warranty, Motorola will inform the consumer of the availability, price and other conditions applicable to the repair of the Product.

To obtain service or other information, please access and review the online Customer Support section of Motorola's consumer website at motorola.com.

Motorola Mobility LLC Limited Global Warranty

See the following topics for details.

What does this Limited Warranty cover?

Motorola Mobility LLC ("Motorola") promises to the original purchaser ("you") that this Mobile Phone, and any in-box accessories which accompany it (the "Products"), will be free of defects for a period of 12 months from the date of original purchase ("Warranty Period") provided that the Products are used for normal [consumer/end user] purposes (the "Limited Warranty"). This Limited Warranty covers only a purchase of new Products from Motorola or an authorized reseller or distributor of Motorola Products and accompanied in-box by this written Limited Warranty. This Limited Warranty is personal to you and not transferable. Claims under this Limited Warranty may only be made in the country of purchase. If, following a repair, there are fewer than 90 days remaining in the Warranty Period, the Warranty Period will be extended to end 90 days from the date of repair.

THE PROMISES MADE TO YOU IN THIS LIMITED WARRANTY ARE IN ADDITION TO, AND DO NOT REDUCE OR OTHERWISE AFFECT, YOUR STATUTORY RIGHTS.

What will we do if you make a claim under this Limited Warranty?

If you make a valid claim under this Limited Warranty, Motorola will (at its discretion) either (1) repair the Product using new, used or reconditioned replacement parts; or (2) replace the Product with a new or 'as new' reconditioned Product; or (3) refund the purchase price. Any refunded or replaced Product shall become the property of Motorola.

What is not covered?

This Limited Warranty does not cover the following unless they occurred because of a defect in materials or workmanship:

- (a) Batteries or any protective coatings the performance of which naturally deteriorates over time.
- (b) Cosmetic damage, including scratches, dents, cracks or other cosmetic damage from normal wear and tear.
- (c) Damage caused by use with non-Motorola products. Defects or damage that result from the use of non-Motorola branded or certified compatible products, accessories or other peripheral equipment and/or software.
- (d) Damage caused beyond the reasonable control of Motorola, including damage caused by (i) accident, abuse, misuse; (ii) operating a Product outside its permitted or intended uses as defined in

the Products' User Manual, Quick Start Guide, Online Tutorials, and other documentation provided to you[, including use of the Products for [commercial rental] purposes]; (iii) improper storage (e.g. subjecting the Product to extreme temperatures), abuse or neglect (e.g. broken/bent/missing clips/fasteners/connectors); impact damage (e.g. dropping the Product) (iv) contact with liquids, water, rain, extreme humidity, unusually heavy perspiration or other moisture; sand, food, dirt or similar substances (except for Products sold as resistant to such substances, but then only to the extent the damage was not caused by incorrectly securing the phone's protective elements or subjecting a Product to conditions beyond its stated specifications or limits); or (v) flood, fire, earthquake, tornado or other acts of God not within Motorola's reasonable control.

(e) Unauthorized service. Defects or damage resulting from someone other than Motorola or a Motorola authorized service center servicing, testing, adjusting, installing, maintaining, altering, or tampering with the Products.

(f) Products that have been modified in any manner without the written permission of Motorola. including (i) serial numbers, date tags or other manufacturer coding that has been removed, altered or obliterated; (ii) mismatched or duplicated serial numbers; (iii) broken seals or other evidence of tampering; or (iv) which have been modified or show evidence of attempts to modify them.

IMPORTANT: IT IS ILLEGAL TO USE THIS PRODUCT IF IT CEASES TO COMPLY WITH THE GOVERNMENT AUTHORIZATIONS THAT APPROVED ITS RELEASE. THEREFORE, YOU MUST NOT MAKE CHANGES TO THE PRODUCT AFFECTING ITS EMISSION, MODULATION, TRANSMISSION CHARACTERISTICS, INCLUDING POWER LEVELS, OPERATING FREQUENCIES AND BANDWIDTHS, SAR LEVELS, DUTY-CYCLE, TRANSMISSION MODES AND THE INTENDED METHOD OF THE PRODUCT.

(g) Normal wear and tear or otherwise due to the normal aging of the Product.

(h) Defects, damages, or the failure of the Product due to any third party communication service or network you subscribe to or use with the Product.

(i) Software

TO THE EXTENT PERMITTED BY APPLICABLE LAW, MOTOROLA DOES NOT GIVE ANY WARRANTIES OR MAKE ANY REPRESENTATIONS, EXPRESS OR IMPLIED, IN RELATION TO THE PRODUCTS. IN PARTICULAR, MOTOROLA DOES NOT WARRANT OR REPRESENT THAT THE PRODUCTS WILL MEET YOUR REQUIREMENTS, WORK IN COMBINATION WITH ANY THIRD PARTY HARDWARE OR SOFTWARE OR SERVICES, PROVIDE UNINTERRUPTED OR ERROR-FREE SERVICE, OR OPERATE WITHOUT RISK OF DATA LOSS.

YOU SHOULD BE AWARE THAT NO RETAILER OR OTHER THIRD PARTY IS AUTHORIZED TO MAKE ANY REPRESENTATIONS ON BEHALF OF MOTOROLA OR TO MODIFY THIS LIMITED WARRANTY.

TO THE EXTENT PERMITTED BY APPLICABLE LAW, MOTOROLA SPECIFICALLY DISCLAIMS ANY STATUTORY WARRANTIES WHICH MIGHT OTHERWISE APPLY.

TO THE EXTENT PERMITTED BY APPLICABLE LAW, MOTOROLA SPECIFICALLY DISCLAIMS LIABILITY, WHETHER IN CONTRACT, TORT OR UNDER OTHER LEGAL

THEORY (INCLUDING NEGLIGENCE), FOR DAMAGES IN EXCESS OF THE PURCHASE PRICE OF THE PRODUCTS, OR FOR ANY INDIRECT, INCIDENTAL, SPECIAL OR CONSEQUENTIAL DAMAGES OF ANY KIND, OR LOSS OF REVENUE OR PROFITS; LOSS OF BUSINESS; BUSINESS INTERRUPTION; LOSS OF OPPORTUNITY; LOSS OF GOODWILL; LOSS OF REPUTATION; LOSS OF, DAMAGE TO, OR CORRUPTION OF INFORMATION, DATA, SOFTWARE OR APPLICATIONS (INCLUDING ANY COSTS ASSOCIATED WITH RECOVERING, PROGRAMMING, OR REPRODUCING ANY INFORMATION, DATA, SOFTWARE OR APPLICATIONS STORED ON OR USED WITH MOTOROLA PRODUCTS); OR OTHER FINANCIAL LOSS ARISING OUT OF OR IN CONNECTION WITH THE ABILITY OR INABILITY TO USE THE PRODUCTS OR SERVICES PROVIDED UNDER THIS LIMITED WARRANTY. BY MAKING A CLAIM UNDER THIS LIMITED WARRANTY YOU ACKNOWLEDGE THAT YOU UNDERSTAND THAT.

SOME JURISDICTIONS DO NOT ALLOW THE LIMITATION OR EXCLUSION OF CERTAIN DAMAGES SO THE DISCLAIMERS MAY NOT LIMIT YOUR LEGAL RIGHTS AGAINST MOTOROLA. THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS. YOU MAY ALSO HAVE OTHER RIGHTS THAT VARY FROM JURISDICTION TO JURISDICTION. THIS LIMITED WARRANTY DOES NOT SEEK TO TAKE THOSE RIGHTS AWAY UNLESS THE APPLICABLE LAW ALLOWS YOU TO CONTRACT OUT OF THOSE RIGHTS.

My Product is defective, what should I do?

Review the online Motorola customer support website at www.motorola.com for troubleshooting information.

If the Product is still not functioning properly after you have followed troubleshooting instructions suggested on this website, please contact Motorola using the contact details provided on the customer support website at motorola.com/support.

If your Product is covered by this Limited Warranty, you may be required to download, or otherwise obtain and accept software updates. You are responsible for any third party data costs incurred when obtaining the downloads.

Before we can provide any further support under this Limited Warranty you must first comply with the warranty processes (1), (2) and (3), repair instructions and accept any necessary software updates.

If the software update does not fix the problem, you will receive instructions on how and where to ship the Product for assessment. We will generally need: (i) proof of purchase; (ii) a written description of the problem; (iii) the name of your mobile network service provider, if applicable; (iv) your address and telephone number. We will only use this information for the purposes of processing your claim under this Limited Warranty.

If the Product is not covered by this Limited Warranty (and you do not have any other statutory rights in your place of usual residence), Motorola will inform you of the availability, price and other conditions applicable to the repair, replacement or refund of the Product.

Index

3

3-way Call 33

A

Access to My Location 88

Accessibility

 Braille reader pairing 103

 Caller ID for Talkback 100

 Explore by Touch 100

 Hear and feel keys 101

 Hearing Aids 102

 Set screen brightness 99

 Set volume or vibrate 98

 Settings 98

 Talkback 99

 TTY 102

 Web Settings 63

 Zoom 101

Accessibility Apps 103

Accounts 38

 Gmail 38

 Google 38

 Google Wallet 50

 Settings 97

Activate Your Phone 3

Activation 2

Active Notifications 15

Airplane Mode 81

Answer a Call 26

App Shortcut 13

Applications 49

 Downloading from the Web 51

 Manage or Remove 51

 Request a Refund 50

Apps 49

 Calculator 72

 Calendar 71

 Chrome Browser" 60

 Clock 72

 Find and install 49

 List 16

 Motorola Assist 79

 Quickoffice 73

 Recent 16

YouTube 58

Automate Actions 18

B

Battery

 Capacity 87

 Charging 87

 Install 1

 Saving power 87

Bluetooth

 Connect New Devices 77

 Disconnect Devices 78

 Reconnect Devices 78

 Rename a Paired Device 78

 Rename the Phone 78

 Turn On or Off 77

Books 56-57

Browser

 Adjust Settings 63

 Connect to the Web 62

 Open Chrome Browser" 60

 Options 62

 Select Links 62

C

Calendar

 Add Events 71

 Manage Events 72

Call from Favorites 25

Camera 66

 Photo Options 67

Capture screen 68

Charge Battery 1

Chrome

 Bookmarks 61

 Clear browsing history 61

 Go to a Webpage 61

 Mobile sites 61

Chrome Browser" 60

Conference Call 33

Connect Phone to Computer 79

Contacts 34

 Add contact 35

 Assign a picture 35

 Assign a ringtone 35

- Call or Text 36
- Edit 35
- Make call from 24
- Make Groups 37
- Move to New Phone 6
- Save a phone number 35
- Share 35
- Sync or Transfer 36

D

- Data 59
- Dictionary 20
- Display Settings
 - Auto-Rotate Screen 85
 - Display Timeout Delay 85
 - Wallpaper 85
- Drag 12

E

- Edit, Share or Delete Photos 67
- Editing
 - Gallery 69
 - Text 21
- Email 41
 - Add a Corporate Sync Account 41
 - Add account 41
 - Add an Email Account 41
 - Compose and Send 42
 - Delete an Email Account 43
 - Delete Messages 43
 - Edit AccountSettings 43
 - Manage Your Inbox 43
 - Refresh an Account 43
 - View and Reply 42
- Email Message
 - Make call from 25
- Emergency Alerts 48
- Emergency Calls 114
- Emergency Numbers 25
- Enhanced 9-1-1 (E 9-1-1) 26
- Enter Text 18
- Entertainment 66

F

- Facebook 47
 - Install 47
 - Sign In 47
- Flick 12

G

- Gestures 12
- Gmail
 - Access Account 39
 - Create account 38
 - Read and Reply to Messages 41
 - Send Message 40
- Google Account
 - Create 38
 - Sign In 39
- Google Drive 75
- Google Maps 52
- Google Now 17
- Google Play 54
 - Books 56-57
 - Find and install apps 49
 - Magazines 58
 - Movies & TV 56
 - Store 49
- Google Wallet Account 50

H

- Hangouts Messaging 48
- Hearing Aid Settings 83
- History
 - Make call from 24
- Home Screen 12
 - Add Items 13
 - Move or remove items 14

I

- In-call Options 32
- Incoming Call
 - Answer 26
 - Reject 26

K

- Keyboard
 - Close Keyboard 14
 - Input 93
 - Settings 93
 - Touchscreen 19

L

- Language and Input Settings 93
- Legal Information 103

Location
Find 53
Get Directions 53
Select Map Mode 53

M

Magazines 58
Manage Your Account 3
Messages 101
Messaging
Hangouts 48
Messaging Types 38
MMS
Send messages 45
MMS and Text Options 46
Model Number 105
Motorola Assist 18
Motorola Migrate 6
Activation 6
Movies & TV
Google Play 56
Music
Copy from computer 55
Macintosh copy 55
My Location 88
My Number 12

N

Notifications 14

O

Other Call Settings 82

P

People 34
Phone
About Phone 103
Dialer 23
Software Update 74
Phone Call Options 32
Phone Calls 23
Conference Call 33
Emergency numbers 25
From email messages 25
From text messages 25
Make calls 23
Receive 26
Using Call Logs 24

Using contacts 24
Using People list 24
Using phone keypad 23

Phone Illustration 1

Phone Layout (illustration) 8

Phone Update

Profile 74

Photos and Videos

Share 70

View 68

Pictures Assigned to Contacts 35

Play Store 49

Find and install apps 49

Power Off 10

Power On 9

Privacy Settings 96

Q

Quickoffice

Create a New File 73

Open a Document 73

Programs 73

Tips 73

R

Register Your Phone on Sprint Prepaid 2

Reject Incoming Call 26

Ringtones Assigned to Contacts 35

S

Save a Phone Number 35

Screenshots 68

Search 16

Send Messages to Your Computer 15

Service and repairs 118

Settings 81

Accounts 97

Add New Accounts 97

Airplane Mode 81

Allow Bluetooth bypass 92

Android Keyboard 94

Apps 88

Automatic Restore (Privacy) 96

Backup Account (Privacy) 96

Backup and Restore (Privacy) 96

Battery Settings 87

Battery Usage 87

Bluetooth 82

- Browser 63
- Call 82
- Credential Storage 93
- Data Backup (Privacy) 96
- Date and Time 98
- Device Administration 92
- Disable the Screen Lock 91
- Display 85
- Email Account 43
- Encryption 92
- Face Unlock 91
- Forgot Pattern or Passcode 91
- Gallery 69
- Google Voice Typing 95
- GPS 88
- Hearing Aids 83
- Hotword 95
- Keyboard and Input 93
- Language 93
- Location Access 88
- Location Sources 52
- Lock Pattern 90
- Lock Slide 90
- Manage Accounts 97
- Managing Apps 88
- Mouse or Trackpad 96
- Notification Sounds 84
- Password Lock 91
- Passwords 92
- Personal Dictionary 93
- Phone Status 103
- PIN Lock 91
- Quick Responses 83
- Reset Your Phone 97
- Ringtone 84
- Running Services (Applications) 88
- Security and Screen Lock 89
- Security Lock Timer 92
- Select Language 93
- Set Up Screen Lock 89
- Share Location 53
- Silence Ringtone 84
- Sound 84
- System Update 98
- Text-to-speech output 95
- Text Message Reply 83
- TTY Mode 83
- Unknown Application Sources 88
- Voice Output 95

- Voice Privacy 83
- Voice Response 95
- Voice Search 95
- Voicemail 82
- VPN 82
- Wi-Fi 82, 88
- Wireless and Network 81
- Setup
 - Screen Lock 89
- Setup Screens 4
- Share contacts 35
- Social Networking Accounts 47
- Sound Settings
 - Adjust Volume 11
 - Audible touch tones 84
 - Ringtone 84
 - System 84
 - Vibrate 84
 - Volume 84
- Sprint Prepaid Payment Options 4
- Status Bar 14
- Status Icons 14
- Storage Settings 86

T

- Talkback Caller ID 100
- Text and Multimedia Messaging 44
- Text Editing 21
- Text Entry 18
- Text Entry Settings 20
- Text Messages
 - Make call from 25
 - New Messages Notification 46
 - Options 46
 - Save and Resume a Draft Message 45
 - Send messages 44
- Three Way Call 33
- Tips and Tricks 55
- Tools 71
- Touch 12
- Touch and Hold 12
- Touchscreen
 - Keyboard 19
 - Navigation 12
 - Turn off 10
 - Turn on 10
- TTY 83, 102
- TTY Mode
 - Turn on or Turn off 83

Turn Device Off 10
Turn Device On 9
Turn Phone Off 9
Turn Phone On 9
Turn Screen Off 10
Turn Screen On 10
Twist 12
Typing 18

Z

Zoom in 12
Zoom out 12

U

Use Gmail 39

V

Video Camera
 Record video 68
Videos
 Record 68
Visual Voicemail 27
 Playback messages 28
 Respond 29
 Review 28
 Set up 28
 Settings 30
Voice
 Commands 74
 Typing 22
Voicemail 27
 Display name 31
 Greeting 31
 Notification 27
 Retrieve messages 27
 Set up 27
 Setup 6
VPN 64
 Add connection 64
 Connect or disconnect 64
 Prepare for connection 64

W

Web 59
Wi-Fi 59
 Find networks in range 60
 Search and Connect 60
Widget 13

Y

Your Number 12